


COLOR VIDEO CAMERA
CAMERA ADAPTOR
1.5 INCH ELECTRONIC VIEWFINDER
ZOOM LENS
TRIPOD ATTACHMENT
CAMERA CABLE

DXC-537
CA-537
DXF-501
VCL-916BY
VCT-14
CCZQ-A2

VOL.2
BLOCK DIAGRAMS
SEMICONDUCTORS
SCHEMATIC DIAGRAMS
BOARD ILLUSTRATIONS
SPARE PARTS

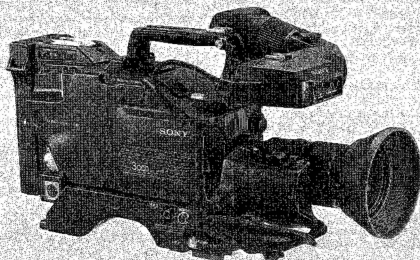

SONY
SERVICE MANUAL

X-RAY RADIATION WARNING

Be sure that parts replacement in the high voltage block and adjustments made to the high voltage circuits are carried out precisely in accordance with the procedures given in this manual.

SAFETY RELATED COMPONENT WARNING

Components identified by shading and **A** marked on the schematic diagrams and parts list are critical to safe operation. Replace these components with SONY parts whose part numbers appear as shown in this manual or in supplements published by SONY.

Warning—This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Important—To insure that the complete system (including this peripheral) is capable of complying with the FCC requirements, it is recommended that the user make sure that the individual equipment of the complete system has a label with one of the following statements.

"This equipment has been tested with a Class A Computing Device and has been found to comply with Part 15 of FCC rules."

—or—

"This equipment complies with the requirements in Part 15 of FCC rules for a Class A Computing Device."

—or equivalent.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a computing device pursuant to Subpart J of Part 15 of FCC Rules.

For the customers in Canada

This apparatus complies with the Class A limits for radio noise emissions set out in radio interference regulations.

Pour les utilisateurs au Canada

Cet appareil est conforme aux normes Class A, pour bruits radioélectriques. Tel que spécifier dans le règlement sur le brouillage radioélectrique.

このマニュアルに記載されている事柄の著作権は当社にあり、説明内容は機器購入者の使用を目的としています。

従って、当社の許可なしに無断で複写したり、説明内容(操作、保守等)と異なる目的で本マニュアルを使用することを禁止します。

The material contained in this manual consists of information that is the property of Sony Corporation and is intended solely for use by the purchasers of the equipment described in this manual.

Sony Corporation expressly prohibits the duplication of any portion of this manual or the use thereof for any purpose other than the operation or maintenance of the equipment described in this manual without the express written permission of Sony Corporation.

Le matériel contenu dans ce manuel consiste en informations qui sont la propriété de Sony Corporation et sont destinées exclusivement à l'usage des acquéreurs de l'équipement décrit dans ce manuel.

Sony Corporation interdit formellement la copie de quelque partie que ce soit de ce manuel ou son emploi pour tout autre but que des opérations ou entretiens de l'équipement à moins d'une permission écrite de Sony Corporation.

Das in dieser Anleitung enthaltene Material besteht aus Informationen, die Eigentum der Sony Corporation sind, und ausschließlich zum Gebrauch durch den Käufer der in dieser Anleitung beschriebenen Ausrüstung bestimmt sind.

Die Sony Corporation untersagt ausdrücklich die Vervielfältigung jeglicher Teile dieser Anleitung oder den Gebrauch derselben für irgendeinen anderen Zweck als die Bedienung oder Wartung der in dieser Anleitung beschriebenen Ausrüstung ohne ausdrückliche schriftliche Erlaubnis der Sony Corporation.

COLOR VIDEO CAMERA

DXC-537



SPECIFICATIONS

Camera Head (DXC-537/537P)

Image device	Interline-transfer CCD, 3-chip	Sync system	Internal
Picture elements	768 × 493 (h/v) (NTSC) 786 × 581 (h/v) (PAL)		External with the BS or VBS signal supplied to the GEN LOCK IN connector (when the CA-537/537P, CA-325A/325AP or CA-325B is used) or the reference signal input to the VTR/CCU/CMA connector from the GEN LOCK IN connector of the CCU-M3/M3P/M7/M7P (when the CA-537/537P is used)
Sensing area	8.8 mm × 6.6 mm (equivalent to a $\frac{2}{3}$ -inch pickup tube)	Horizontal resolution	700 lines (center)
Built-in filters	1: 3200K 2: 5600 K + $\frac{1}{4}$ ND 3: 5600 K 4: 5600 K + $\frac{1}{16}$ ND	Minimum illumination	13 lux with F1.8, +18 dB 7.5 lux with F1.4, +18 dB
Lens mount	Bayonet mount	Sensitivity	2000 lux with F8.0 (Typical) at 3200 K
Signal system	EIA standards, NTSC color system (for DXC-537) CCIR standards, PAL color system (for DXC-537P)	Gain selection	0 dB, 9 dB or 18 dB, selectable
Scanning system	525 lines, 2:1 interlace, 30 frames/sec. (NTSC) 625 lines, 2:1 interlace, 25 frames/sec. (PAL)		
Scanning frequency	Horizontal: 15.734 kHz (NTSC) 15.625 kHz (PAL) Vertical: 59.94 Hz (NTSC) 50.00 Hz (PAL)		

SONY®

SERVICE MANUAL

Video output Composite signal:
1.0 Vp-p, sync negative,
75Ω unbalanced
Y/C separate signal:
Y: 1.0 Vp-p, sync negative,
unbalanced
C: burst level 0.286 Vp-p (NTSC)
0.3 Vp-p (PAL)
without sync

Signal to noise ratio
62 dB (NTSC, Typical)
60 dB (PAL, Typical)

Registration 0.05% for Zone I
0.05% for Zone II
0.05% for Zone III

Inputs/Outputs VIDEO OUT: BNC-type
LENS: $\frac{2}{3}$ -inch lens connector (12-pin)
VF: 8-pin
REMOTE: 10-pin

Power requirements
12 V DC

Power consumption
9.5 W

Operating temperature
-10°C to +45°C (14°F to 113°F)

Storage temperature
-20°C to +60°C (-4°F to 140°F)

Weight 2.2 kg (4 lb 14 oz)

Dimensions See the illustrations below.
Unit: mm (inches)

Carrying Case (LC-421)

Weight About 7.7 kg (15 lb 7 oz)
Dimensions About 790 × 440 × 340 mm (w/h/d)
(31 $\frac{1}{8}$ × 17 $\frac{3}{8}$ × 13 $\frac{1}{2}$ inches)

Accessories Supplied

CC2Q-A2 camera cable (with Z-type 26-14-pin connectors)
(supplied with the DXC-537K/537PK/537L/537PL only)
(1)

VCL-916BY zoom lens (supplied with the DXC-537K/537PK
only) (1)

DXF-501/501CE electronic viewfinder (supplied with the
DXC-537K/537PK/537L/537PL only) (1)

LC-421 carrying case (supplied with the DXC-537K/537PK/
537L/537PL only) (1)

VCT-14 tripod attachment (supplied with the DXC-537K/
537PK/537L/537PL only) (1)

Lens cap (1)

Chart for flange focal length adjustment (1)

Design and specifications are subject to change without
notice.

Dimensions

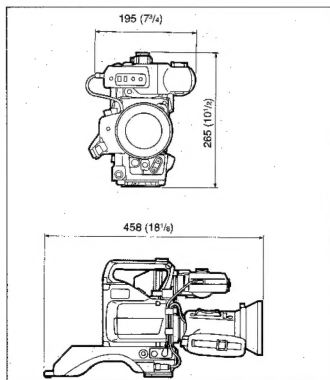


TABLE OF CONTENTS

A. BLOCK DIAGRAMS

Overall.....	A-1
CCD Block Diagram.....	A-5
PR-143 Block Diagram.....	A-9
IE-28 Block Diagram.....	A-12
SG-171 Block Diagram.....	A-15
EN-95 Block Diagram.....	A-18
AT-59 Block Diagram.....	A-21

B. SEMICONDUCTOR

Semiconductor.....	B-1
--------------------	-----

C. SCHEMATIC DIAGRAMS AND BOARD ILLUSTRATIONS

PA-111	}C-3
PA-112		
PA-113		
DR-110		
CN-438		

PR-143.....	C-10
IE-28.....	C-26
SG-171.....	C-36
EN-95.....	C-46
AT-59.....	C-56


CN-439	}C-68
MB-307		
SW-414		
SW-415		

D. SPARE PARTS

Parts Information.....	D-1
CCD Block.....	D-3
Chassis (1) Block.....	D-5
Chassis (2) Block.....	D-9
Packing Material and Accessories.....	D-11
Electrical Parts.....	D-13

SECTION A BLOCK DIAGRAMS

OVERALL BLOCK

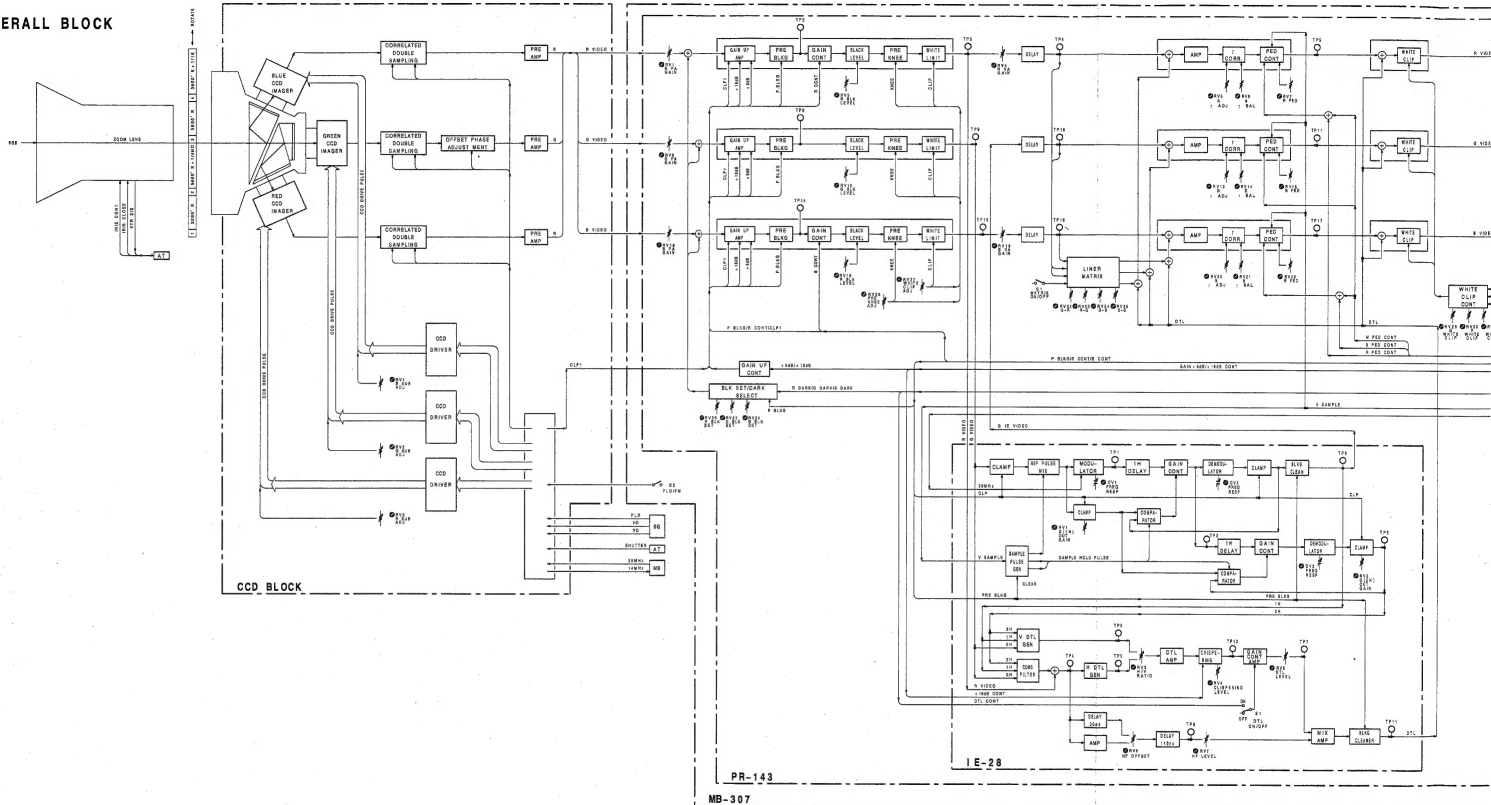

DXC-537 (J,U,C)
DXC-537P(E,K)

A-1

A-2

A

B

C


D

E

F

G


H

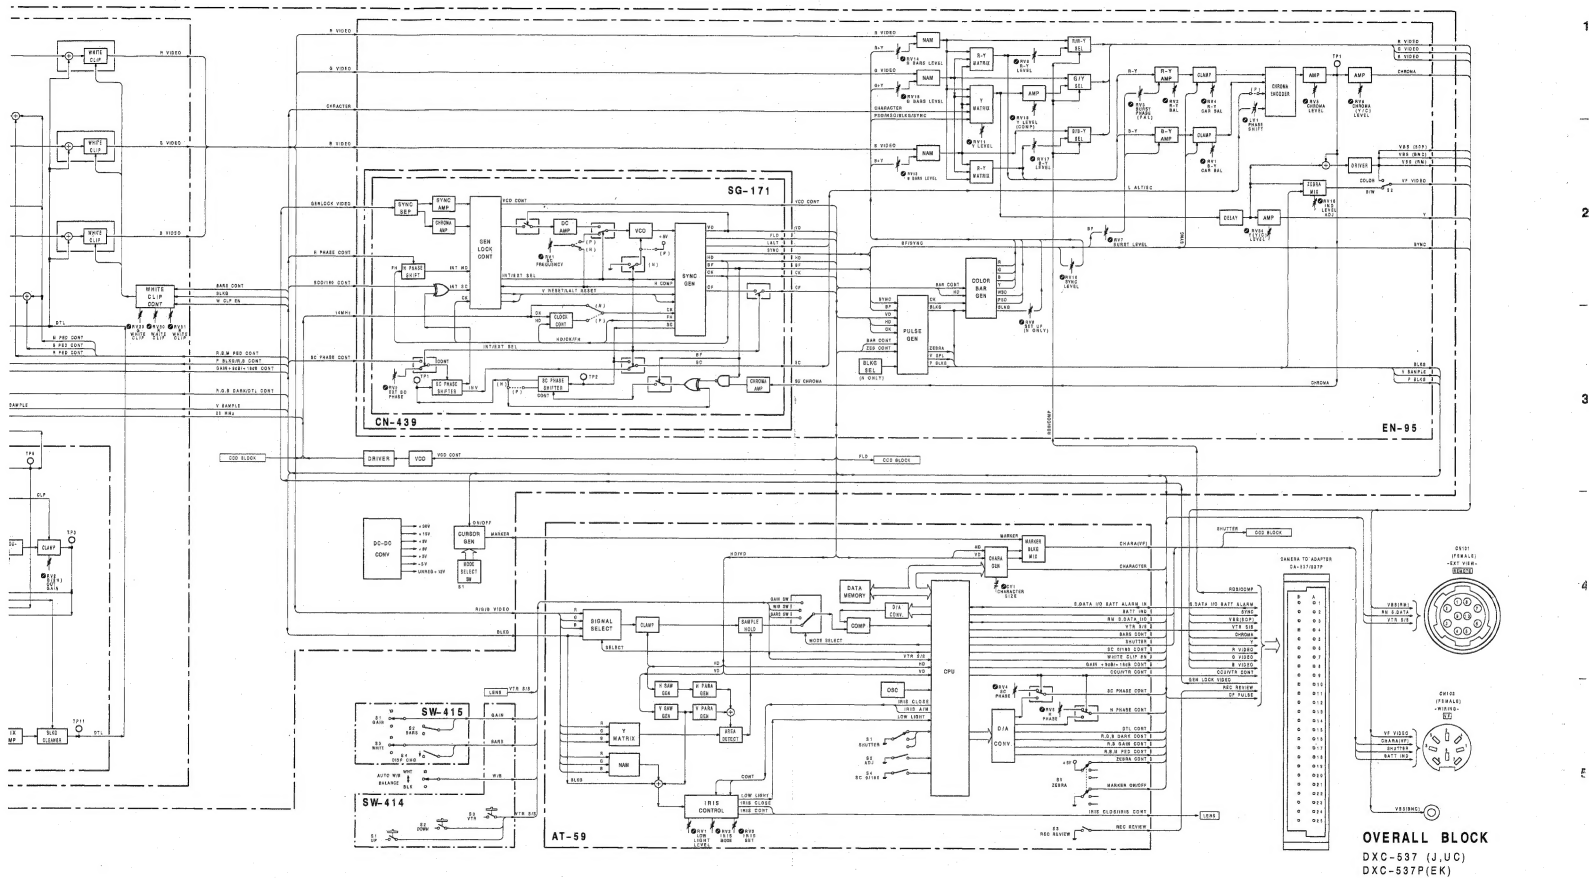

OVERALL BLOCK
DXC-537 (JUC)
DXC-537P(EK)


B-DXC537-OABLOCK/M

PR-143 BLOCK

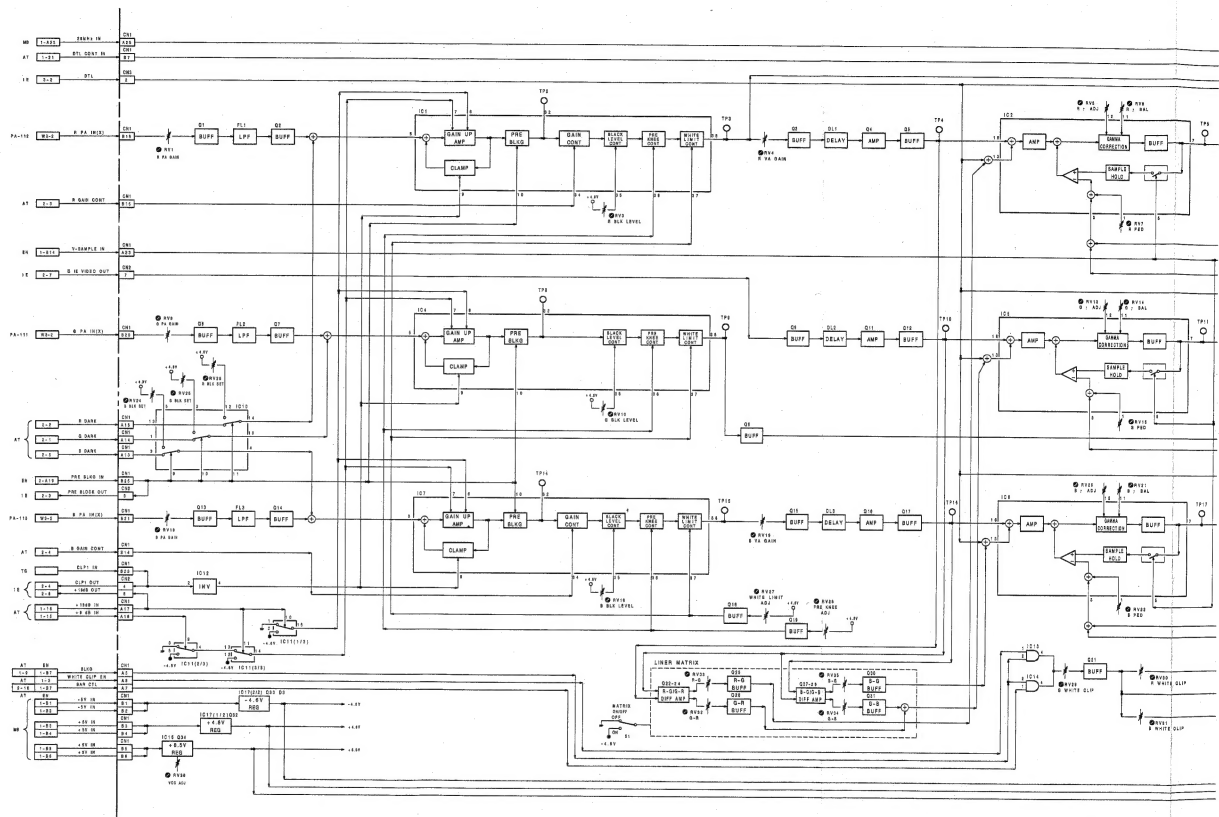DXC-537 (J,U,C)
DXC-537P(EK)


A-9

A-10

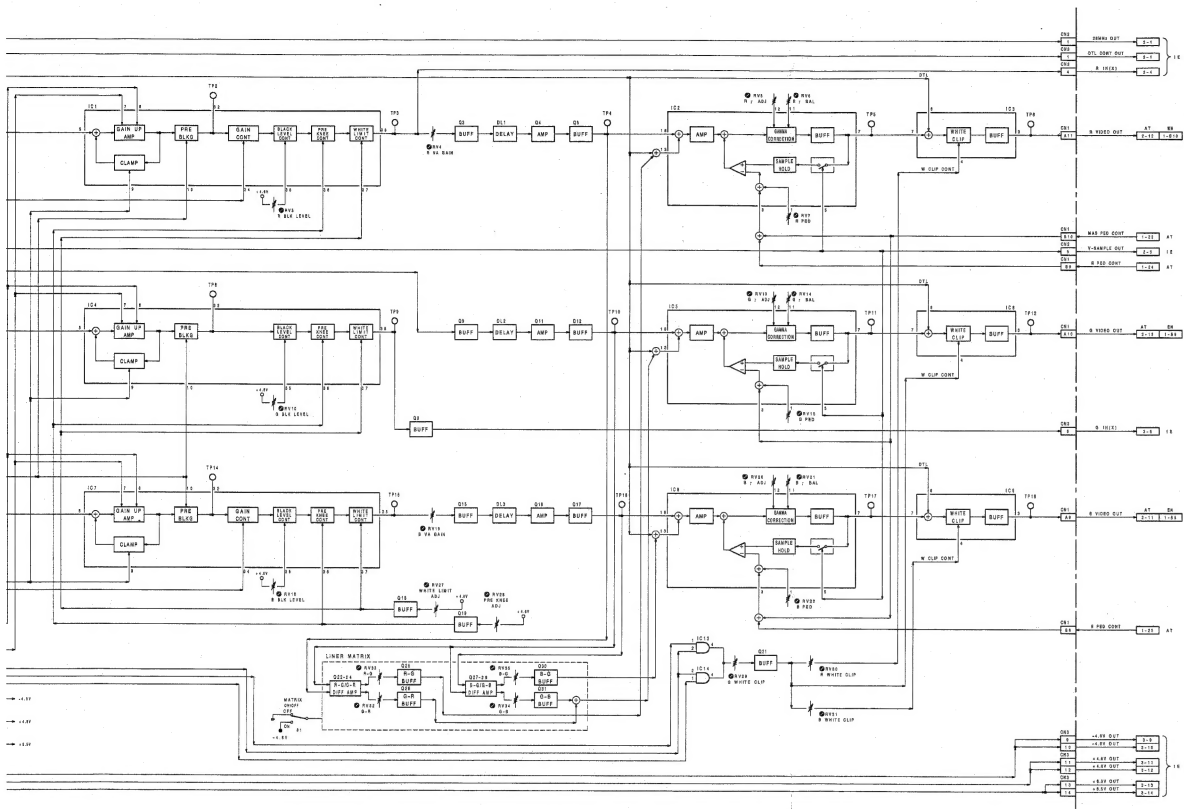

PR-143 BLOCK
DXC-537 (JUC)
DXC-537P (EK)

IE-28 BLOCK

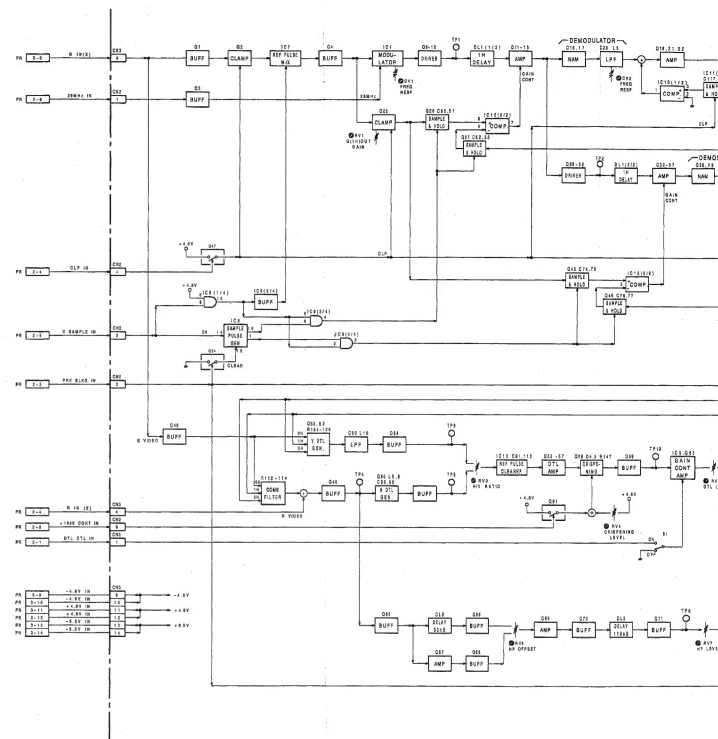


A-12

B-DXC537-IE28BLOCK/M

A-13

IE-28 BLOCK




DXC-537P (EK)

A-14

1

SG-171 BLOCK

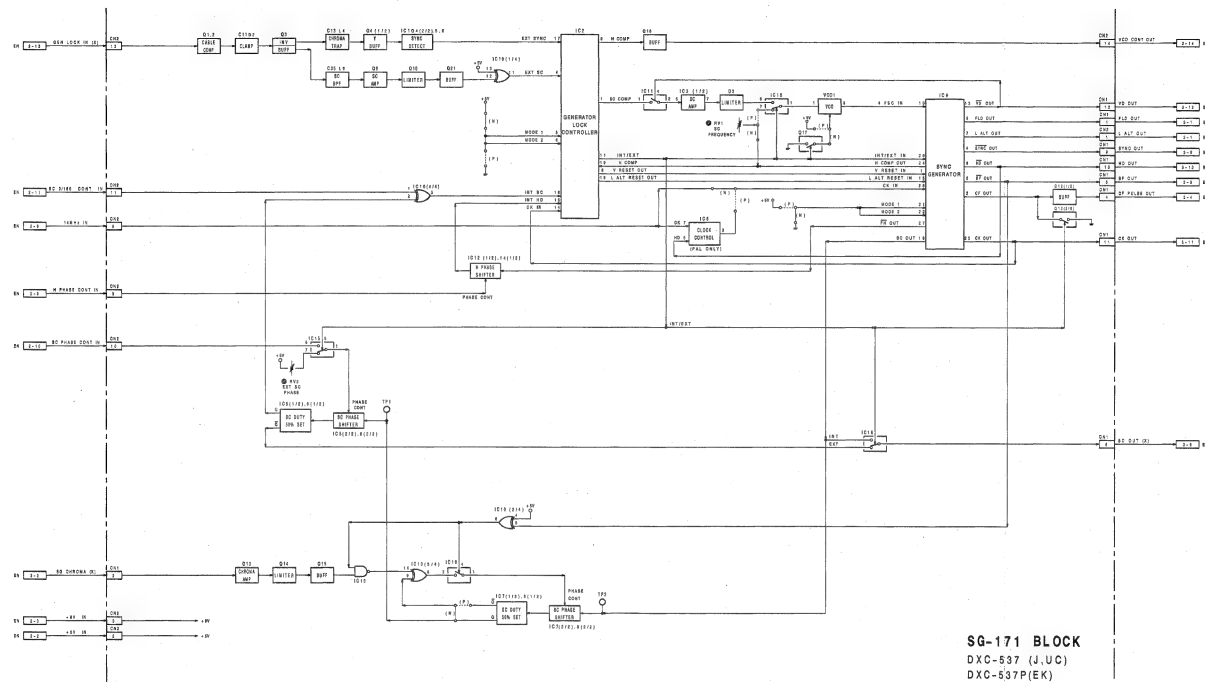


SG-171 BLOCK
 DXC-537 (J,UC)
 DXC-537P(EK)

DXC-537 (J,UC)
 DXC-537P(EK)


A-15

A-16

B-DXC537-SG171BLOCK/M

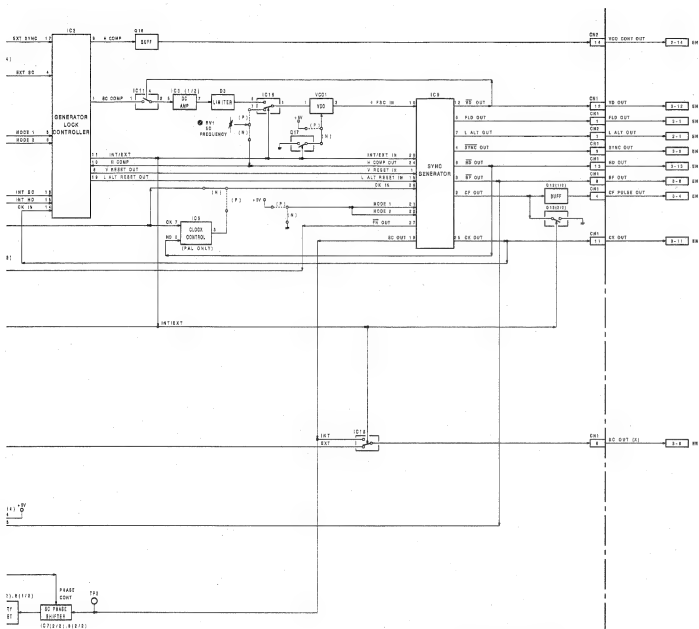

SG-171 BLOCK
DXC-537 (JUC)
DXC-537P(EK)



A-16

B-DXC537-SG171BLOCK/M

A-17

E

F

G

H


I


J

K

L

EN-95 BLOCK

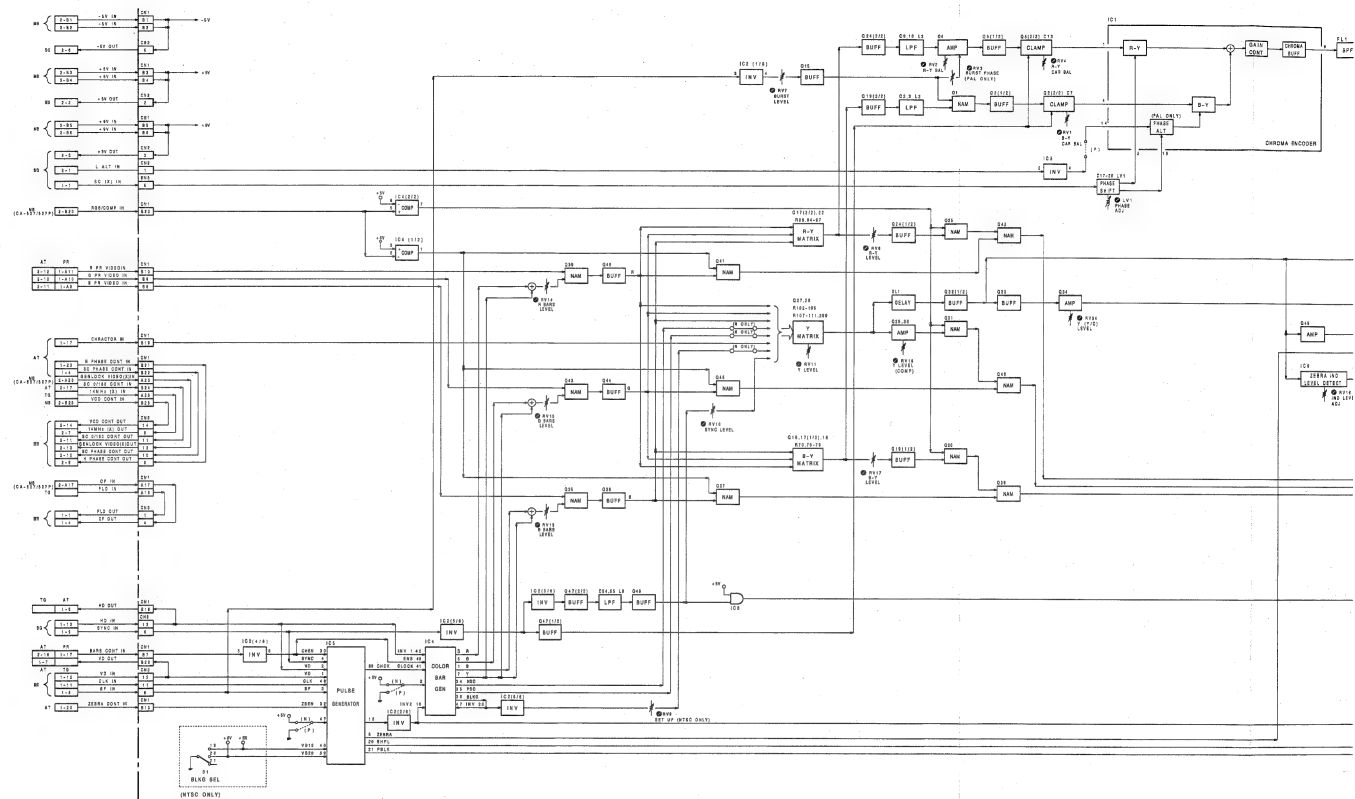


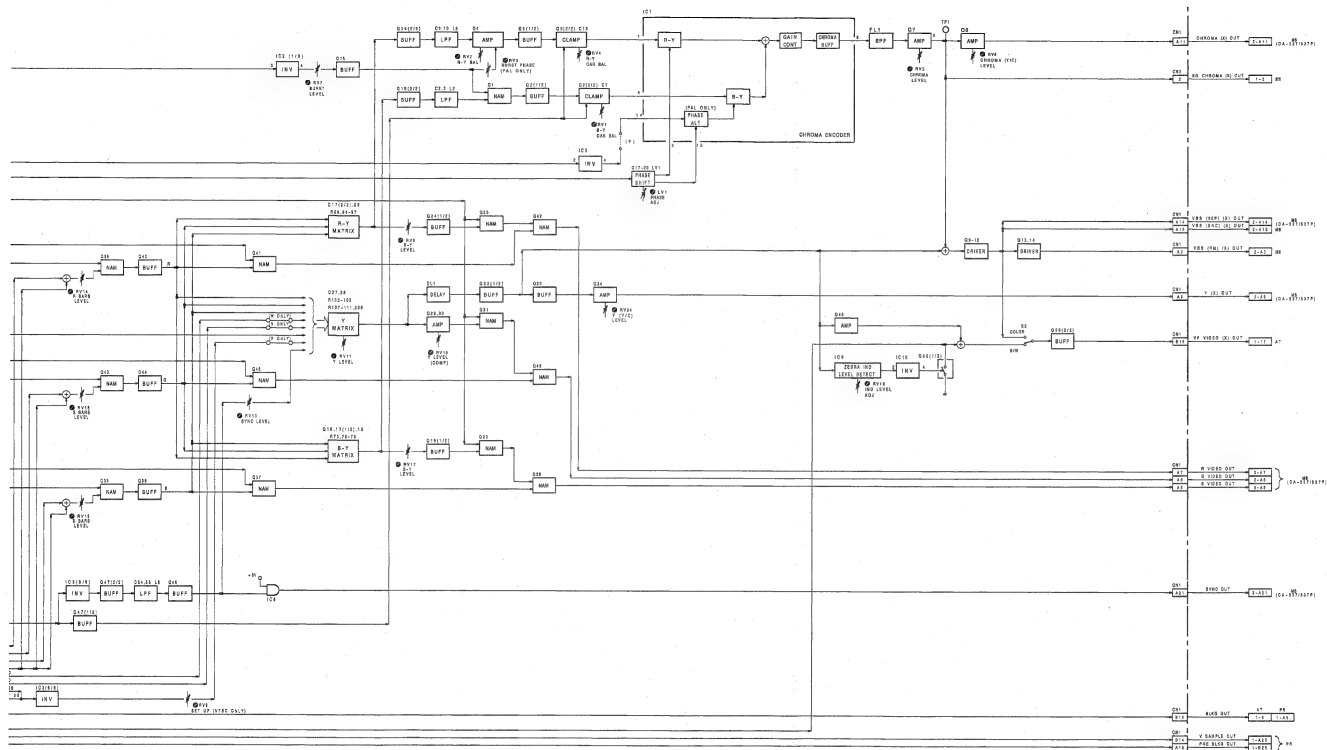

EN-95 BLOCK
DXC-537 (J,U,C)
DXC-537P (E,K)


DXC-537 (J,U,C)
DXC-537P (E,K)

DXC-537 (J, U C)
DXC-537P (E K)

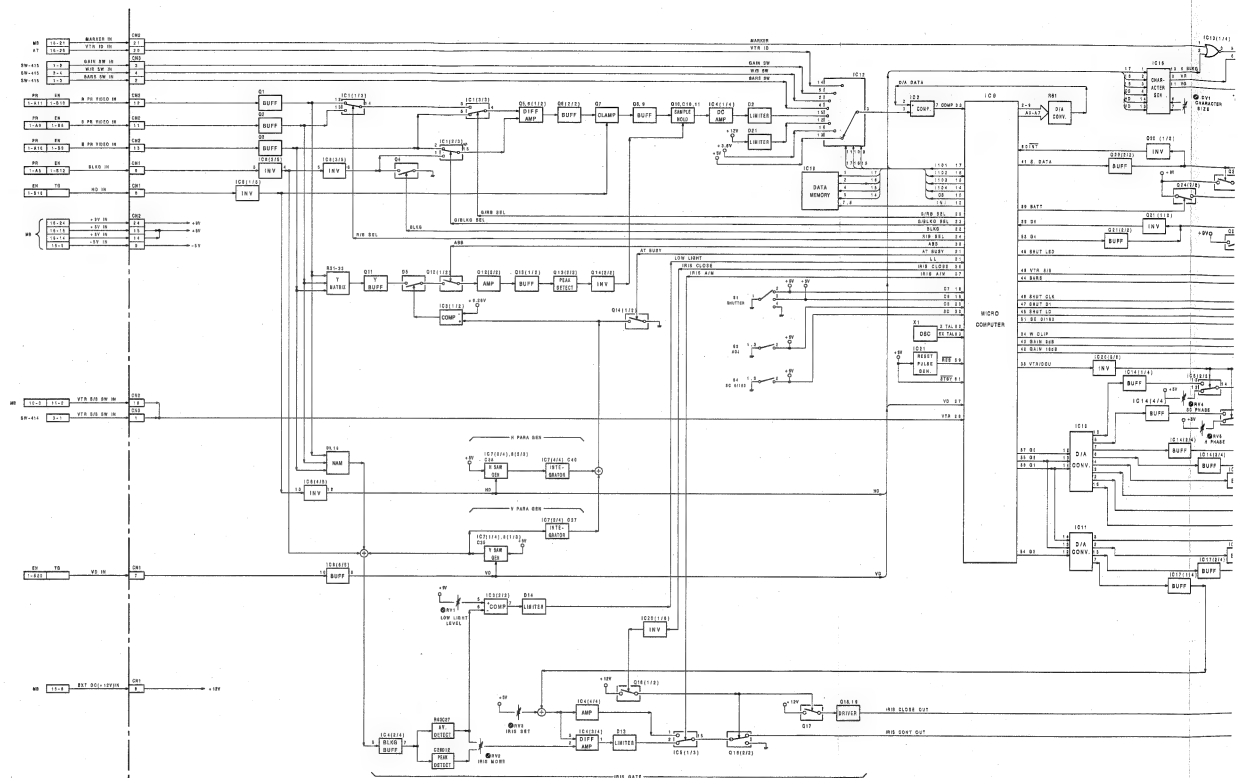

A-22

H



SECTION B

SEMICONDUCTOR

The circuit diagram of IC is obtained from the IC data book published by the manufacturer.

TYPE	PAGE	TYPE	PAGE
1S2835	B-2	M5236ML	B-9
1S2836	B-2	M6M80011L	B-9
1S2837	B-2	MA152WK	B-2
1SS123	B-2	MB7116H	B-9
1SS226	B-2	MB88342PF	B-9
1SS303	B-2	MC14001BF	B-9
1SS97	B-2	MC14051BF	B-9
		MC14053BF	B-10
2SA1162	B-2	MC14069UBF	B-10
2SA1213	B-2	MC74HC86F	B-10
2SA1226	B-2		
2SA1462	B-2	NJM319M	B-10
2SA1610	B-2		
2SA1611	B-2	RC1496M	B-10
		RD ? ? M	B-2
2SB1123	B-2		
2SB1295	B-2	SC7504F	B-10
2SB798	B-2	SC7532F	B-10
2SB799	B-2		
2SB815	B-2	SN74HC00NS	B-10
		SN74HC04NS	B-3
2SC1009A	B-2	SN74HC86NS	B-10
2SC1623	B-2	SN74LS123NS	B-11
2SC2757	B-2		
2SC2873	B-2	TC4017BF	B-11
2SC4177	B-2	TC4081BF	B-11
		TC4586F	B-11
2SD1048	B-2	TC45U69F	B-11
2SD1623	B-2	TC4W53F	B-11
2SD999	B-2		
		TC74HC123AF	B-12
2SK94	B-2	TC74HC4538AF	B-12
3SK163	B-2	TC7500F	B-12
		TC7504F	B-12
74AC04SJ	B-3	TC7508F	B-10
		TC7532F	B-10
CX22017	B-3		
CX7968A	B-3	TL062CPS	B-12
CX7969	B-4	TL064CNS	B-12
		TL082CPS	B-12
CXD1216M	B-5		
CXD1217M	B-5	uPC311G2	B-12
CXD1361M	B-7	uPC358G2	B-12
CXD8154M	B-7	uPC812G2	B-12
		uPD8142G-101	B-12
HD6305Y0E27F	B-8		
HSM88AS	B-2	XN4601	B-2
HZ ? CLL	B-2	XN6401	B-2
		XN6435	B-2
LM2903M	B-8	XN6501	B-2
LM35DZ	B-8	XN6534	B-2

DIODE, TRANSISTOR

(SCALE 4/11)
TOP VIEW



1S2835
1S2836
1S5303

(SCALE 4/11)
TOP VIEW



1S2837
MA152WK

(SCALE 4/11)
TOP VIEW



1S5123
1S5226
H5M88AS



1S597



HZ ? CLL

(SCALE 4/11)
TOP VIEW



RD ? ? M

(SCALE 4/11)
TOP VIEW



2SA1162
2SA1226
2SA1462
2SA1610
2SA1611
2SB1295
2SB815

(SCALE 4/11)
TOP VIEW



2SA1213
2SB1123
2SB798
2SB799

(SCALE 4/11)
TOP VIEW



2SC1009A
2SC1623
2SC2757
2SC4177
2SD1048

TOP VIEW (SCALE 4/11)



2SC2873
2SD1623
2SD999

TOP VIEW (SCALE 4/11)



2SK94

(SCALE 3/11)
(WIDE)



3SK163

(SCALE 6/11)
TOP VIEW



XN4601



(SCALE 6/11)
TOP VIEW



XN6401
XN6435




(SCALE 6/11)
TOP VIEW



XN6501
XN6534



74AC04SJ (NS) FLAT PACKAGE
SN74HC04NS (TI) FLAT PACKAGE
C-MOS HEX INVERTER





NOTE :

TYPE	V _{DD}
74ACT04 TYPES 74HCT04 TYPES	+5V
TC74AC04F	+2 to +5.5V
TC74ACT04F	+4.5 to +5.5V
OTHER TYPES	+2 to +6V

CX22017 (SONY)


VIDEO SIGNAL PROCESSOR
- TOP VIEW -

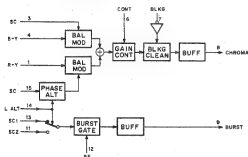

CX7968A (SONY)

C-MOS COLOR BAR GENERATOR

- TOP VIEW -

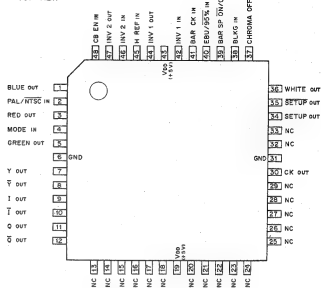

INPUT					FUNCTION
PL/NTSC	MODE	EBU/95%	BAR SP		
0	0	0	0	0	E1&2 COLOR BAR
0	0	0	1	0	FULL FIELD COLOR BAR
0	0	1	0	0	INHIBIT
0	0	1	1	0	INHIBIT
0	1	0	0	0	E1&2 COLOR BAR
0	1	0	1	0	FULL FIELD COLOR BAR
0	1	1	0	0	EMPT COLOR BAR
0	1	1	1	0	COLOR BAR + YBAR
1	0	0	0	0	95% COLOR BAR
1	0	0	1	0	INHIBIT
1	0	1	0	0	95% COLOR BAR
1	0	1	1	0	INHIBIT
1	1	0	0	0	95% COLOR BAR
1	1	0	1	0	COLOR BAR + YBAR
1	1	1	0	0	EBU COLOR BAR

0 : LOW LEVEL
1 : HIGH LEVEL

Q COLOR BAR PATTERN

EIAJ COLOR BAR				INTS	
GRAY		YELLOW		CYAN	
GREEN		MAGENTA		RED	
BLUE					
- I	WHITE	+ Q	BLACK		

COLOR BAR + Y BAR

WHITE	WHITE
GRAY	YELLOW
GRAY	CYAN
GRAY	GREEN
GRAY	MAGENTA
GRAY	RED
GRAY	BLUE
BLACK	BLACK

FULL FIELD COLOR BAR

GRAY
YELLOW
CYAN
GREEN
MAGENTA
RED
BLUE

95% COLOR BAR


WHITE
YELLOW
CYAN
GREEN
MAGENTA
RED
BLUE
BLACK

SMPTE COLOR BAR


GRAY	YELLOW		CYAN	GREEN	MAGENTA	RED	BLUE
BLUE	BLACK	WHITE	BLACK	CYAN	BLACK	GRAY	
-1	WHITE	+0	BLACK	BLACK	BLACK	BLACK	BLACK

EBU COLOR BAR

WHITE
YELLOW
CYAN
GREEN
MAGENTA
RED
BLUE
BLACK

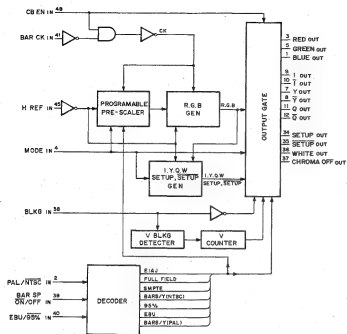

CX7969 (SONY)
C-MOS PULSE GENERATOR
- TOP VIEW -

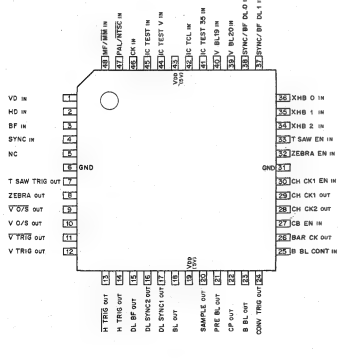

1. SYSTEM DESIGNATION

INPUT	SYSTEM
PAL/NTSC IN	PAL, SECAM
0	NTSC, PALM

2. TYPE OF TUBE

INPUT	FUNCTION
MF/MM IN	MAG-STA TUBE
0	IMAG-MASTUBE

3. V. BLKG WIDTH (NTSC ONLY)

INPUT	V. BLKG WIDTH
V. BL 19 V. BL 20	
1	19H
0	20H
0	21H


4. H. BLKG WIDTH


INPUT	BLKG WIDTH (μS)	NTSC	PAL
XHB2(XHB1)XHB0			
1 1 1	10.27	11.49	
1 1 0	10.38	11.56	
1 0 1	10.41	11.63	
1 0 0	10.48	11.70	
0 1 1	10.55	11.77	
0 1 0	10.62	11.84	
0 0 1	10.69	11.91	
0 0 0	10.76	11.98	

5. DELAY TIME


INPUT	DELAY TIME (ns)	DL SYNC 1	DL SYNC 2	DL BF
SYNC/MF/DL SYNC/BF DL 2				
1	140	210	140	
1	0	210	280	210
0	0	630	700	630
0	0	700	770	700

1: HIGH LEVEL
0: LOW LEVEL
X: DON'T CARE

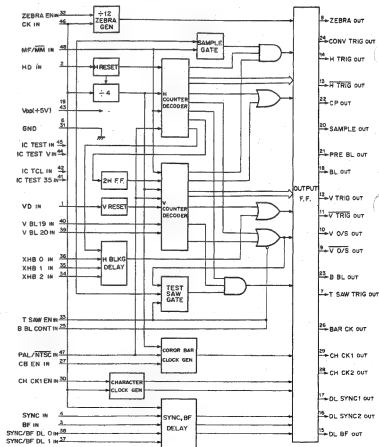

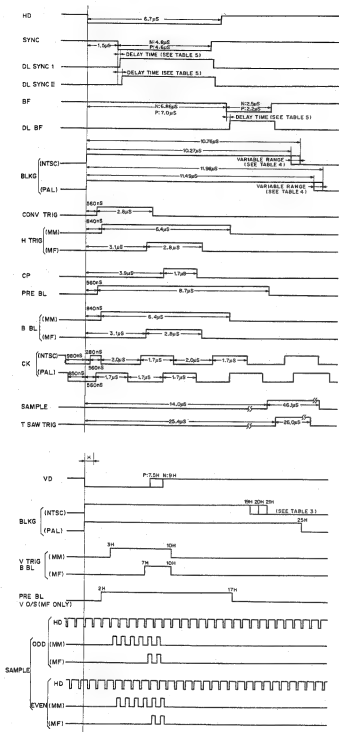


CXD1216M (SONY) FLAT PACKAGE
CMOS GENLOCK DRIVER
— TOP VIEW —

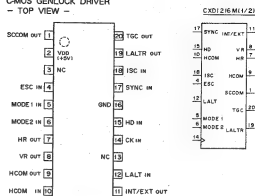

INPUT	MODE1	MODE2	MODE	SYSTEM
0	0	0	M1	PAL-VBS
1	0	1	M2	PALM-VBS
0	1	0	M3	PAL-SECAM-VBS/LALT
1	1	1	M4	NTSC-VBS/NTSC-VBS/SECAM-VBS/LALT


0: LOW LEVEL
1: HIGH LEVEL

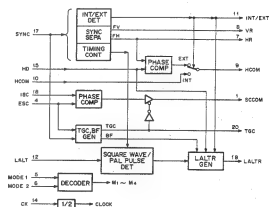

INPUT
CK : 4fsc CLOCK INPUT
ESC : SC/COLOR BURST
HCOM : PHASE COMPARE FROM CXD1217
HD : H DRIVE FROM CXD1217
ISC : SUBCARRIER FROM CXD1217
LALT : LALT FROM REFERENCE SIGNAL GENERATOR
MODE1,2 : SYSTEM SELECT
SYNC : SYNC FROM REFERENCE SIGNAL GENERATOR

OUTPUT
HCOM : PHASE COMPARE HR WITH HD
HR : 1/4 OF SYNC SEPARATE
INT/EXT : INTERNAL/EXTERNAL SPECIFIED
LALTR : LINE CHANGE RESET
SCODM : PHASE COMPARE ESC WITH ISC
TSC : TRISTATE CONTROL
VR : 1/4 OF SYNC SEPARATE


CXD1217M (SONY) FLAT PACKAGE
CMOS SYNC GENERATOR
- TOP VIEW -

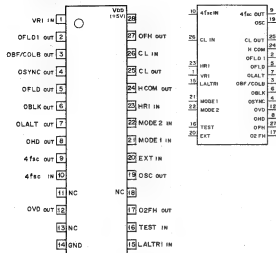


SYSTEM	4fsc	CLOCK
NTSC	910K	810K
PAL	1125K-25	805K
PALM	905K	810K
SECAM	---	905K

INPUT	MODE1	MODE2	SYSTEM
0	0	0	NTSC
0	1	0	SECAM
1	0	0	PALM
1	1	1	PAL


0: LOW LEVEL
1: HIGH LEVEL

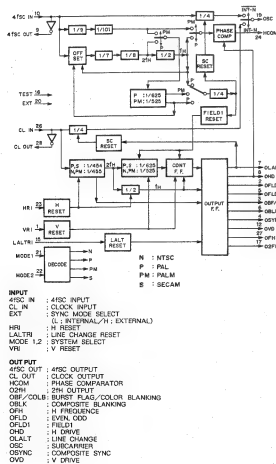


(NTSC, PALM)

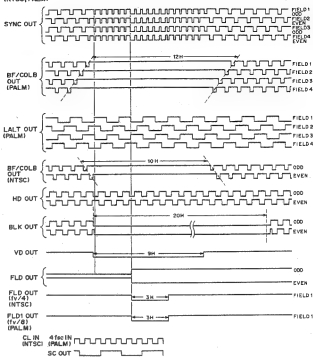


(PAL, SECAM)

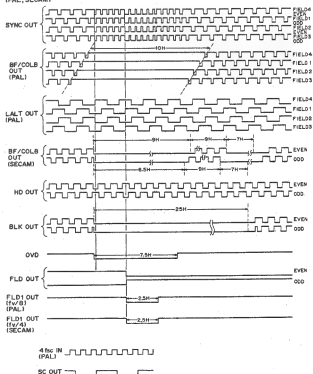

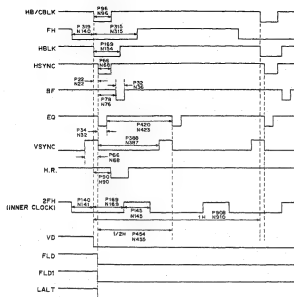


P: PAL, SECAM
N: NTSC, PALM




CXD1351M (TI) FLAT PACKAGE
CLOCK CONTROLLER
- TOP VIEW -

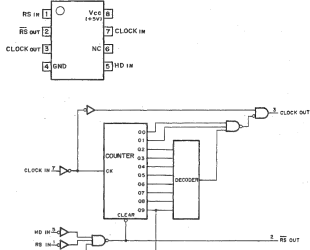

CXD8154M (SONY)
C-MOS GATE ARRAY
- TOP VIEW -

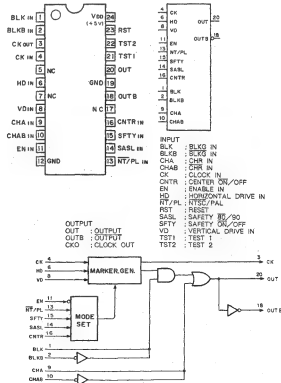


HD63050E27F (HITACHI)
CMOS 8-BIT MICROPROCESSOR UNIT
— TOP VIEW —

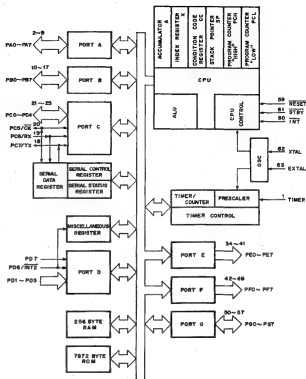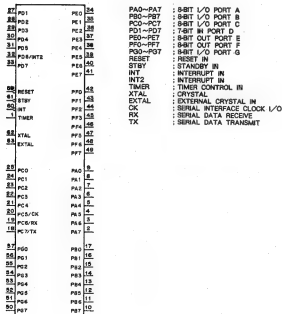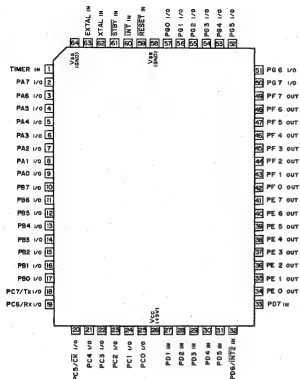


LM2903M (RAYTHEON) FLAT PACKAGE
DUAL VOLTAGE COMPARATORS
— TOP VIEW —




LM35DZ (NS)
BIPOLAR TEMPERATURE SENSOR

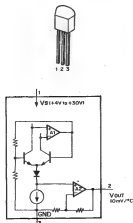


M5236ML (MITSUBISHI)
ADJUSTABLE VOLTAGE REGULATOR



M6M80011L (MITSUBISHI)
1k (84x16)-BIT ERASABLE PROM
- SIDE VIEW -


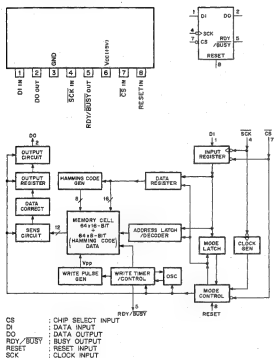


MB7116H (FUJITSU)
2K (512x4)-BIT PROM WITH 3-STATE OUTPUTS
- TOP VIEW -

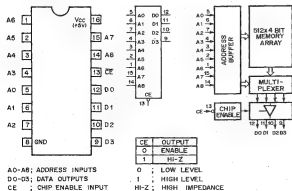


DXC-537 (J, UC)
DXC-537P (EK)


MB88342PF (FUJITSU) FLAT PACKAGE
CMOS 8-BIT D/A CONVERTER
- TOP VIEW -

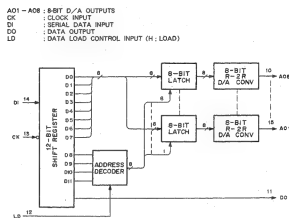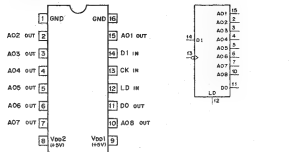


MC14001BF (MOTOROLA) FLAT PACKAGE
CMOS 2-INPUT NOR GATE
- TOP VIEW -



MC14051BF (MOTOROLA) FLAT PACKAGE
CMOS 8-CHANNEL ANALOG MULTIPLEXER/DEMULTIPLEXER
- TOP VIEW -

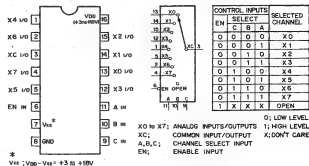


TC74HC123AF (TOSHIBA) FLAT PACKAGE

CMOS DUAL RETRIGGERABLE MONOSTABLE MULTIVIBRATOR
- TOP VIEW -

INPUT		OUTPUT	
A	B	Q	Q̄
0	X	X	0
1	1	X	0
1	X	0	1
1	1	0	1

0: LOW LEVEL
1: HIGH LEVEL
X: DON'T CARE


OUTPUT PULSE WIDTH = 0.46CR





TL062CPS (TI) FLAT PACKAGE

OPERATIONAL AMPLIFIER
(JFET INPUT)
- TOP VIEW -


TL064CNS (TI) FLAT PACKAGE

OPERATIONAL AMPLIFIER
(J FET INPUT)
- TOP VIEW -

TC74HC4538AF (TOSHIBA) FLAT PACKAGE

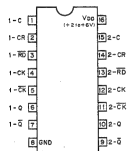
CMOS DUAL RETRIGGERABLE/NON-RETRIGGERABLE MONOSTABLE MULTIVIBRATOR
- TOP VIEW -

OUTPUT PULSE WIDTH = h · C · R



NON-RETRIGGERABLE M.M.V.

RETRIGGERABLE M.M.V.




TL062CPS (TI) FLAT PACKAGE

OPERATIONAL AMPLIFIER
(J FET INPUT)
- TOP VIEW -

uPC811G2 (NEC) FLAT PACKAGE


VOLTAGE COMPARATOR
- TOP VIEW -uPC358G2 (NEC) FLAT PACKAGE
DUAL OPERATIONAL AMPLIFIERS
- TOP VIEW -uPC812G2 (NEC) FLAT PACKAGE
OPERATIONAL AMPLIFIER (JFET INPUT)
- TOP VIEW -

TC7500F (TOSHIBA) FLAT PACKAGE

CMOS 2-INPUT NAND GATE
- TOP VIEW -


0: LOW LEVEL
1: HIGH LEVEL

TC7508F (TOSHIBA) FLAT PACKAGE


CMOS 2-INPUT AND GATE
- TOP VIEW -

0: LOW LEVEL
1: HIGH LEVEL

μPD6142G-101 (NEC) FLAT PACKAGE
CMOS 8-BIT SERIAL INPUT CHARACTER DISPLAY
- TOP VIEW

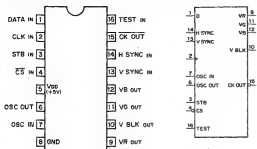


DI: DATA INPUT
CK OUT: EQUAL TO OUTPUT OF OSC OUT
CLK: CLOCK INPUT
CS: CHIP SELECT INPUT
H SYNC: H SYNC INPUT
OSC IN, OUT: EXTERNAL TERMINAL FOR OSC
STB: STROBE INPUT
TEST: TEST CLOCK INPUT
VG: BLUE CHARACTER DATA OUTPUT
V BLK: V BLANKING OUTPUT
VG: GREEN CHARACTER DATA OUTPUT
VR: RED CHARACTER DATA OUTPUT
V SYNC: V SYNC INPUT

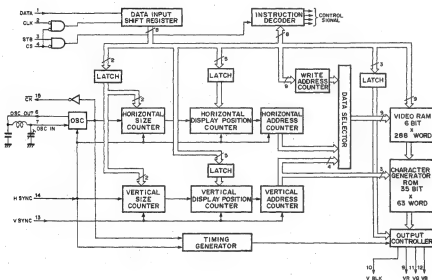


SECTION C

SCHEMATIC DIAGRAMS AND BOARD ILLUSTRATIONS

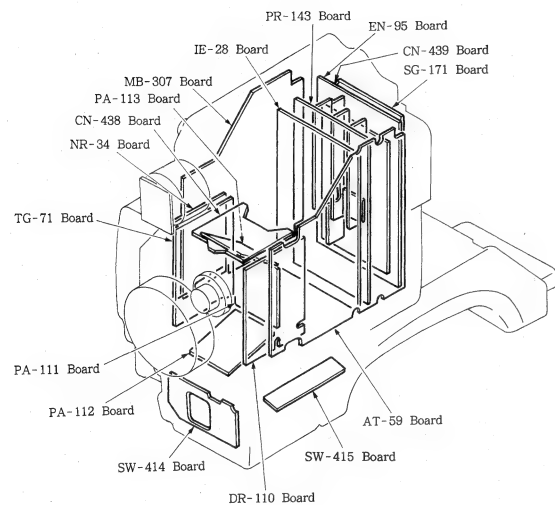



PA-111 BOARD

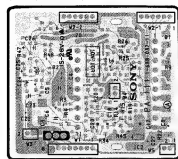

1-638-037-11 COMPONENT SIDE



1-638-037-11 SOLDERING SIDE

DR-110 BOARD

DR-110(1-638-041-11)

CN1	B-1	L1	A-1
CN2	B-1		
CN3	B-2	Q1	A-1
CN4	B-3	Q2	A-1
CN5	A-3	Q3	A-1
		Q4	A-1

D1	A-1	Q5	A-1
D2	A-1	Q6	A-2
D3	A-2	Q7	A-3
D4	B-2	Q8	B-3
D5	B-3	Q9	A-2
D6	A-1	Q10	A-2
D7	B-1		
D8	B-2	Q11	A-2
D9	B-2	Q12	A-2
D10	A-2	Q13	A-3
D11	A-1	Q14	A-3
D12	A-1	Q15	A-3
D13	B-2	Q16	A-3
D14	B-2	Q17	A-3
D19	A-1	Q18	A-3
D20	B-1	Q19	A-3
D21	B-2	Q20	A-3
D23	B-2	Q21	A-3
D24	B-2		
D25	B-2	RV1	A-3
D26	B-3	RV2	A-3
D27	B-3	RV3	A-3
D28	B-3		

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2


IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2


IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

PA-112 BOARD

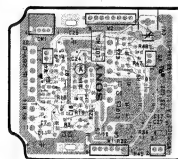

1-638-038-11 COMPONENT SIDE

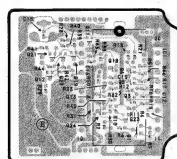


1-638-038-11 SOLDERING SIDE


PA-113 BOARD




1-638-039-11 COMPONENT SIDE

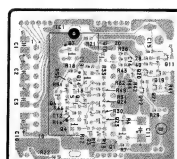

1-638-039-11 SOLDERING SIDE

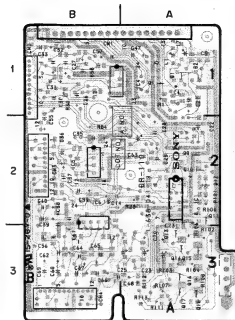

1-638-041-11 COMPONENT SIDE

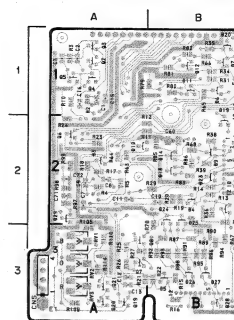

1-638-042-11 SOLDERING SIDE

DR-110(1-638-041-11)

CN1	B-1	L1	A-1
CN2	B-1		
CN3	B-2	Q1	A-1
CN4	B-3	Q2	A-1
CN5	A-3	Q3	A-1
		Q4	A-1
		Q5	A-1

D1	A-1	Q6	A-2
D2	A-1	Q7	A-3
D3	A-2	Q8	B-3
D4	B-2	Q9	A-2
D5	B-3	Q10	A-2
D6	A-1		
D7	B-1	Q11	A-2
D8	B-2	Q12	A-2
D9	B-2	Q13	A-3
D10	A-2	Q14	A-3
D11	A-1	Q15	A-3
D12	A-1	Q16	A-3
D13	B-2	Q17	A-3
D14	B-2	Q18	A-3
D19	A-1	Q19	A-3
D20	B-1	Q20	A-3
D21	B-2	Q21	A-3
D23	B-2		
D24	B-2	RV1	A-3
D25	B-2	RV2	A-3
D26	B-3	RV3	A-3
D27	B-3		
D28	B-3		

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2


IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2


IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

IC1	A-2
IC4	A-2
IC5	B-2
IC6	B-2

CN-438 BOARD

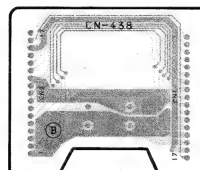

1-638-043-11 COMPONENT SIDE

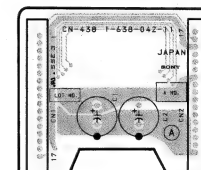


1-638-042-11 SOLDERING SIDE



CCD BLOCK

TG-71 BOARD
PA-111 BOARD
PA-112 BOARD
PA-113 BOARD
NR-34 BOARD
DR-110 BOARD
CN-438 BOARD

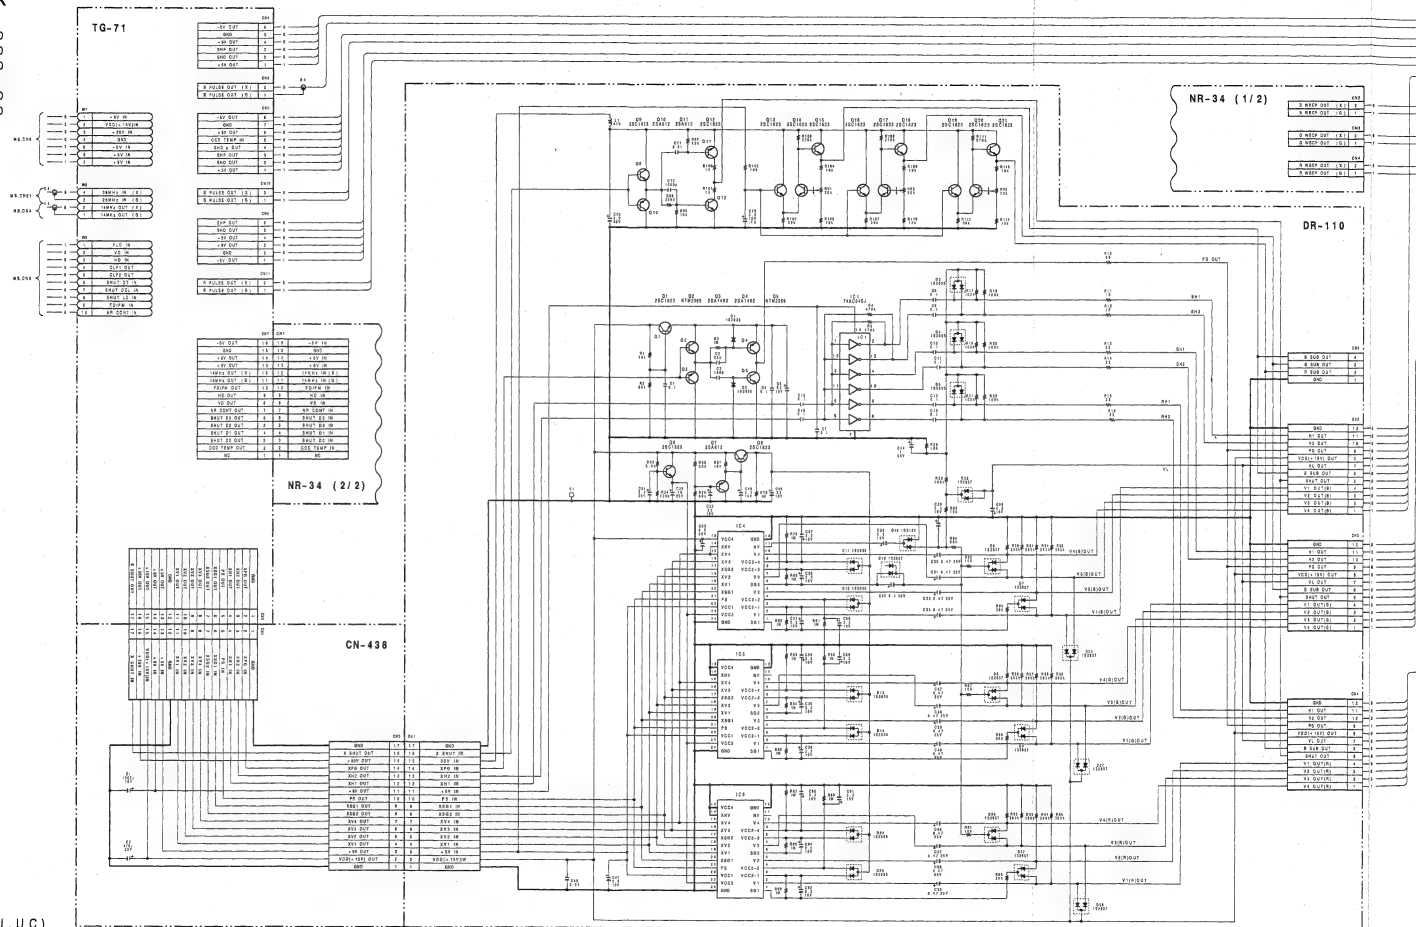

DXC-537 (J,UC)
DXC-537P(EK)

C-5

C-6

A

B

C

D


E

F

G

H

I

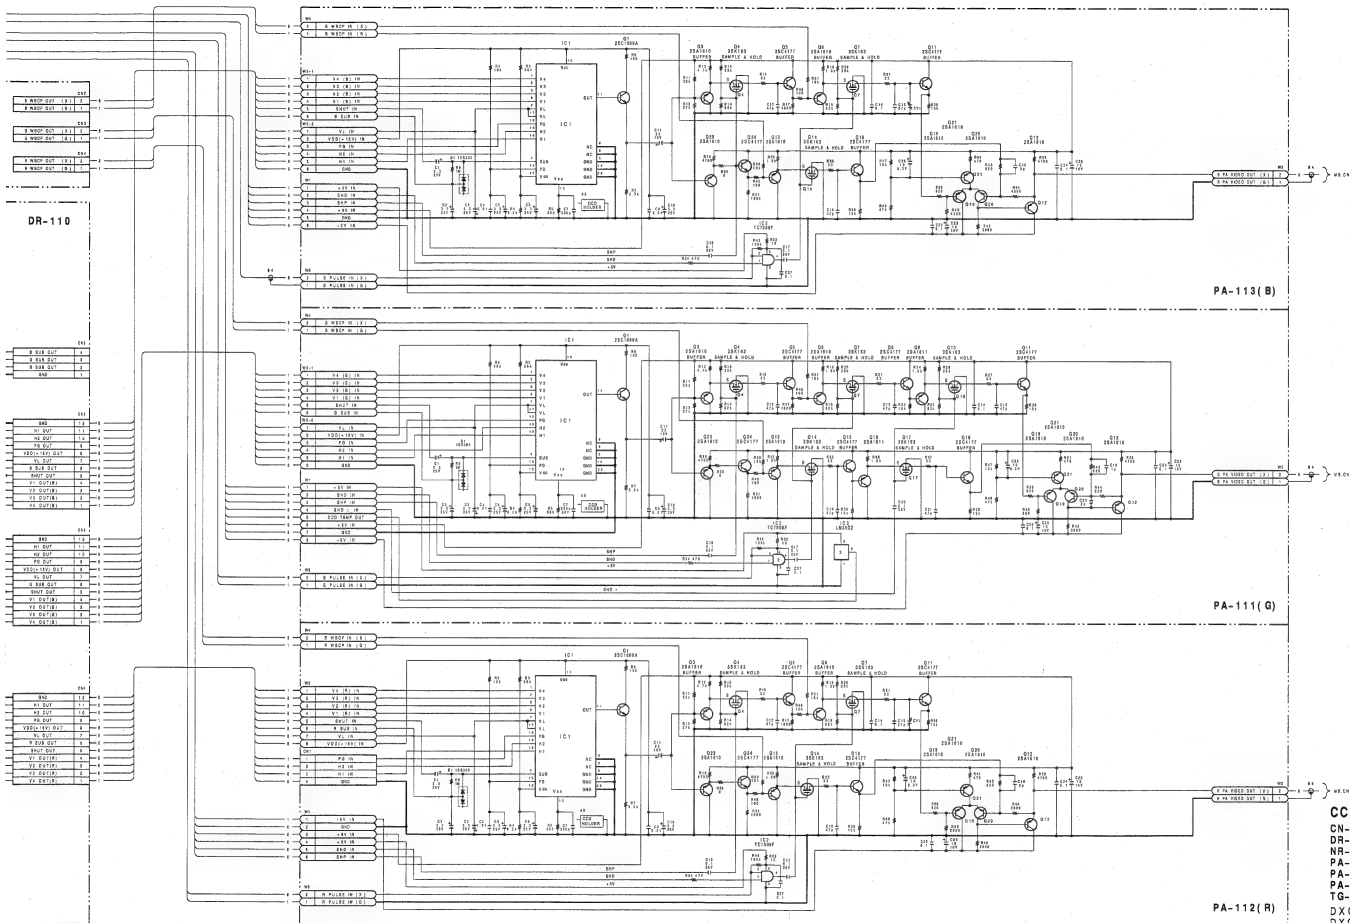

CCD BLOCK FRAME

CN-438 BOARD

DR-110 BOARD

NR-34 BOARD

PA-111 BOARD

PA-112 BOARD

PA-113 BOARD

TG-71 BOARD

DXC-537 (JUC)

DXC-537P(EK)

B-7DXC537-CCDFRAME/M

PR-143(1-4)

CN1 E-4
CN2 H-5
CN3 C-5

D1 H-1
D2 G-1
D3 B-5

DL1 E-2
DL2 E-3
DL3 E-1

E1 D-4

FL1 I-3
FL2 I-4
FL3 I-2

IC1 I-3
IC2 B-2
IC3 C-3
IC4 I-4
IC5 B-3
IC6 C-4
IC7 I-2
IC8 B-1
IC9 C-2
IC10 I-1
IC11 H-5
IC12 H-4
IC13 A-1
IC14 B-1
IC16 D-5
IC17 C-5

Q1 H-3
Q2 I-3
Q3 G-3
Q4 E-2
Q5 D-2
Q6 H-4
Q7 I-4
Q8 E-3
Q9 G-4
Q11 E-3
Q12 D-3
Q13 H-2


PR-143 BOARD

S/N J: 30001 through 30040
 UC: 10001 through 10060
 EK: 40001 through 40050

PR-143(1-638-045-11)


CN1 E-4	Q14 I-2
CN2 H-5	Q15 G-1
CN3 C-5	Q16 E-1
	Q17 D-1
D1 H-1	Q18 H-1
D2 G-1	Q19 G-1
D3 B-5	Q21 B-1
	Q22 B-1
DL1 E-2	Q23 B-2
DL2 E-3	Q24 B-2
DL3 E-1	Q25 A-3
	Q26 A-3
E1 D-4	Q27 B-3
	Q28 B-4
FL1 I-3	Q29 A-4
FL2 I-4	Q30 B-4
FL3 I-2	Q31 B-4
	Q32 D-5
IC1 I-3	Q33 C-5
IC2 B-2	Q34 E-5
IC3 C-3	
IC4 I-4	RV1 H-3
IC5 B-3	RV3 G-2
IC6 C-4	RV4 E-2
IC7 I-2	RV5 B-3
IC8 B-1	RV6 B-3
IC9 C-2	RV7 D-1
IC10 I-1	RV8 H-4
IC11 H-5	RV10 H-3
IC12 H-4	RV13 B-4
IC13 A-1	RV14 B-4
IC14 B-1	RV15 D-1
IC16 D-5	RV16 H-2
IC17 C-5	RV18 G-1
	RV19 E-1
Q1 H-3	RV20 B-2
Q2 I-3	RV21 B-2
Q3 G-3	RV22 D-1
Q4 E-2	RV24 H-1
Q5 D-2	RV25 I-1
Q6 H-4	RV26 I-1
Q7 I-4	RV27 H-1
Q8 E-3	RV28 H-1
Q9 G-4	RV29 A-1
Q11 E-3	RV30 B-1
Q12 D-3	RV31 B-1
Q13 H-2	RV32 B-3
	RV33 A-3

RV34 A-4
 RV35 A-5
 RV36 G-5
 S1 C-1
 TP2 E-2
 TP3 D-2
 TP4 C-2
 TP5 B-2
 TP6 C-3
 TP8 E-3
 TP9 D-3
 TP10 C-3
 TP11 C-3
 TP12 E-4
 TP14 E-1
 TP15 D-1
 TP16 D-1
 TP17 C-2
 TP18 D-2

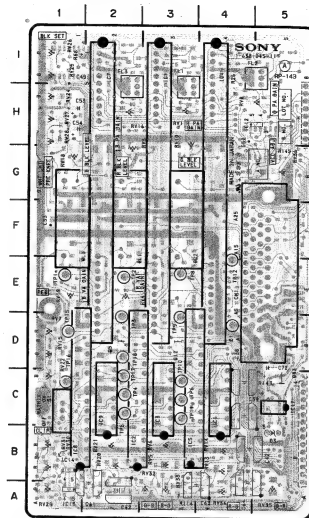

1-638-045-11 COMPONENT SIDE

C-11(a)

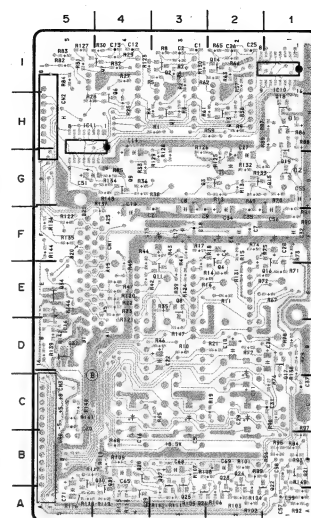

1-638-045-11 SOLDERING SIDE

PR-143(1-638-045-11)

CN1 E-4	Q14 I-2	RV34 A-4
CN2 H-5	Q15 G-1	RV35 A-5
CN3 C-5	Q16 E-1	RV36 G-5
	Q17 D-1	
D1 H-1	Q18 H-1	S1 C-1
D2 G-1	Q19 G-1	TP2 E-2
D3 B-5	Q21 B-1	TP3 D-2
	Q22 B-1	TP4 C-2
DL1 E-2	Q23 B-2	TP5 B-2
DL2 E-3	Q24 B-2	TP6 C-3
DL3 E-1	Q25 A-3	TP8 E-3
	Q26 A-3	TP9 D-3
E1 D-4	Q27 B-3	TP10 C-3
	Q28 B-4	TP11 C-3
FL1 I-3	Q29 A-4	TP12 E-4
FL2 I-4	Q30 B-4	TP14 E-1
FL3 I-2	Q31 B-4	TP15 D-1
	Q32 D-5	TP16 D-1
IC1 I-3	Q33 C-5	TP17 C-2
IC2 B-2	Q34 E-5	TP18 D-2
IC3 C-3		
IC4 I-4	RV1 H-3	
IC5 B-3	RV3 G-2	
IC6 C-4	RV4 E-2	
IC7 I-2	RV5 B-3	
IC8 B-1	RV6 B-3	
IC9 C-2	RV7 D-1	
IC10 I-1	RV8 H-4	
IC11 H-5	RV10 H-3	
IC12 H-4	RV13 B-4	
IC13 A-1	RV14 B-4	
IC14 B-1	RV15 D-1	
IC16 D-5	RV16 H-2	
IC17 C-5	RV18 G-1	
	RV19 E-1	
Q1 H-3	RV20 B-2	
Q2 I-3	RV21 B-2	
Q3 G-3	RV22 D-1	
Q4 E-2	RV24 H-1	
Q5 D-2	RV25 I-1	
Q6 H-4	RV26 I-1	
Q7 I-4	RV27 H-1	
Q8 E-3	RV28 H-1	
Q9 G-4	RV29 A-1	
Q11 E-3	RV30 B-1	
Q12 D-3	RV31 B-1	
Q13 H-2	RV32 B-3	
	RV33 A-3	

C-12(a)

DXC-537 (J,U,C)
 DXC-537P (EK)

PR-143 BOARD

S/N J; 30041 and higher
 UC; 10061 and higher
 EK; 40051 and higher

PR-143

PR-143

PR-143(1-638-045-12)

CN1 E-4
 CN2 H-5
 CN3 C-5

D1 H-1
 D2 G-1
 D3 B-5

DL1 E-2
 DL2 E-3
 DL3 E-1

E1 D-4

FL1 I-3
 FL2 I-4
 FL3 I-2

IC1 I-3
 IC2 B-2
 IC3 C-3

IC4 I-4
 IC5 B-3
 IC6 C-4

IC7 I-2
 IC8 B-1
 IC9 C-2

IC10 I-1
 IC11 H-5
 IC12 H-4

IC13 A-1
 IC14 B-1
 IC16 D-5

IC17 C-5

Q1 H-3
 Q2 I-3
 Q3 G-3

Q4 E-2
 Q5 D-2
 Q6 H-4

Q7 I-4
 Q8 E-3
 Q9 G-4

Q11 E-3
 Q12 D-3
 Q13 H-2

Q14 I-2
 Q15 G-1
 Q16 E-1

Q17 D-1
 Q18 H-1
 Q19 G-1

Q21 B-1
 Q22 B-1
 Q23 B-2

Q24 B-2
 Q25 A-3
 Q26 A-3

Q27 B-3
 Q28 B-4
 Q29 A-4

Q30 B-4
 Q31 B-4
 Q32 D-5

Q33 C-5
 Q34 E-5

RV1 H-3
 RV2 G-2
 RV4 E-2

RV5 B-3
 RV6 B-3
 RV7 D-1

RV8 H-4
 RV10 H-3
 RV13 B-4

RV14 B-4
 RV15 D-1
 RV16 H-2

RV18 G-1
 RV19 E-1
 RV20 B-2

RV21 B-2
 RV22 D-1
 RV24 H-1

RV25 I-1
 RV26 I-1
 RV27 H-1

RV28 H-1
 RV29 A-1
 RV30 B-1

RV31 B-1
 RV32 B-3
 RV33 A-3

RV34 A-4
 RV35 A-5
 RV36 G-5

S1 C-1


TP2 E-2
 TP3 D-2
 TP4 C-2

TP5 B-2
 TP6 C-3
 TP8 E-3


TP9 D-3
 TP10 C-3
 TP11 C-3

TP12 E-4
 TP14 E-1
 TP15 D-1

TP16 D-1
 TP17 C-2
 TP18 D-2

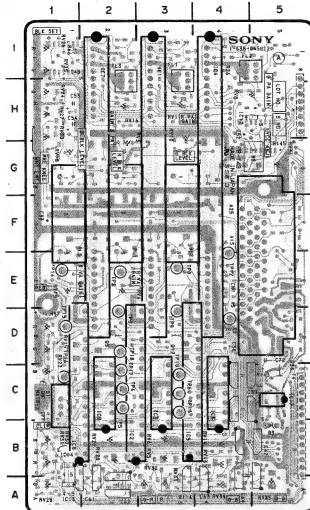

1-638-045-12 COMPONENT SIDE

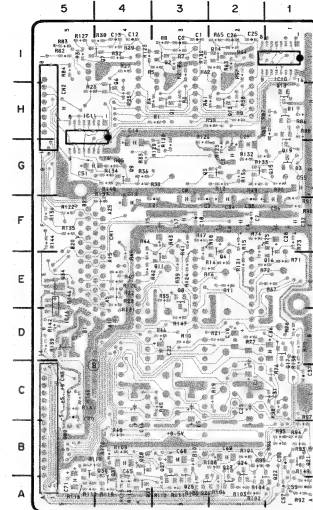

1-638-045-12 SOLDERING SIDE

PR-143(1-638-045-12)

CN1 E-4
 CN2 H-5
 CN3 C-5

D1 H-1
 D2 G-1
 D3 B-5

DL1 E-2
 DL2 E-3
 DL3 E-1

E1 D-4

FL1 I-3
 FL2 I-4
 FL3 I-2

IC1 I-3
 IC2 B-2
 IC3 C-3

IC4 I-4
 IC5 B-3
 IC6 C-4

IC7 I-2
 IC8 B-1
 IC9 C-2

IC10 I-1
 IC11 H-5
 IC12 H-4

IC13 A-1
 IC14 B-1
 IC16 D-5

IC17 C-5

Q1 H-3
 Q2 I-3
 Q3 G-3

Q4 E-2
 Q5 D-2
 Q6 H-4

Q7 I-4
 Q8 E-3
 Q9 G-4

Q11 E-3
 Q12 D-3
 Q13 H-2

Q14 I-2
 Q15 G-1
 Q16 E-1

Q17 D-1
 Q18 H-1
 Q19 G-1

Q21 B-1
 Q22 B-1
 Q23 B-2

Q24 B-2
 Q25 A-3
 Q26 A-3

Q27 B-3
 Q28 B-4
 Q29 A-4

Q30 B-4
 Q31 B-4
 Q32 D-5

Q33 C-5
 Q34 E-5

RV1 H-3
 RV3 G-2
 RV4 E-2

RV5 B-3
 RV6 B-3
 RV7 D-1

RV8 H-4
 RV10 H-3
 RV13 B-4

RV14 B-4
 RV15 D-1
 RV16 H-2

RV18 G-1
 RV19 E-1
 RV20 B-2

RV21 B-2
 RV22 D-1
 RV24 H-1

RV25 I-1
 RV26 I-1
 RV27 H-1

RV28 H-1
 RV29 A-1
 RV30 B-1

RV31 B-1
 RV32 B-3
 RV33 A-3

RV34 A-4
 RV35 A-5
 RV36 G-5

S1 C-1

TP2 E-2
 TP3 D-2
 TP4 C-2

TP5 B-2
 TP6 C-3
 TP8 E-3

TP9 D-3
 TP10 C-3
 TP11 C-3

TP12 E-4
 TP14 E-1
 TP15 D-1

TP16 D-1
 TP17 C-2
 TP18 D-2

PR-143 BOARD

注意:

1. DC電圧はデジタル電圧計による値。

2. 波形写真、及びDC電圧は下記条件での測定。


- ・本機にCA-537を接続する。
- ・グレースケールチャートを撮像し、波形モニターにて、ビデオ出力の白レベルが 100 IREになる様にレンズ絞りをセットする。

・ OUTPUT : CAM
 ・ GAIN : 0 dB
 ・ WHITE BAL : PRE
 ・ SHUTTER : OFF
 ・ ZEBRA MARKER : OFF OFF
 ・ PHASE : 0°

TP2/TP8/TP14
 INPUT VIDEO
 R/G/B



TP4/TP10/TP16
 DELAYED
 R/G/B

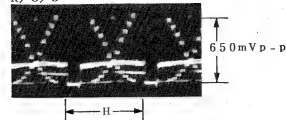

NOTE:


1. All voltage are DC, measured with a digital voltmeter.

2. All waveforms are taken and DC voltage is measured in condition below.


- ・ Connect the camera adapter CA-537 to the camera.
- ・ Shoot the grayscale chart. Adjust lens iris so that a white level is 100 IRE on the waveform monitor.

・ OUTPUT : CAM
 ・ GAIN : 0 dB
 ・ WHITE BAL : PRE
 ・ SHUTTER : OFF
 ・ ZEBRA MARKER : OFF OFF
 ・ PHASE : 0°


TP3/TP9/TP15
 PRE KNEE
 R/G/B




TP6/TP12/TP18
 DETAIL MIX
 R/G/B

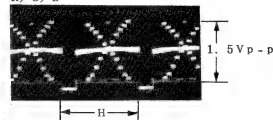

TP5/TP11/TP17
 GUMMA COMP.
 R/G/B



PR-143(1/2)BOARD

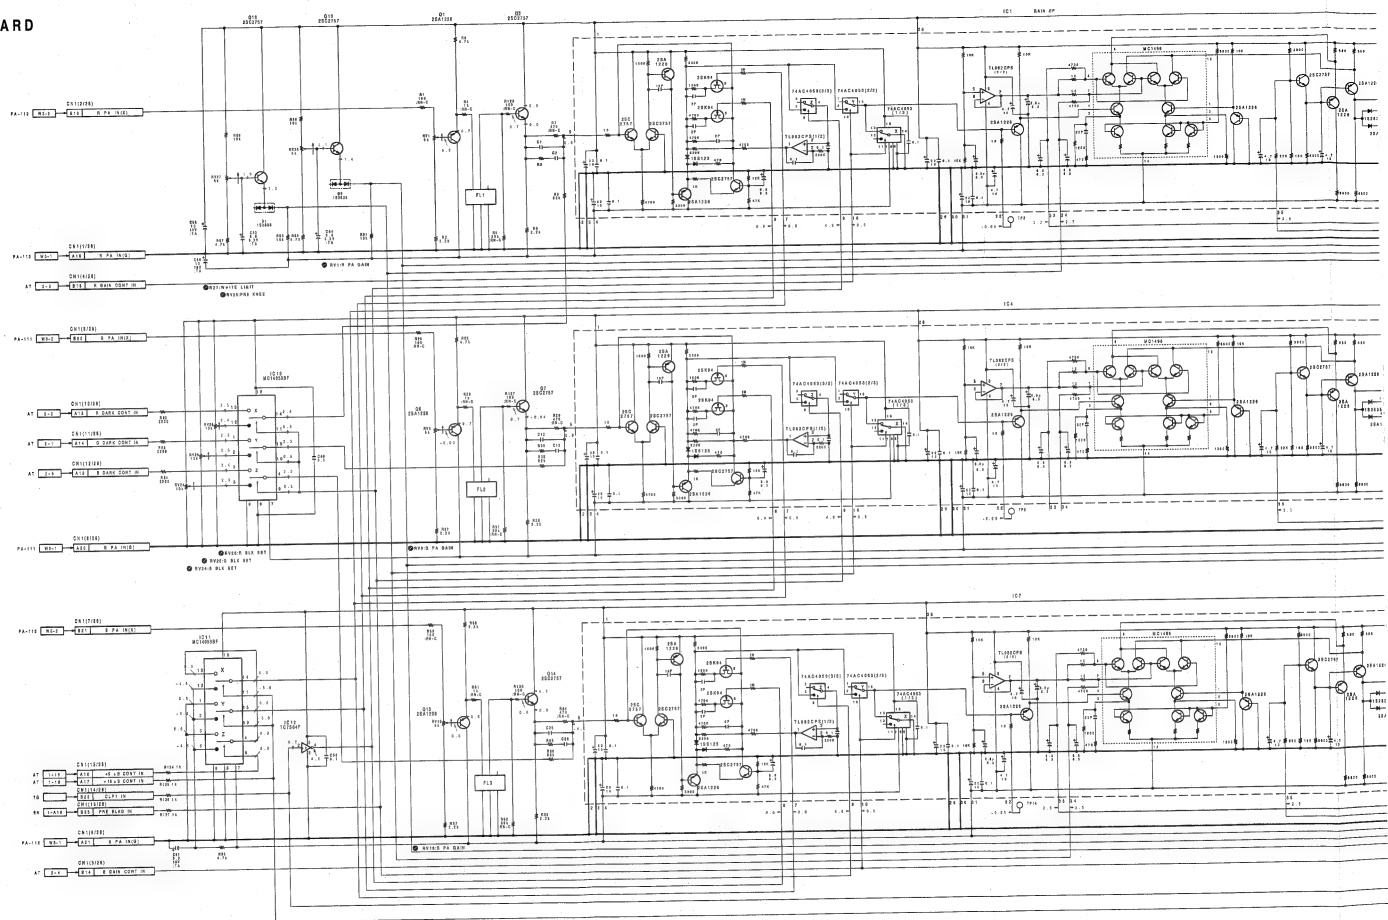

DXC-537 (J,U,C)
DXC-537P(EK)

C-17

C-18

A

B

C

D

E

F

G

H




IE-28 BOARD


IE-28(1-638-044-11)

CN2	H-1	Q7	F-2
CV1	B-1	Q8	F-2
		Q9	F-3
CV1	H-2	Q10	E-3
CV2	I-4	Q11	I-3
CV3	F-5	Q12	H-3
		Q13	G-3
D1	A-2	Q14	G-3
D2	I-3	Q15	G-3
D3	E-5	Q16	I-3
D4	B-5	Q17	I-4
D5	C-5	Q18	I-5
		Q19	I-4
DL1	G-2	Q21	I-3
DL2	A-3	Q22	I-3
DL3	C-5	Q23	I-1
		Q24	C-1
IC1	G-2	Q25	I-1
IC5	A-5	Q26	I-1
IC6	A-2	Q27	I-2
IC7	E-2	Q28	I-5
IC8	C-1	Q29	I-5
IC9	C-3	Q30	I-5
IC10	I-2	Q31	I-5
IC11	I-2	Q32	I-5
IC12	F-4	Q33	H-5
IC13	C-5	Q34	H-5
		Q35	G-5
L1	D-1	Q36	G-4
L2	D-1	Q37	G-5
L3	G-2	Q38	G-5
L4	F-1	Q39	G-5
L5	I-3	Q41	E-5
L6	E-5	Q42	E-5
L7	D-4	Q43	E-5
L8	D-5	Q44	E-4
L9	E-5	Q45	F-4
L10	C-5	Q46	F-4
L11	C-1	Q47	I-1
L12	B-1	Q48	C-4
L13	A-2	Q49	D-5
		Q50	E-5
Q1	E-2	Q51	D-5
Q2	E-2	Q52	C-5
Q3	F-1	Q53	C-5
Q4	G-1	Q54	C-5
Q5	G-2	Q55	C-4
Q6	F-2	Q56	B-4

O57	B-4
O58	B-5
O59	B-5
O61	B-5
O62	A-4
O63	B-5
O64	A-4
O65	C-3
O66	C-4
O67	B-1
O68	B-2
O69	B-3
O70	B-4
O71	A-3
O72	A-3
O73	B-3
O74	A-3
O75	A-2
O76	A-1
O77	I-1
RV1	H-1
RV2	E-5
RV3	C-5
RV4	C-5
RV5	A-5
RV6	B-2
RV7	B-3
S1	B-5
TP1	F-3
TP2	I-5
TP3	E-5
TP4	D-5
TP5	D-5
TP6	C-5
TP7	A-4
TP8	A-3
TP9	I-1
TP10	B-5
TP11	A-1
TP12	C-1

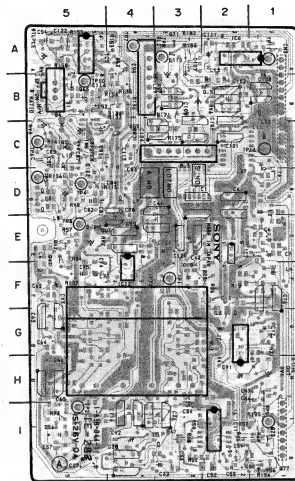

1-638-044-11 SOLDERING SIDE

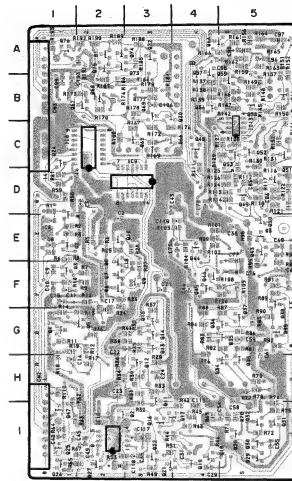

1-638-044-11 SOLDERING SIDE

IE-28(1-638-044-11)

CN2	H-1	Q7	F-2
CV1	B-1	Q8	F-2
		Q9	F-3
CV1	H-2	Q10	E-3
CV2	I-4	Q11	I-3
CV3	F-5	Q12	H-3
		Q13	G-3
D1	A-2	Q14	G-3
D2	I-3	Q15	G-3
D3	E-5	Q16	I-3
D4	B-5	Q17	I-4
D5	C-5	Q18	I-5
		Q19	I-4
DL1	G-2	Q21	I-3
DL2	A-3	Q22	I-3
DL3	C-5	Q23	I-1
		Q24	C-1
IC1	G-2	Q25	I-1
IC5	A-5	Q26	I-1
IC6	A-2	Q27	I-2
IC7	E-2	Q28	I-5
IC8	C-1	Q29	I-5
IC9	C-3	Q30	I-5
IC10	I-2	Q31	I-5
IC11	I-2	Q32	I-5
IC12	F-4	Q33	H-5
IC13	C-5	Q34	H-5
		Q35	G-5
L1	D-1	Q36	G-4
L2	D-1	Q37	G-5
L3	G-2	Q38	G-5
L4	F-1	Q39	G-5
L5	I-3	Q41	E-5
L6	E-5	Q42	E-5
L7	D-4	Q43	E-5
L8	D-5	Q44	E-4
L9	E-5	Q45	F-4
L10	C-5	Q46	F-4
L11	C-1	Q47	I-1
L12	B-1	Q48	C-4
L13	A-2	Q49	D-5
		Q50	E-5
Q1	E-2	Q51	D-5
Q2	E-2	Q52	C-5
Q3	F-1	Q53	C-5
Q4	G-1	Q54	C-5
Q5	G-2	Q55	C-4
Q6	F-2	Q56	B-4

O57	B-4
O58	B-5
O59	B-5
O61	B-5
O62	A-4
O63	B-5
O64	A-4
O65	C-3
O66	C-4
O67	B-1
O68	B-2
O69	B-3
O70	B-4
O71	A-3
O72	A-3
O73	B-3
O74	A-3
O75	A-2
O76	A-1
O77	I-1
RV1	H-1
RV2	E-5
RV3	C-5
RV4	C-5
RV5	A-5
RV6	B-2
RV7	B-3
S1	B-5
TP1	F-3
TP2	I-5
TP3	E-5
TP4	D-5
TP5	D-5
TP6	C-5
TP7	A-4
TP8	A-3
TP9	I-1
TP10	B-5
TP11	A-1
TP12	C-1










IE-28 BOARD

注意:


1. DC電圧はデジタル電圧計による値。
 2. 波形写真、及びDC電圧は下記条件での測定。
 - ・本機にCA-537を接続する。
 - ・グレースケールチャートを撮影し、波形モニターにて、ビデオ出力の白レベルが 100 IREになる様にレンズ絞りをセットする。
- | | |
|----------------|-----------|
| ・ OUTPUT | : CAM |
| ・ GAIN | : 0 dB |
| ・ WHITE BAL | : PRE |
| ・ SHUTTER | : OFF |
| ・ ZEBRA MARKER | : OFF OFF |
| ・ PHASE | : 0° |

NOTE:

1. All voltage are DC, measured with a digital voltmeter.
 2. All waveforms are taken and DC voltage is measured in condition below.
 - ・ Connect the camera adapter CA-537 to the camera.
 - ・ Shoot the grayscale chart. Adjust lens iris so that a white level is 100IRE on the waveform monitor.
- | | |
|----------------|-----------|
| ・ OUTPUT | : CAM |
| ・ GAIN | : 0 dB |
| ・ WHITE BAL | : PRE |
| ・ SHUTTER | : OFF |
| ・ ZEBRA MARKER | : OFF OFF |
| ・ PHASE | : 0° |

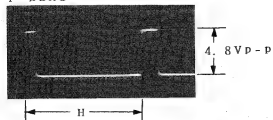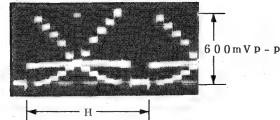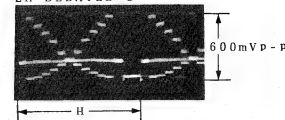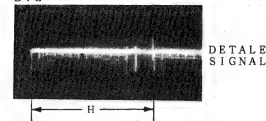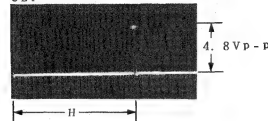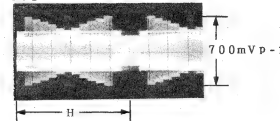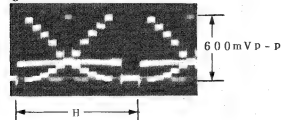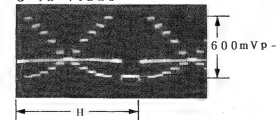CN2-3pin
P BLKGCN3-4pin
RTP3
2H DELAYED GCN2-1pin
28MHzIC1-1pin
IC1 G INTP11
DTLCN2-4pin
CLPIC1-12pin
IC1 G OUTCN3-6pin
GTP9
G IE VIDEO

IE-28 BOARD

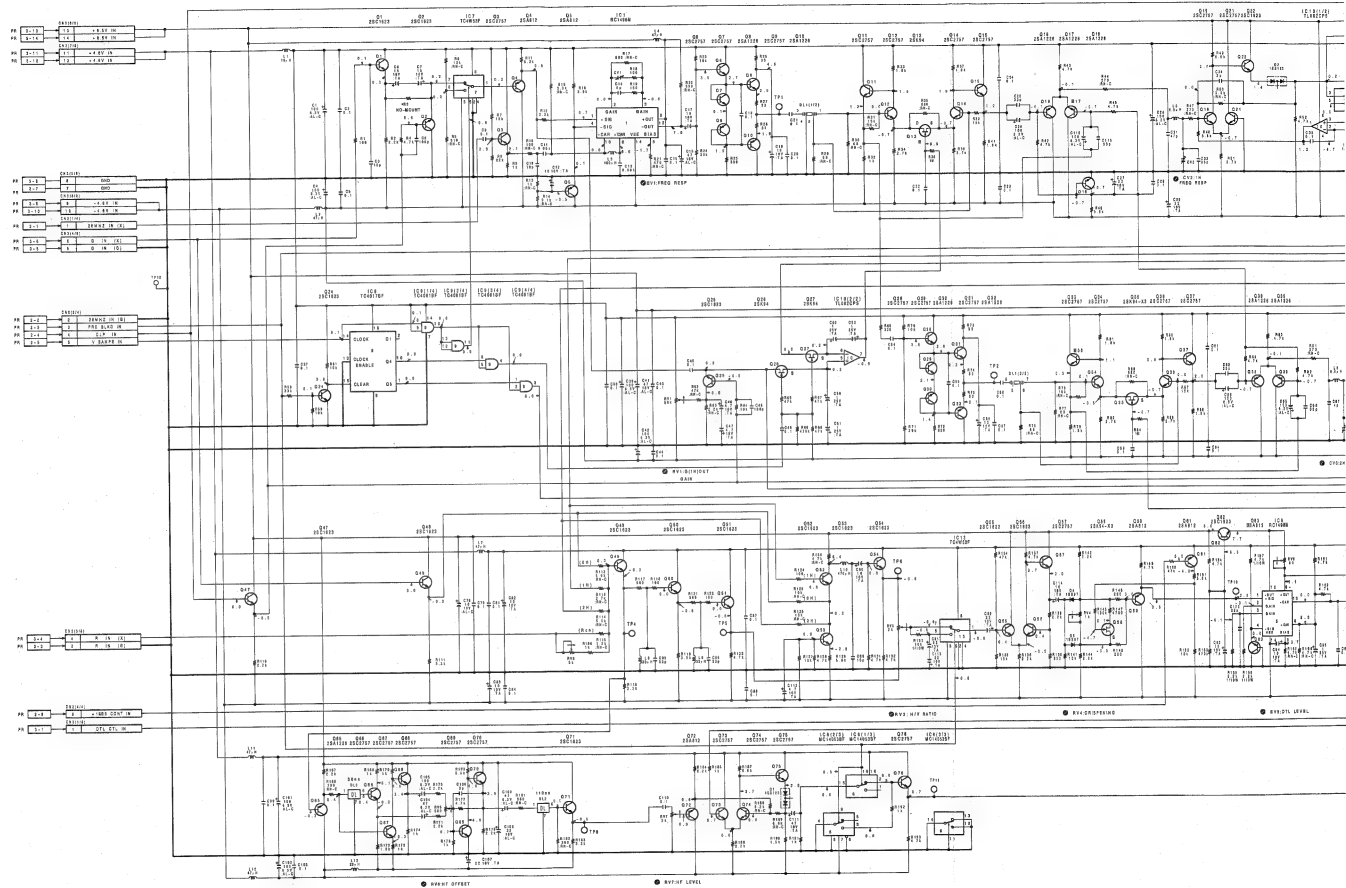

DXC-537 (J, U C)
DXC-537P (E K)

C - 33

C-34

A

B

C


D

E

F

G

H

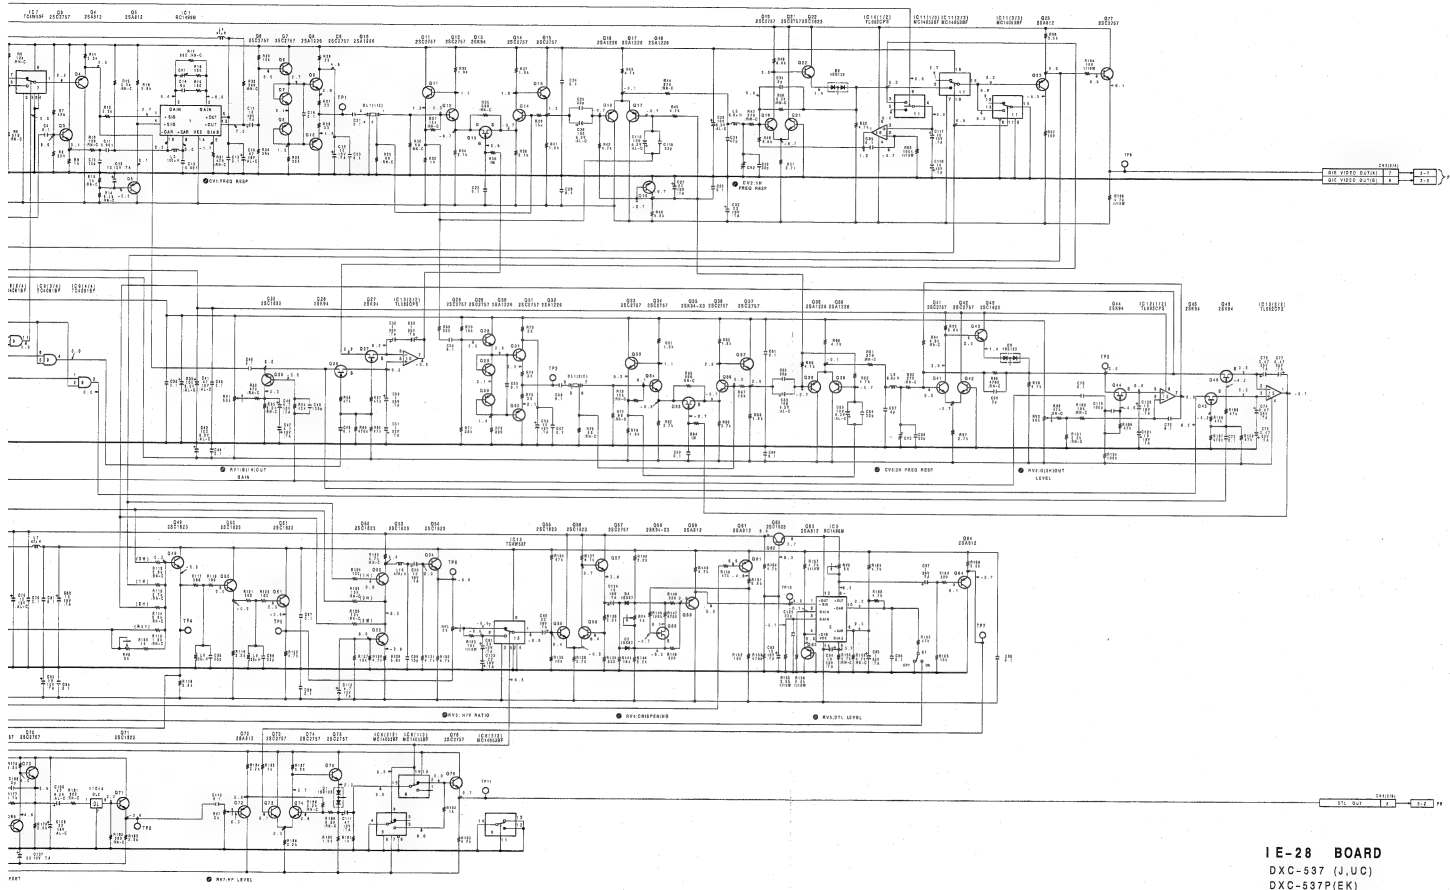

IE-28 BOARD
DXC-537 (J,UC)
DXC-537P(EK)

B- $\frac{Y}{I}$ DXC537-IE28/M

C-34

C-35

E

F

G

H

1

1

K

1

SG-171 BOARD

SG-171(1-638-049-11)

CN1 H-5
CN2 C-5D1 A-2
D2 A-1
D3 D-4

E1 E-1

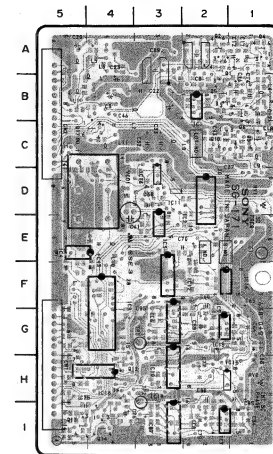
IC1 C-2
IC2 E-2
IC3 E-3
IC5 F-2
IC6 G-3
IC7 I-2
IC8 I-2
IC9 F-4
IC10 H-3
IC11 D-3
IC12 F-2
IC13 H-3
IC14 F-1
IC15 H-1
IC16 D-3
IC18 H-4
IC19 G-2L1 B-5
L2 C-3
L3 A-4
L4 B-2
L5 A-4
L8 C-2
L9 C-1
L10 E-4

FIGURE 11. COMPONENT SIDE

SG-171 BOARD

SG-171(1-638-049-11)


CN1 H-5
CN2 C-5

D1 A-2
D2 A-1
D3 D-4


E1 E-1

IC1 C-2
IC2 E-2
IC3 E-3
IC5 F-2
IC6 G-3
IC7 I-2
IC8 I-2
IC9 F-4
IC10 H-3
IC11 D-3
IC12 F-2
IC13 H-3
IC14 F-1
IC15 H-1
IC16 D-3
IC18 H-4
IC19 G-2

L1 B-5
L2 C-3
L3 A-4
L4 B-2
L5 A-4
L8 C-2
L9 C-1
L10 E-4

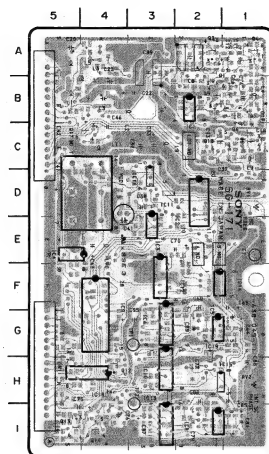

1-638-049-11 COMPONENT SIDE

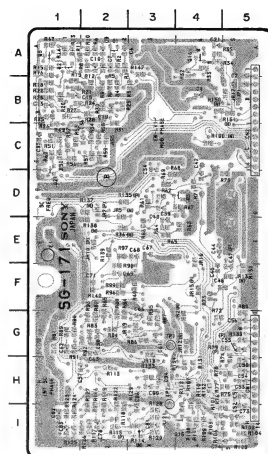

1-638-049-11 SOLDERING SIDE

SG-171(1-638-049-11)

CN1 H-5
CN2 C-5

D1 A-2
D2 A-1
D3 D-4

E1 E-1

IC1 C-2
IC2 E-2
IC3 E-3
IC5 F-2
IC6 G-3
IC7 I-2
IC8 I-2
IC9 F-4
IC10 H-3
IC11 D-3
IC12 F-2
IC13 H-3
IC14 F-1
IC15 H-1
IC16 D-3
IC18 H-4
IC19 G-2

L1 B-5
L2 C-3
L3 A-4
L4 B-2
L5 A-4
L8 C-2
L9 C-1
L10 E-4

SG-171 BOARD

注意:

1. DC電圧はデジタル電圧計による値。

2. 波形写真、及びDC電圧は下記条件での測定。

・本機にCA-537を接続する。

・OUTPUT : BARS

・GAIN : 0dB

・WHITE BAL : PRE

・SHUTTER : OFF

・ZEBRA MARKER : OFF OFF

・PHASE : 0°

NOTE:

1. All voltage are DC, measured with a digital voltmeter.

2. All waveforms are taken and DC voltage is measured in condition below.

・Connect the camera adapter CA-537 to the camera.

・OUTPUT : BARS

・GAIN : 0dB


・WHITE BAL : PRE

・SHUTTER : OFF


・ZEBRA MARKER : OFF OFF

・PHASE : 0°


CN1-1pin
FLD

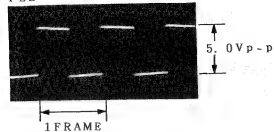

CN1-13pin
HD

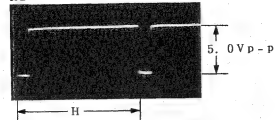

CN1-9pin
SYNC

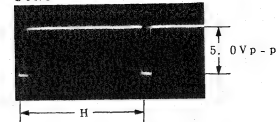


CN2-8pin
14MHz




CN1-6pin
SC




CN1-12pin
VD

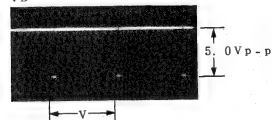

CN1-8pin
BF

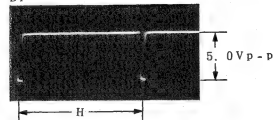

SG-171 BOARD

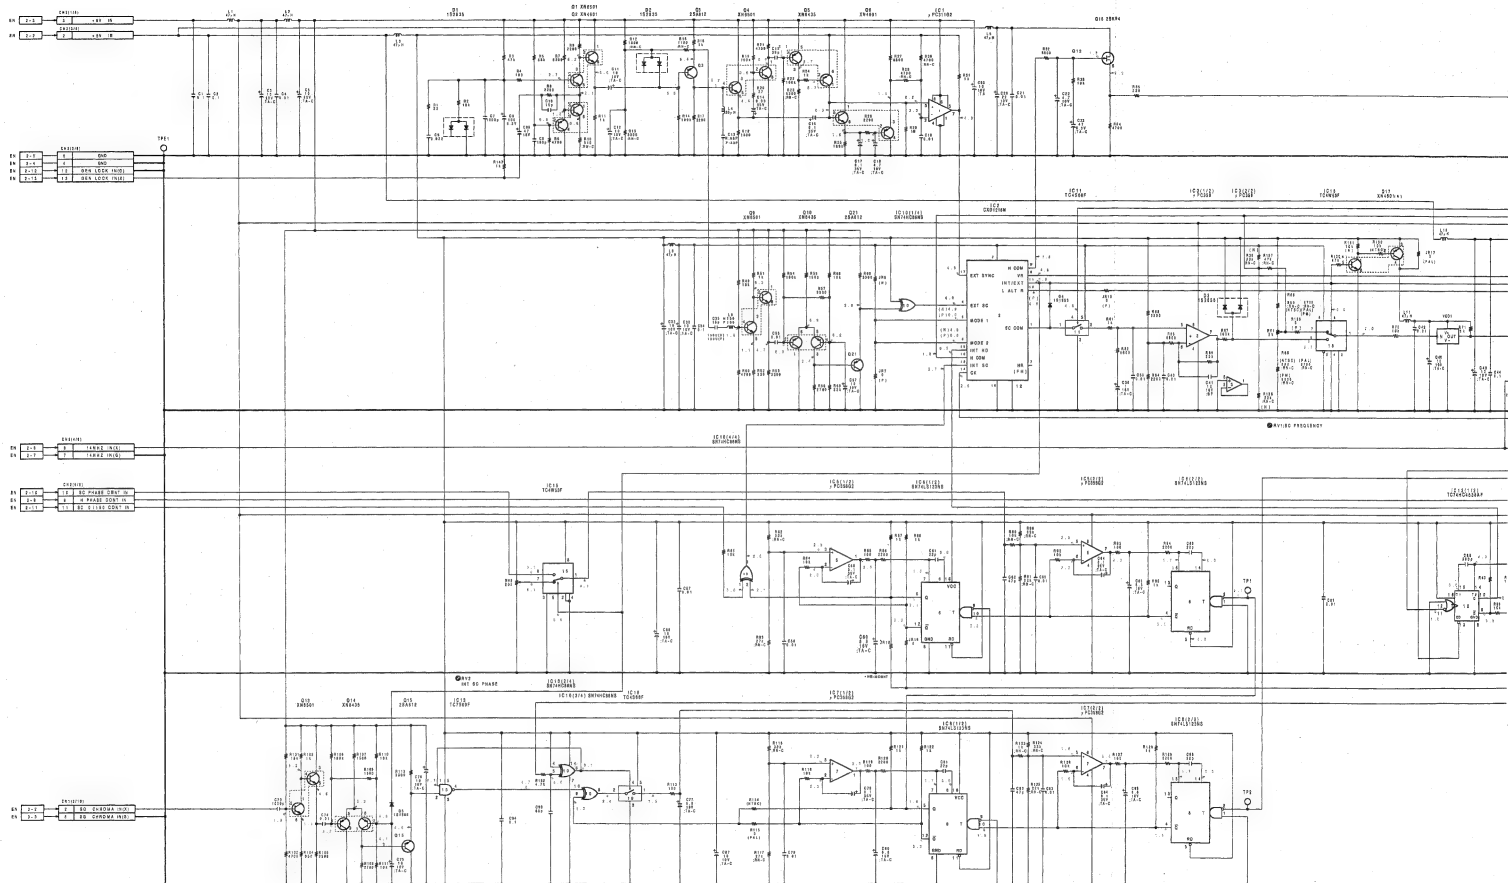

DXC-537 (J, U C)
DXC-537P (E K)

C-43

C-44

A

B

C

D


E

F

G

H

1

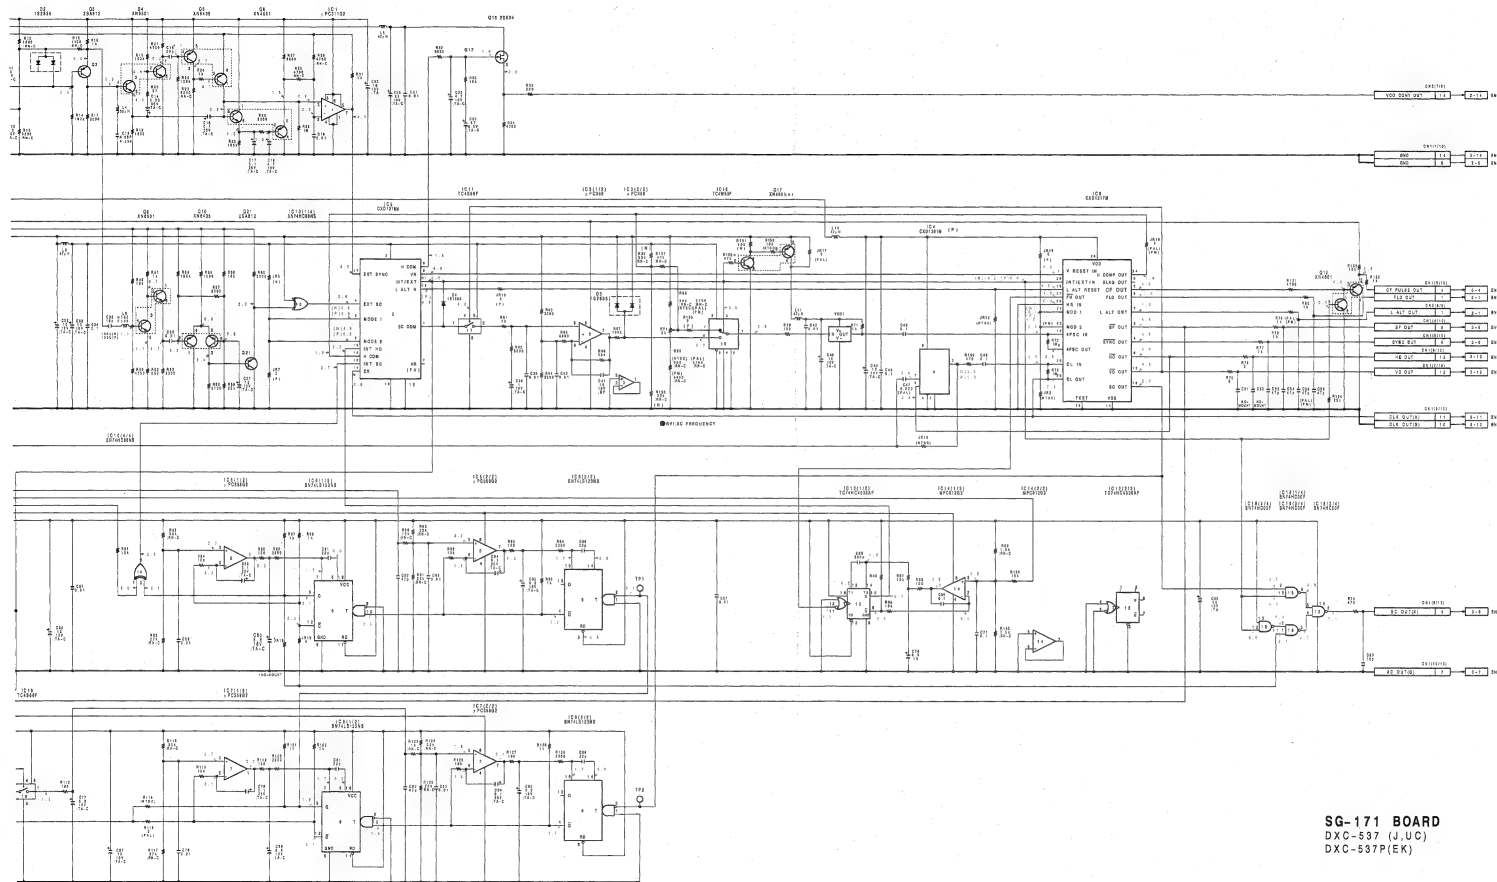

C-44

C-45

B-7 DXC537-SG171/M

EN-95 BOARD

EN-95(1-638-048-11)

CN1	F-5	Q20	F-3
		Q22	F-2
D1	E-2	Q24	F-2
D3	J-1	Q25	E-2
		Q27	D-2
DL1	E-2	Q28	D-2
		Q29	D-3
FL1	F-3	Q30	D-2
		Q31	D-3
IC1	H-3	Q32	D-3
IC2	A-2	Q33	D-3
IC4	F-5	Q34	E-4
IC5	A-5	Q35	A-6
IC6	A-4	Q36	B-5
IC8	C-3	Q37	B-4
IC9	I-2	Q38	C-5
IC10	J-3	Q39	C-3
		Q40	D-2
LV1	H-4	Q41	C-2
		Q42	C-3
L1	G-6	Q43	B-3
L2	G-1	Q44	B-3
L3	G-3	Q45	C-4
L4	I-4	Q46	C-5
L6	I-4	Q47	B-1
L8	D-5	Q48	C-2
L9	C-1	Q49	J-4
L10	A-6	Q50	J-2
L12	L-4		
L14	F-2	RV1	H-1
		RV2	F-3
Q1	G-2	RV4	G-1
Q2	H-1	RV5	H-4
Q4	G-3	RV6	I-5
Q5	H-2	RV7	A-1
Q7	H-4	RV8	F-1
Q8	G-5	RV9	C-1
Q9	I-4	RV10	D-1
Q10	I-5	RV11	D-1
Q11	I-5	RV12	C-4
Q12	J-5	RV13	B-5
Q13	J-5	RV14	B-1
Q14	J-5	RV15	B-2
Q15	B-1	RV16	J-1
Q16	E-4	RV17	F-1
Q17	F-3		
Q18	F-3	S1	A-1
Q19	E-4	S2	I-2
		TP1	H-4

S/N J: 30001 through 30040
 UC: 10001 through 10060
 EK: 40001 through 40050

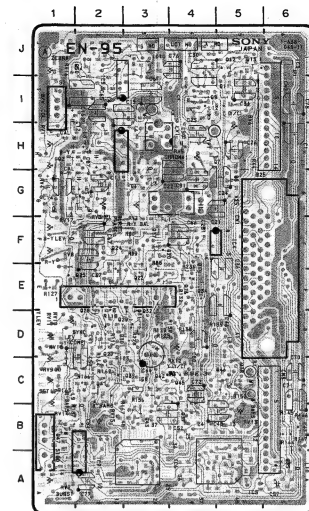



FIG. D-8 1. COMPONENT SIDE

EN-95 BOARD


S/N J: 30001 through 30040
UC: 10001 through 10060
EK: 40001 through 40050

EN-95(1-638-048-11)

CN1 F-5	Q20 F-3
D1 E-2	Q22 F-2
D3 J-1	Q24 F-2
DL1 E-2	Q25 E-2
FL1 F-3	Q27 D-2
IC1 H-3	Q28 D-2
IC2 A-2	Q29 D-3
IC4 F-5	Q30 D-2
IC5 A-5	Q31 D-3
IC6 A-4	Q32 D-3
IC8 C-3	Q33 D-3
IC9 I-2	Q34 E-4
IC10 J-3	Q35 A-6
LV1 H-4	Q36 B-5
L1 G-6	Q37 B-4
L2 G-1	Q38 C-5
L3 G-3	Q39 C-3
L4 I-4	Q40 D-2
L6 I-4	Q41 C-2
L8 D-5	Q42 C-3
L9 C-1	Q43 B-3
L10 A-6	Q44 B-3
L12 L-4	Q45 C-4
L14 F-2	Q46 C-5
Q1 G-2	Q47 B-1
Q2 H-1	Q48 C-2
Q4 G-3	Q49 J-4
Q5 H-2	Q50 J-2
Q7 H-4	RV1 H-1
Q8 G-5	RV2 F-3
Q9 I-4	RV4 G-1
Q10 I-5	RV5 H-4
Q11 I-5	RV8 I-5
Q12 J-5	RV7 A-1
Q13 J-5	RV8 F-1
Q14 J-5	RV9 C-1
Q15 B-1	RV10 D-1
Q16 E-4	RV11 D-1
Q17 F-3	RV12 C-4
Q18 F-3	RV13 B-5
Q19 E-4	RV14 B-1
	RV15 B-2
	RV16 J-1
	RV17 F-1
	S1 A-1
	S2 I-2
TP1 H-4	

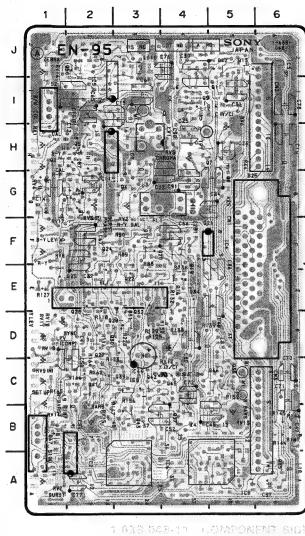

C-47(a)

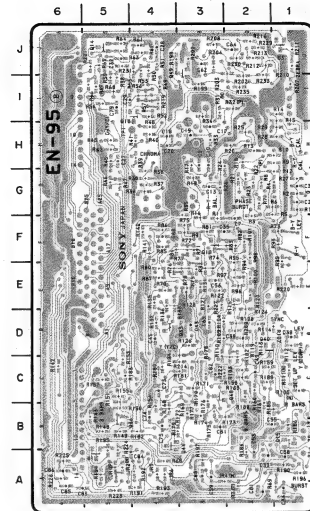

EN-95(1-638-048-11)

CN1 F-5	Q20 F-3
D1 E-2	Q22 F-2
D3 J-1	Q24 F-2
DL1 E-2	Q25 E-2
FL1 F-3	Q27 D-2
IC1 H-3	Q28 D-2
IC2 A-2	Q29 D-3
IC4 F-5	Q30 D-2
IC5 A-5	Q31 D-3
IC6 A-4	Q32 D-3
IC8 C-3	Q33 D-3
IC9 I-2	Q34 E-4
IC10 J-3	Q35 A-6
LV1 H-4	Q36 B-5
L1 G-6	Q37 B-4
L2 G-1	Q38 C-5
L3 G-3	Q39 C-3
L4 I-4	Q40 D-2
L6 I-4	Q41 C-2
L8 D-5	Q42 C-3
L9 C-1	Q43 B-3
L10 A-6	Q44 B-3
L12 L-4	Q45 C-4
L14 F-2	Q46 C-5
Q1 G-2	Q47 B-1
Q2 H-1	Q48 C-2
Q4 G-3	Q49 J-4
Q5 H-2	Q50 J-2
Q7 H-4	RV1 H-1
Q8 G-5	RV2 F-3
Q9 I-4	RV4 G-1
Q10 I-5	RV5 H-4
Q11 I-5	RV8 I-5
Q12 J-5	RV7 A-1
Q13 J-5	RV8 F-1
Q14 J-5	RV9 C-1
Q15 B-1	RV10 D-1
Q16 E-4	RV11 D-1
Q17 F-3	RV12 C-4
Q18 F-3	RV13 B-5
Q19 E-4	RV14 B-1
	RV15 B-2
	RV16 J-1
	RV17 F-1
	S1 A-1
	S2 I-2
TP1 H-4	

DXC-537 (J,UC)
DXC-537P (EK)

C-48(a)

EN-95 BOARD


S/N J; 30041 and higher
UC; 10061 and higher
EK; 40051 and higher

EN-95

EN-95


EN-95(1-638-048-12)

CN1 F-5	Q20 F-3
	Q22 F-2
D1 E-2	Q24 F-2
D3 J-1	Q25 E-2
	Q27 D-2
DL1 E-2	Q28 D-2
	Q29 D-3
FL1 F-3	Q30 D-2
	Q31 D-3
IC1 H-3	Q32 D-3
IC2 A-2	Q33 D-3
IC4 F-5	Q34 E-4
IC5 A-5	Q35 A-6
IC6 A-4	Q36 B-5
IC8 C-3	Q37 B-4
IC9 I-2	Q38 C-5
IC10 J-3	Q39 C-3
	Q40 D-2
LV1 H-4	Q41 C-2
	Q42 C-3
L1 G-6	Q43 B-3
L2 G-1	Q44 B-3
L3 G-3	Q45 C-4
L4 I-4	Q46 C-5
L6 I-4	Q47 B-1
L8 D-5	Q48 C-2
L9 C-1	Q49 J-4
L10 A-6	Q50 J-2
L12 L-4	
L14 F-2	RV1 H-1
	RV2 F-3
Q1 G-2	RV4 G-1
Q2 H-1	RV5 H-4
Q4 G-3	RV6 I-5
Q5 H-2	RV7 A-1
Q7 H-4	RV8 F-1
Q8 G-5	RV9 C-1
Q9 I-4	RV10 D-1
Q10 I-5	RV11 D-1
Q11 I-6	RV12 C-4
Q12 J-5	RV13 B-5
Q13 J-5	RV14 B-1
Q14 J-5	RV15 B-2
Q15 B-1	RV16 J-1
Q16 E-4	RV17 F-1
Q17 F-3	
Q18 F-3	S1 A-1
Q19 E-4	S2 I-2
	TP1 H-4

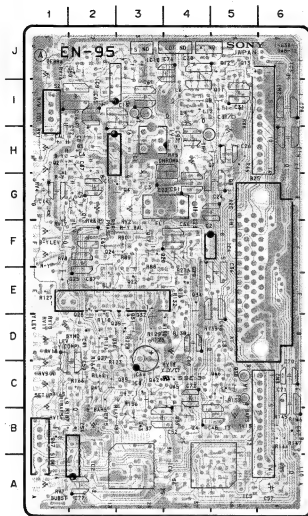

1-638-048-12 SOLDERING SIDE

C-47(b)

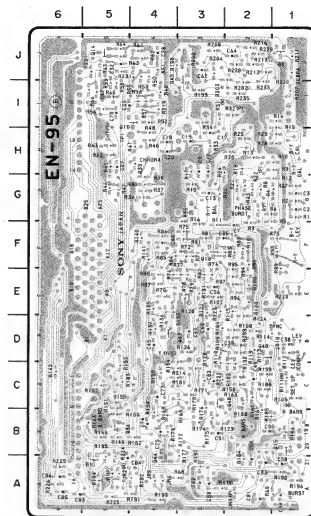


1-638-048-12 SOLDERING SIDE

C-48(b)

EN-95(1-638-048-12)

CN1 F-5	Q20 F-3
	Q22 F-2
D1 E-2	Q24 F-2
D3 J-1	Q25 E-2
	Q27 D-2
DL1 E-2	Q28 D-2
	Q29 D-3
FL1 F-3	Q30 D-2
	Q31 D-3
IC1 H-3	Q32 D-3
IC2 A-2	Q33 D-3
IC4 F-5	Q34 E-4
IC5 A-5	Q35 A-6
IC6 A-4	Q36 B-5
IC8 C-3	Q37 B-4
IC9 I-2	Q38 C-5
IC10 J-3	Q39 C-3
	Q40 D-2
LV1 H-4	Q41 C-2
	Q42 C-3
L1 G-6	Q43 B-3
L2 G-1	Q44 B-3
L3 G-3	Q45 C-4
L4 I-4	Q46 C-5
L6 I-4	Q47 B-1
L8 D-5	Q48 C-2
L9 C-1	Q49 J-4
L10 A-6	Q50 J-2
L12 L-4	
L14 F-2	RV1 H-1
	RV2 F-3
Q1 G-2	RV4 G-1
Q2 H-1	RV5 H-4
Q4 G-3	RV6 I-5
Q5 H-2	RV7 A-1
Q7 H-4	RV8 F-1
Q8 G-5	RV9 C-1
Q9 I-4	RV10 D-1
Q10 I-5	RV11 D-1
Q11 I-6	RV12 C-4
Q12 J-5	RV13 B-5
Q13 J-5	RV14 B-1
Q14 J-5	RV15 B-2
Q15 B-1	RV16 J-1
Q16 E-4	RV17 F-1
Q17 F-3	
Q18 F-3	S1 A-1
Q19 E-4	S2 I-2
	TP1 H-4

DXC-537 (J,UC)
DXC-537P (EK)

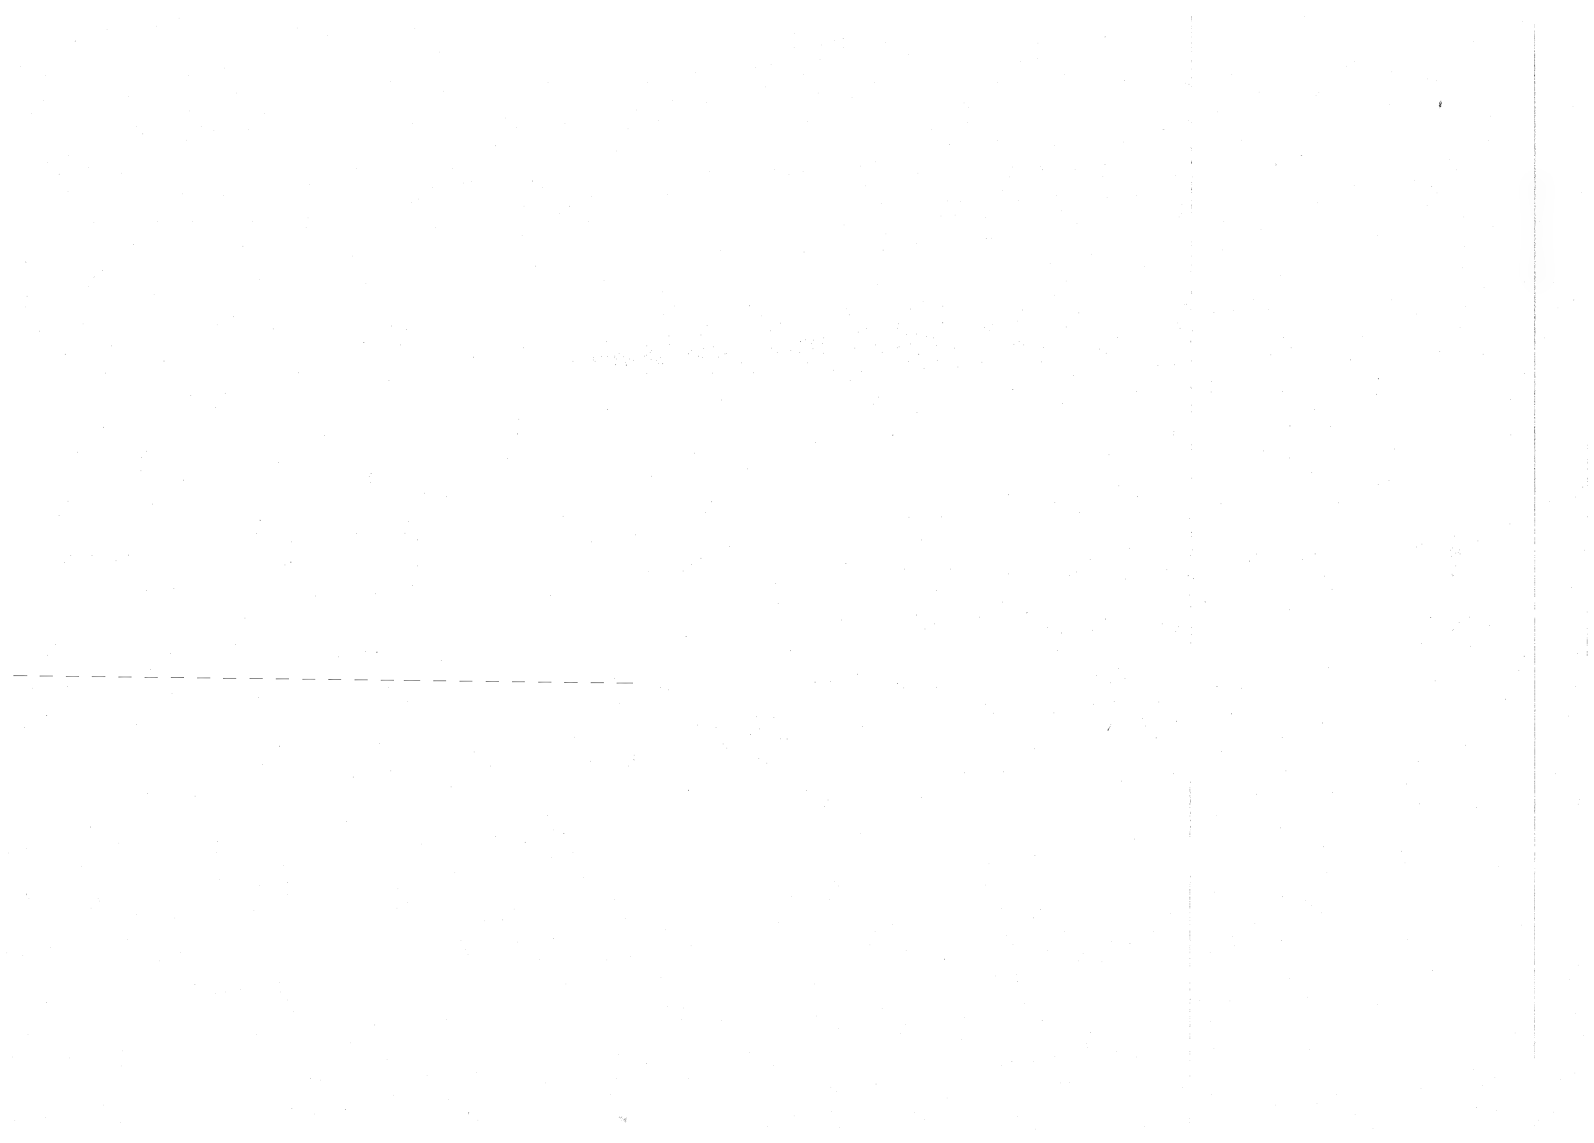

EN-95 BOARD

注意:

1. D C 電圧はデジタル電圧計による値。
2. 波形写真、及び D C 電圧は下記条件での測定。

・本機に CA-537 を接続する。

- ・ OUTPUT : BARS
- ・ GAIN : 0 dB
- ・ WHITE BAL : PRE
- ・ SHUTTER : OFF
- ・ ZEBRA MARKER : OFF OFF
- ・ PHASE : 0°

3. * は UC モデルの波形です。J モデルのものは、セッティングレベルがゼロになっています。

NOTE:














1. All voltage are DC, measured with a digital voltmeter.
2. All waveforms are taken and DC voltage is measured in condition below.

・ Connect the camera adapter CA-537 to the camera.


- ・ OUTPUT : BARS
- ・ GAIN : 0 dB
- ・ WHITE BAL : PRE
- ・ SHUTTER : OFF
- ・ ZEBRA MARKER : OFF OFF
- ・ PHASE : 0°

3. The waveform marked with * is for UC model.

For J model, the setup level is set to "0" at factory.

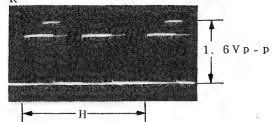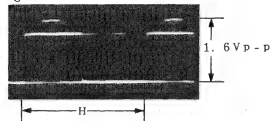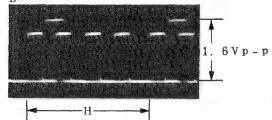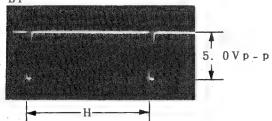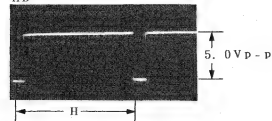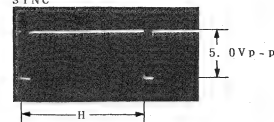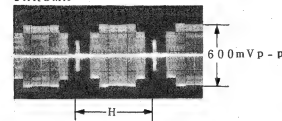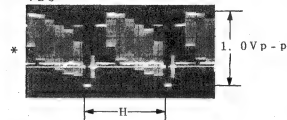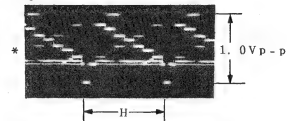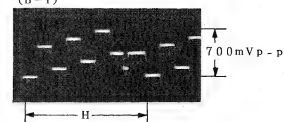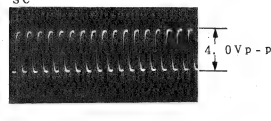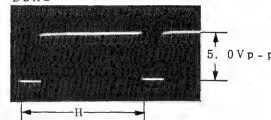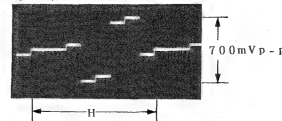Q39-2pin
RQ43-2pin
GQ35-4pin
BCN3-8pin
BFCN3-13pin
HDCN3-9pin
SYNCCN1-A11pin
CHROMACN1-A14pin
VBSCN1-A9pin
YIC1-4pin
(B-Y)CN3-6pin
SCCN1-B12pin
BLKGIC1-1pin
(R-Y)

EN-95 BOARD

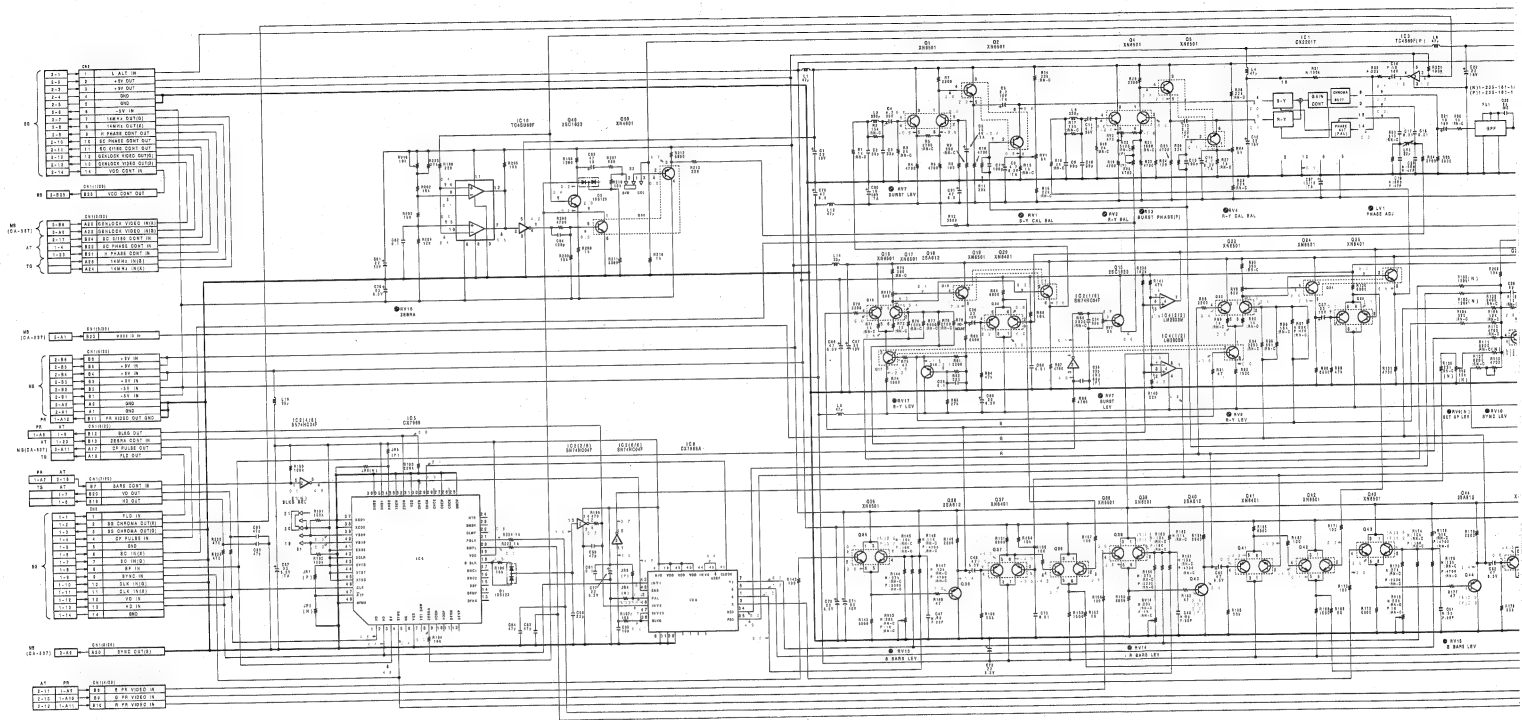

DXC-537 (J, U C)
DXC-537P (E K)

C-53

C-54

A

B

C

D

E

F

G

H



2

3


4

E

AT-59 BOARD

AT-59(1-638-046-11)

CN1 E-1	Q1 H-2
CN2 I-1	Q2 H-2
CN3 I-2	Q3 I-2
	Q4 J-3
CV1 H-8	Q5 I-4
	Q6 I-5
D2 J-9	Q7 J-5
D3 J-5	Q8 J-6
D5 J-4	Q9 J-6
D9 J-2	Q10 I-7
D10 I-2	Q11 I-3
D11 D-3	Q12 J-3
D12 D-7	Q13 J-4
D13 C-5	Q14 J-7
D14 J-5	Q18 D-9
D15 C-9	Q17 D-9
D16 C-9	Q18 D-9
D17 C-8	Q19 D-9
D21 J-8	Q20 E-5
D23 E-9	Q21 E-4
	Q22 F-5
	Q24 E-5
IC1 I-4	Q25 E-3
IC2 F-8	
IC3 J-3	
IC4 C-6	RB1 H-4
IC5 I-4	
IC7 D-4	RV1 J-4
IC8 E-2	RV2 D-7
IC9 F-8	RV3 B-6
IC10 G-3	RV4 H-8
IC11 F-3	RV5 I-8
IC12 J-8	
IC13 E-8	S1 I-5
IC14 H-3	S2 E-7
IC15 H-2	S3 G-2
IC16 F-8	S4 H-8
IC17 F-2	S5 H-7
IC18 D-5	
IC19 G-7	X1 G-4
IC20 E-6	
IC21 D-8	
L1 B-9	
L2 B-8	
L4 H-9	
L5 H-8	
L6 F-8	

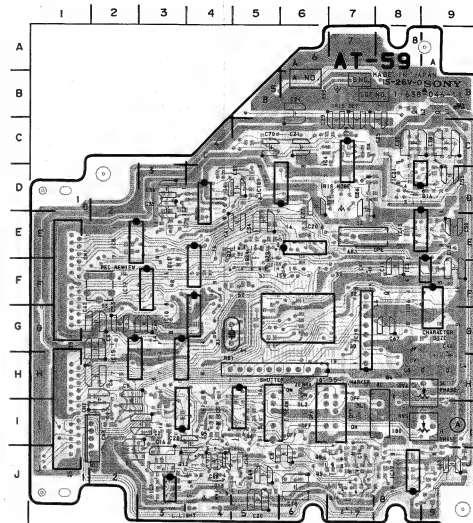


1-638-046-11 COMPONENT SIDE


AT-59 BOARD

AT-59(1-638-046-11)

CN1 E-1	Q1 H-2
CN2 I-1	Q2 H-2
CN3 I-2	Q3 I-2
	Q4 J-3
CV1 H-8	Q5 I-4
	Q6 I-5
D2 J-9	Q7 J-5
D3 J-5	Q8 J-6
D5 J-4	Q9 J-6
D9 J-2	Q10 I-7
D10 I-2	Q11 I-3
D11 D-3	Q12 J-3
D12 D-7	Q13 J-4
D13 C-5	Q14 J-7
D14 J-5	Q16 D-9
D15 C-9	Q17 D-9
D16 C-9	Q18 D-9
D17 C-8	Q19 D-9
D21 J-8	Q20 E-5
D23 E-9	Q21 E-4
	Q22 F-5
	Q24 E-5
	Q25 E-3
IC1 I-4	
IC2 F-8	
IC3 J-3	
IC4 C-6	RB1 H-4
IC5 I-4	
IC7 D-4	RV1 J-4
IC8 E-2	RV2 D-7
IC9 F-6	RV3 B-6
IC10 G-3	RV4 H-8
IC11 F-3	RV5 I-8
IC12 J-8	
IC13 E-8	S1 I-5
IC14 H-3	S2 E-7
IC15 H-2	S3 G-2
IC16 F-8	S4 H-8
IC17 F-2	S5 H-7
IC18 D-5	
IC19 G-7	X1 G-4
IC20 E-6	
IC21 D-8	
L1 B-9	
L2 B-8	
L4 H-9	
L5 H-8	
L6 F-8	

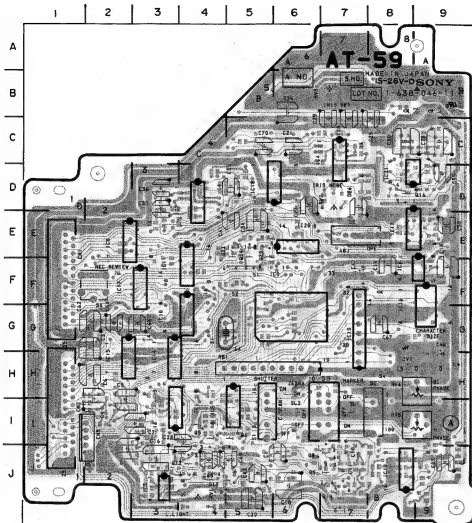

1-638-046-11 COMPONENT SIDE

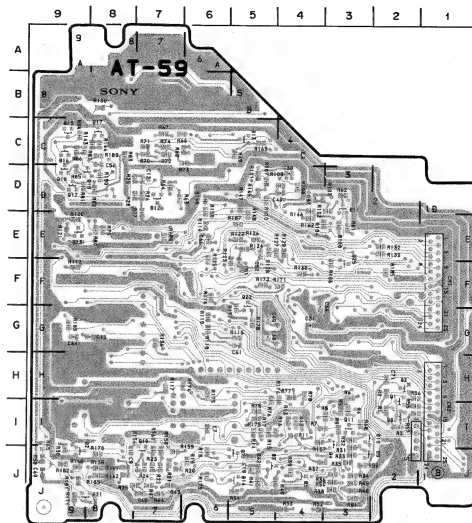

1-638-046-11 SOLDERING SIDE

AT-59(1-638-046-11)

CN1 E-1	Q1 H-2
CN2 I-1	Q2 H-2
CN3 I-2	Q3 I-2
	Q4 J-3
CV1 H-8	Q5 I-4
	Q6 I-5
D2 J-9	Q7 J-5
D3 J-5	Q8 J-6
D5 J-4	Q9 J-6
D9 J-2	Q10 I-7
D10 I-2	Q11 I-3
D11 D-3	Q12 J-3
D12 D-7	Q13 J-4
D13 C-5	Q14 J-7
D14 J-5	Q16 D-9
D15 C-9	Q17 D-9
D16 C-9	Q18 D-9
D17 C-8	Q19 D-9
D21 J-8	Q20 E-5
D23 E-9	Q21 E-4
	Q22 F-5
	Q24 E-5
	Q25 E-3
IC1 I-4	
IC2 F-8	
IC3 J-3	
IC4 C-6	RB1 H-4
IC5 I-4	
IC7 D-4	RV1 J-4
IC8 E-2	RV2 D-7
IC9 F-6	RV3 B-6
IC10 G-3	RV4 H-8
IC11 F-3	RV5 I-8
IC12 J-8	
IC13 E-8	S1 I-5
IC14 H-3	S2 E-7
IC15 H-2	S3 G-2
IC16 F-8	S4 H-8
IC17 F-2	S5 H-7
IC18 D-5	
IC19 G-7	X1 G-4
IC20 E-6	
IC21 D-8	
L1 B-9	
L2 B-8	
L4 H-9	
L5 H-8	
L6 F-8	









AT-59 BOARD

注意:


1. DC電圧はデジタル電圧計による値。
 2. 波形写真、及びDC電圧は下記条件での測定。
 - ・本機にCA-537を接続する。
 - ・グレースケールチャートを撮影し、波形モニターにて、ビデオ出力の白レベルが100IREになる様にレンズ絞りをセットする。
- ・OUTPUT : CAM
 ・GAIN : 0dB
 ・WHITE BAL : PRE
 ・SHUTTER : OFF
 ・ZEBRA MARKER : OFF OFF
 ・PHASE : 0°

NOTE:

1. All voltage are DC, measured with a digital voltmeter.
 2. All waveforms are taken and DC voltage is measured in condition below.
 - ・Connect the camera adapter CA-537 to the camera.
 - ・Shoot the grayscale chart. Adjust lens iris so that a white level is 100IRE on the waveform monitor.
- ・OUTPUT : CAM
 ・GAIN : 0dB
 ・WHITE BAL : PRE
 ・SHUTTER : OFF
 ・ZEBRA MARKER : OFF OFF
 ・PHASE : 0°

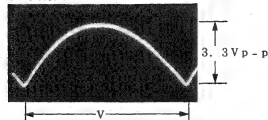CN2-11pin
BQ11-emitter
YIC7-8pin
H PARACN2-12pin
RIC4-5pin
NAM YIC9-62pin
4MHzCN2-13pin
GIC7-1pin
V PARA


AT-59 BOARD

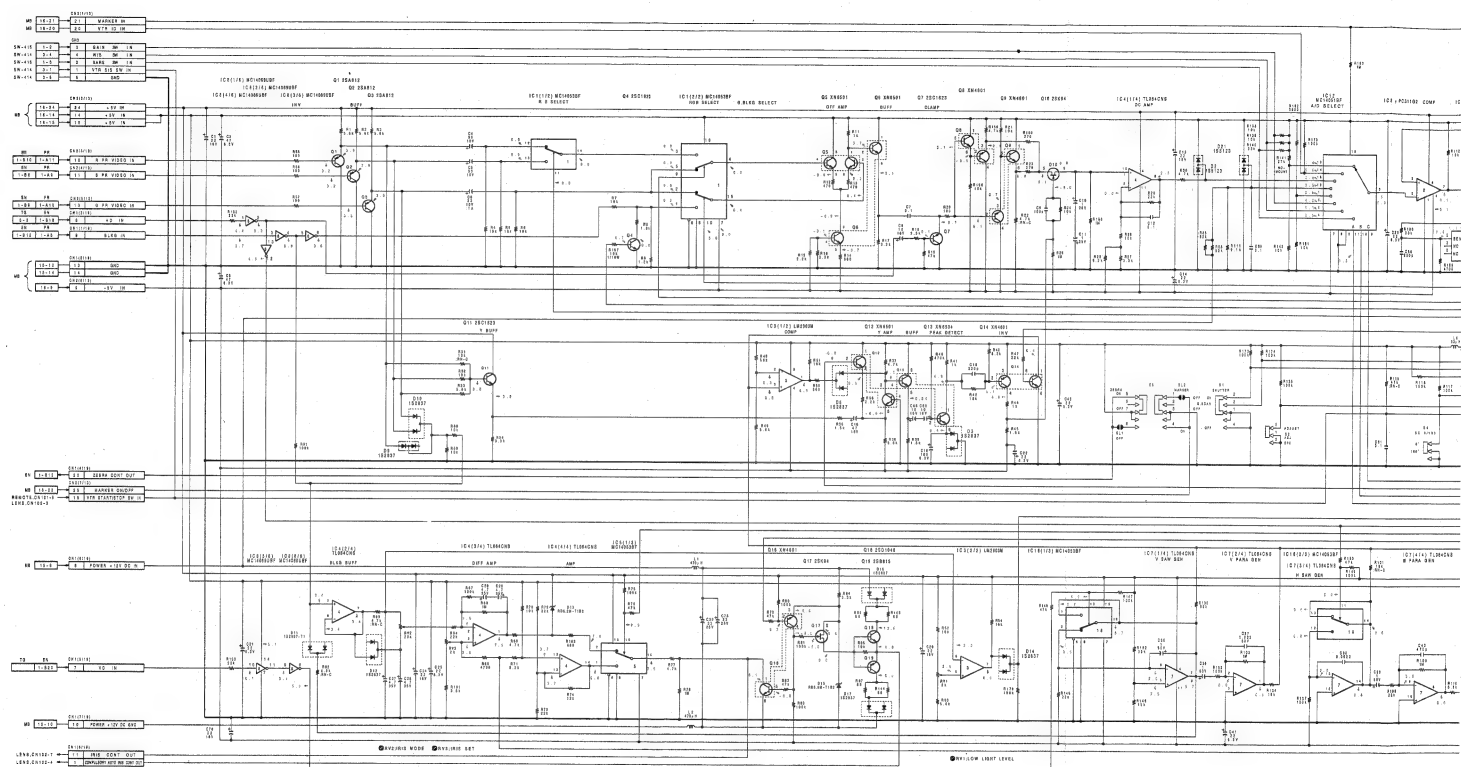

DXC-537 (J, U C)
DXC-537P (E K)


C - 63

C-64

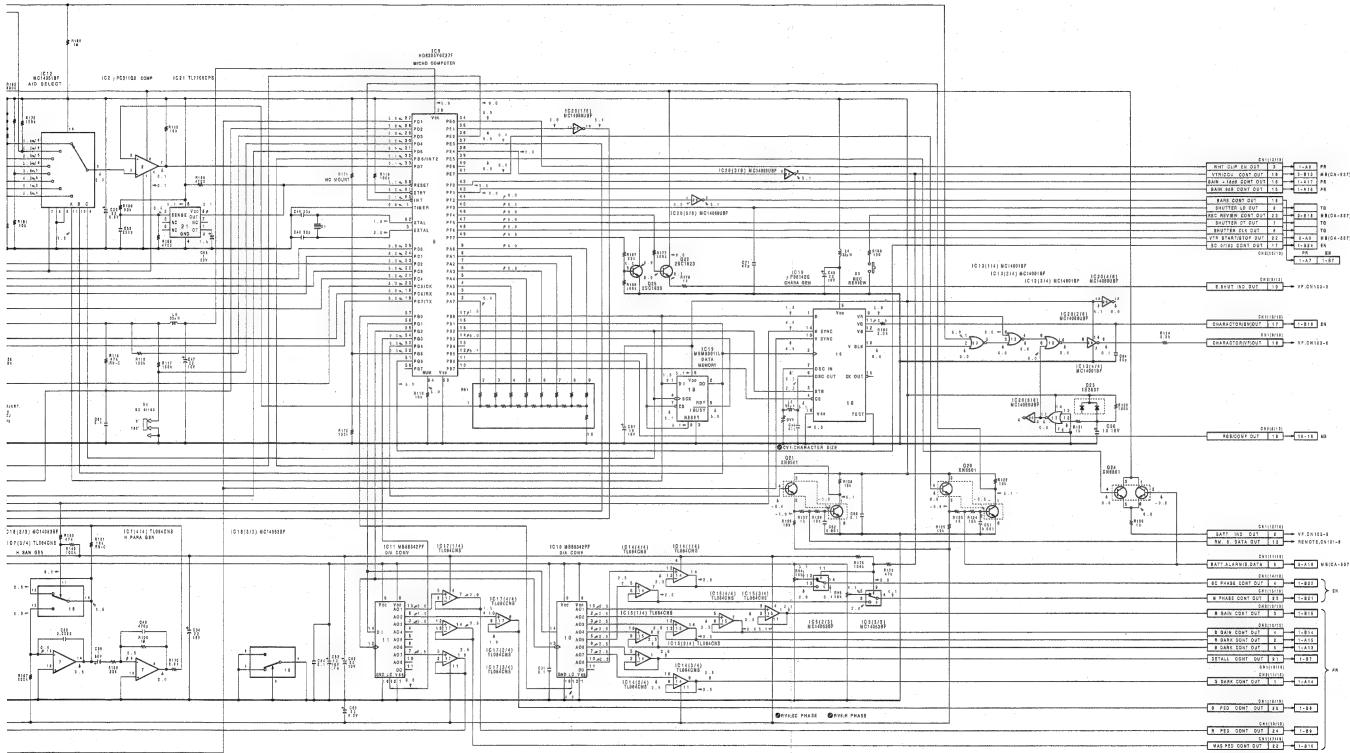


AT-59 BOARD
DXC-537(J,U,C)
DXC-537P(EK)

SW-414 BOARD

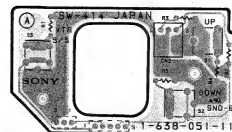

1-638-051-11 COMPONENT SIDE

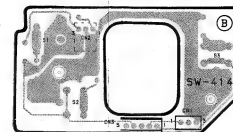

1-638-051-11 SOLDERING SIDE

SW-415 BOARD




1-638-052-11 COMPONENT SIDE



1-638-052-11 SOLDERING SIDE

CN-439 BOARD



1-638-047-11 COMPONENT SIDE

MB-307 BO

MB-307(1-638

CN1 F-5
 CN2 F-7
 CN3 H-8
 CN4 D-6
 CN5 C-4
 CN6 I-1
 CN7 C-5
 CN8 D-5
 CN9 D-5
 CN10 E-1
 CN11 G-1
 CN12 J-6
 CN13 I-7
 CN14 D-7
 CN15 E-3
 CN16 H-3
 CN19 A-6
 CN20 B-8
 CN21 A-5

D1 H-4
 D2 C-7

IC1 B-8
 IC2 E-2
 IC3 A-6
 IC5 H-1

L1 B-7
 L2 B-6
 L3 D-3

Q1 B-8
 Q2 G-5
 Q3 B-8
 Q4 B-7
 Q5 B-6
 Q6 A-7
 Q8 H-2
 Q9 H-2
 Q10 H-2
 Q11 I-2
 Q12 I-2

S1 C-2
 S2 B-5

VCO1 B-6

MB-307 BOARD

S/N J: 30001 through 30040
UC: 10001 through 10060
EK: 40001 through 40050

CN-439, MB-307
SW-414, SW-415 FRAME

CN-439, MB-307
FRAME SW-414, SW-415

MB-307(1-638-050-11)

CN1 F-5
CN2 F-7
CN3 H-8
CN4 D-6
CN5 C-4
CN6 I-1
CN7 C-5
CN8 D-5
CN9 D-5
CN10 E-1
CN11 G-1
CN12 J-8
CN13 I-7
CN14 D-7
CN15 E-3
CN16 H-3
CN19 A-6
CN20 B-8
CN21 A-5

D1 H-4
D2 C-7


IC1 B-8
IC2 E-2
IC3 A-6
IC5 H-1

L1 B-7
L2 B-6
L3 D-3

Q1 B-8
Q2 G-5
Q3 B-8
Q4 B-7
Q5 B-6
Q6 A-7
Q8 H-2
Q9 H-2
Q10 H-2
Q11 I-2
Q12 I-2


S1 C-2
S2 B-5

VCO1 B-6

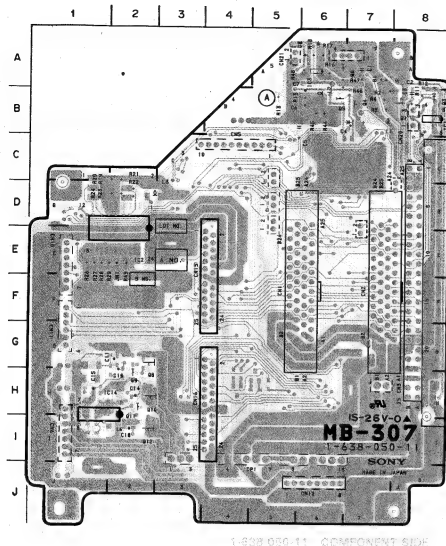

1-638-050-11 COMPONENT SIDE

C-69(a)

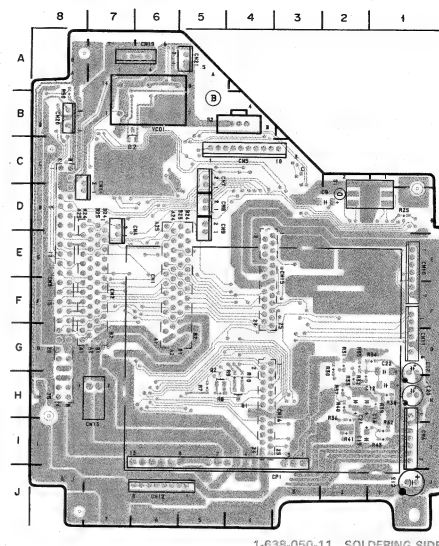

1-638-050-11 SOLDERING SIDE

C-70(a)

MB-307(1-638-050-11)

CN1 F-5
CN2 F-7
CN3 H-8
CN4 D-6
CN5 C-4
CN6 I-1
CN7 C-5
CN8 D-5
CN9 D-5
CN10 E-1
CN11 G-1
CN12 J-8
CN13 I-7
CN14 D-7
CN15 E-3
CN16 H-3
CN19 A-6
CN20 B-8
CN21 A-5

D1 H-4
D2 C-7

IC1 B-8
IC2 E-2
IC3 A-6
IC5 H-1

L1 B-8
L2 B-6
L3 D-3



Q1 B-7
Q2 G-5
Q3 B-8
Q4 B-7
Q5 B-6
Q6 A-7
Q8 H-2
Q9 H-2
Q10 H-2
Q11 I-2
Q12 I-2

S1 C-2
S2 B-5


VCO1 B-6

DXC-537 (J,UC)
DXC-537P (EK)


SW-414 BOARD

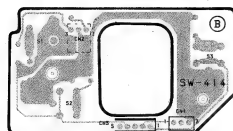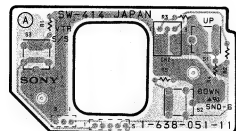

SW-415 BOARD



CN-439 BOARD



MB-307 BOARD

S/N J: 30041 and higher
UC: 10061 and higher
EK: 40051 and higher

MB-307(1-638-050-12)

- CN1 F-5
- CN2 F-7
- CN3 H-8
- CN4 D-6
- CN5 C-4
- CN6 I-1
- CN7 C-5
- CN8 D-5
- CN9 D-5
- CN10 E-1
- CN11 G-1
- CN12 J-6
- CN13 I-7
- CN14 D-7
- CN15 E-3
- CN16 H-3
- CN19 A-6
- CN20 B-8
- CN21 A-5

- D1 H-4
- D2 C-7


- IC1 B-8
- IC2 E-2
- IC3 A-6
- IC5 H-1

- L1 B-7
- L2 B-6
- L3 D-3

- Q1 B-8
- Q2 G-5
- Q3 B-8
- Q4 B-7
- Q5 B-6
- Q6 A-7
- Q8 H-2
- Q9 H-2
- Q10 H-2
- Q11 I-2
- Q12 I-2

- S1 C-2
- S2 B-5

- VCO1 B-8

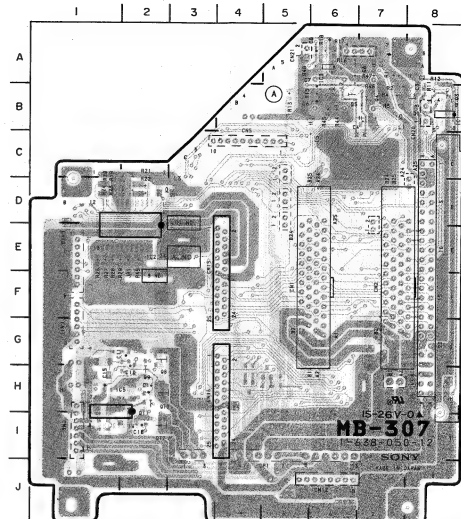

MB-307 BOARD

S/N J; 30041 and higher
UC; 10061 and higher
EK; 40051 and higher

MB-307(1-638-050-12)

CN1 F-5
CN2 F-7
CN3 H-8
CN4 D-6
CN5 C-4
CN6 I-1
CN7 C-5
CN8 D-5
CN9 D-5
CN10 E-1
CN11 G-1
CN12 J-6
CN13 I-7
CN14 D-7
CN15 E-3
CN16 H-3
CN19 A-6
CN20 B-8
CN21 A-5

D1 H-4
D2 C-7


IC1 B-8
IC2 E-2
IC3 A-6
ICS H-1

L1 B-7
L2 B-6
L3 D-3

Q1 B-8
Q2 G-5
Q3 B-8
Q4 B-7
Q5 B-6
Q6 A-7
Q8 H-2
Q9 H-2
Q10 H-2
Q11 I-2
Q12 I-2

S1 C-2
S2 B-5

VCO1 B-6

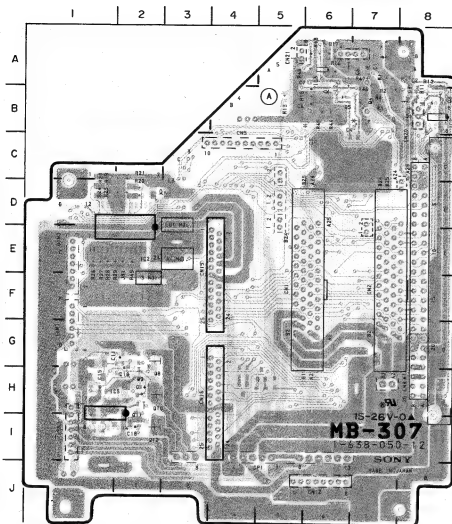

1-638-050-12 COMPONENT SIDE

C-69(b)

CN-439,MB-307
SW-414,SW-415 FRAME

CN-439,MB-307
FRAME SW-414,SW-415

MB-307(1-638-050-12)

CN1 F-5
CN2 F-7
CN3 H-8
CN4 D-6
CN5 C-4
CN6 I-1
CN7 C-5
CN8 D-5
CN9 D-5
CN10 E-1
CN11 G-1
CN12 J-6
CN13 I-7
CN14 D-7
CN15 E-3
CN16 H-3
CN19 A-6
CN20 B-8
CN21 A-5

D1 H-4
D2 C-7


IC1 B-8
IC2 E-2
IC3 A-6
ICS H-1

L1 B-7
L2 B-6
L3 D-3

Q1 B-8
Q2 G-5
Q3 B-8
Q4 B-7
Q5 B-6
Q6 A-7
Q8 H-2
Q9 H-2
Q10 H-2
Q11 I-2
Q12 I-2

S1 C-2
S2 B-5

VCO1 B-6

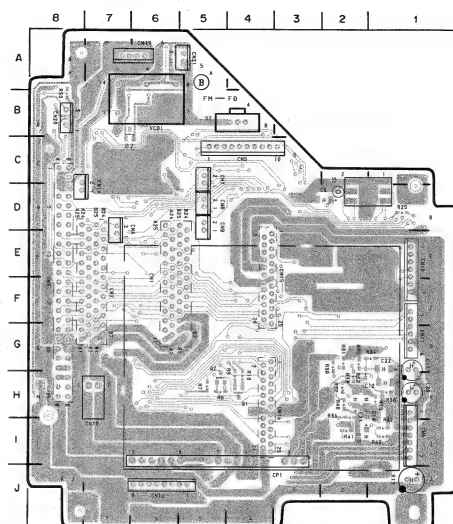

1-638-050-12 SOLDERING SIDE

C-70(b)

DXC-537 (J,UC)
DXC-537P (EK)

FRAME
MB-307 BOARD
SW-414 BOARD
SW-415 BOARD

MB-307
SW-414, SW-415 FRAME

FRAME MB-307
SW-414, SW-415

DXC-537 (J,U,C)
DXC-537P (E,K)

C-71

AT-59

C-72

SW-414

A

B

C

D


E

F

G

H

I

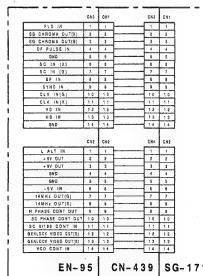

FRAME WIRING
MB-307 BOARD
SW-414 BOARD
SW-415 BOARD
DXC-537 (JUC)
DXC-537P(EK)


C-73

B-DXC537-FRAME/M

SECTION D SPARE PARTS

PARTS INFORMATION

1. Safety Related Component Warning


Components identified by shading marked with  on the schematic diagrams, exploded views and electrical spare parts list are critical to safe operation. Replace these components with Sony parts whose parts numbers appear as shown in this manual or in service manual supplements published by Sony.

2. Replacement Parts supplied from Sony Parts Center will sometimes have different shape and outside view from the parts which actually in use. This is due to **"accommodating the improved parts and/or engineering changes" or "standardization of genuine parts."** This manual's exploded view and electrical spare parts lists are indicating the parts numbers of "the standardized genuine parts at present." Regarding engineering parts and diagrams changes in our engineering department, refer to SONY service bulletins and service manual supplements.
3. The parts marked with "S" in the SP column of the exploded views and electrical spare parts list are normally required for routine service work. Orders for parts marked with "O" will be processed, but allow for additional delivery time.
4. Item with no parts number and/or no description are not stocked because they are seldom required for routine service.
5. All capacitors are in micro farads unless otherwise specified.
All inductors are in micro henries unless otherwise specified.
All resistors are in ohms.


 CCD BLOCK

No.	Part No.	SP Description
1	A-7575-164-A s	CCD UNIT-C537 (N) (for DXC-537)
	A-7575-165-A s	CCD UNIT-C537P (P) (for DXC-537P)
2	1-547-474-11 o	FILTER UNIT, OPTICS
3	3-168-347-01 o	HOLDER, CABLE
4	3-168-368-01 o	PANEL, FRONT
5	3-678-629-00 s	LEVER, MOUNT
6	3-688-781-02 s	KNOB, FILTER
7	3-699-048-01 s	CAP, MOUNT
8	3-701-506-01 s	SET SCREW, DOUBLE POINT 3X4
9	3-701-822-00 o	HOLDER, WIRE
10	7-621-770-87 s	SCREW +B 2.6X5
11	7-621-775-08 s	SCREW +B 2.6X3
12	7-627-452-38 s	SCREW, PRECISION +K 2X5
13	7-627-556-28 s	SCREW +P 2.6X3.5
14	7-682-547-09 s	SCREW +B 3X6


CCD BLOCK

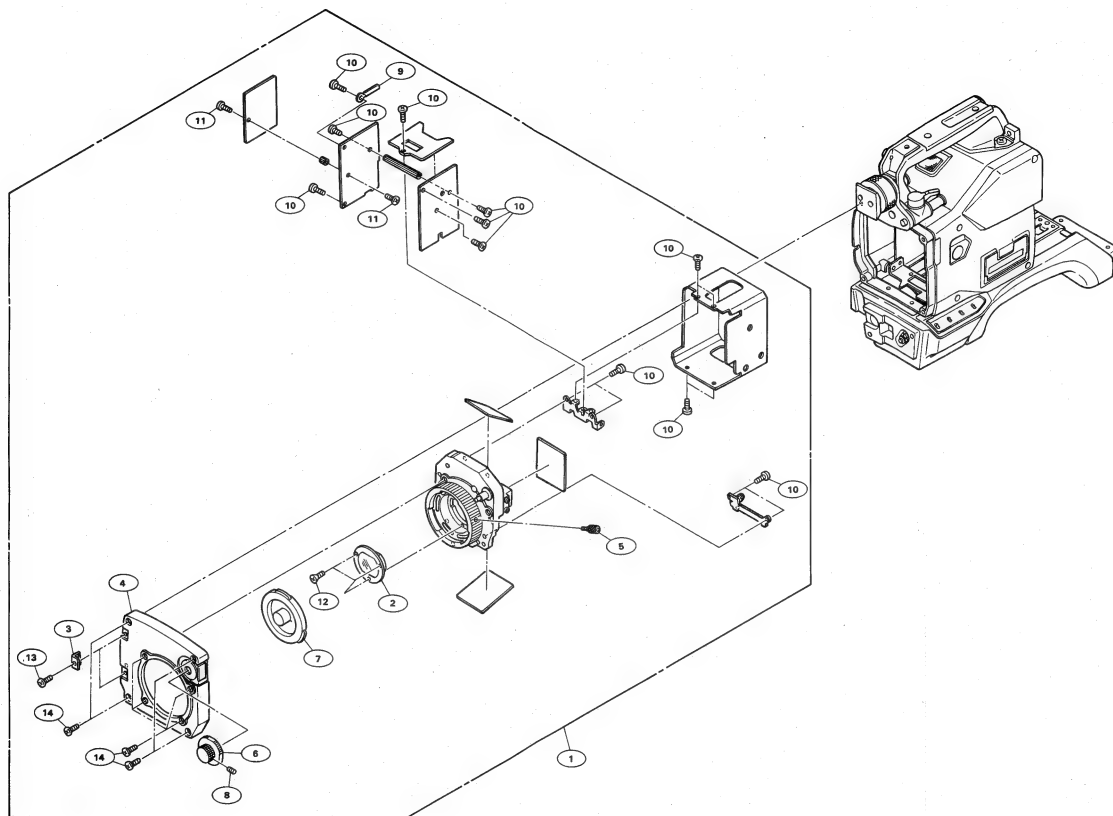

CHASSIS (1) BLOCK

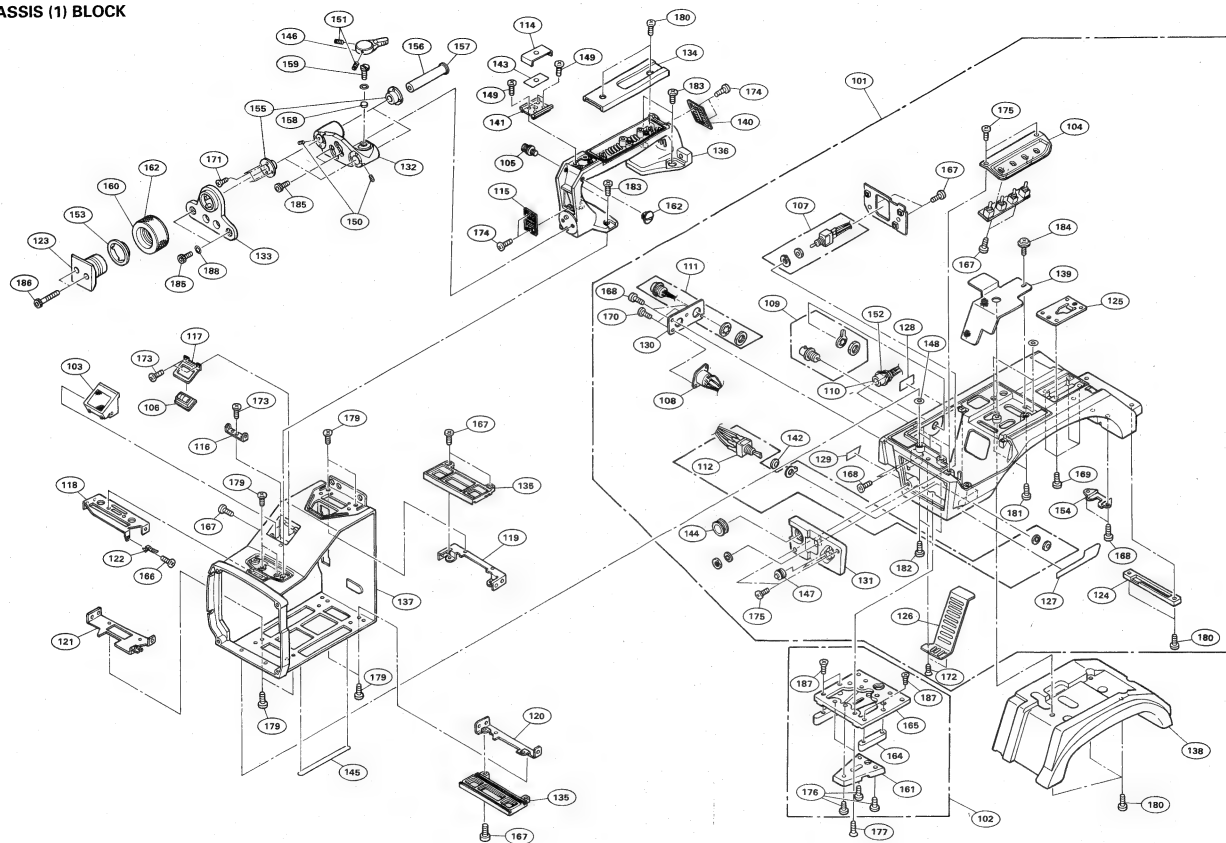

CHASSIS (2) BLOCK

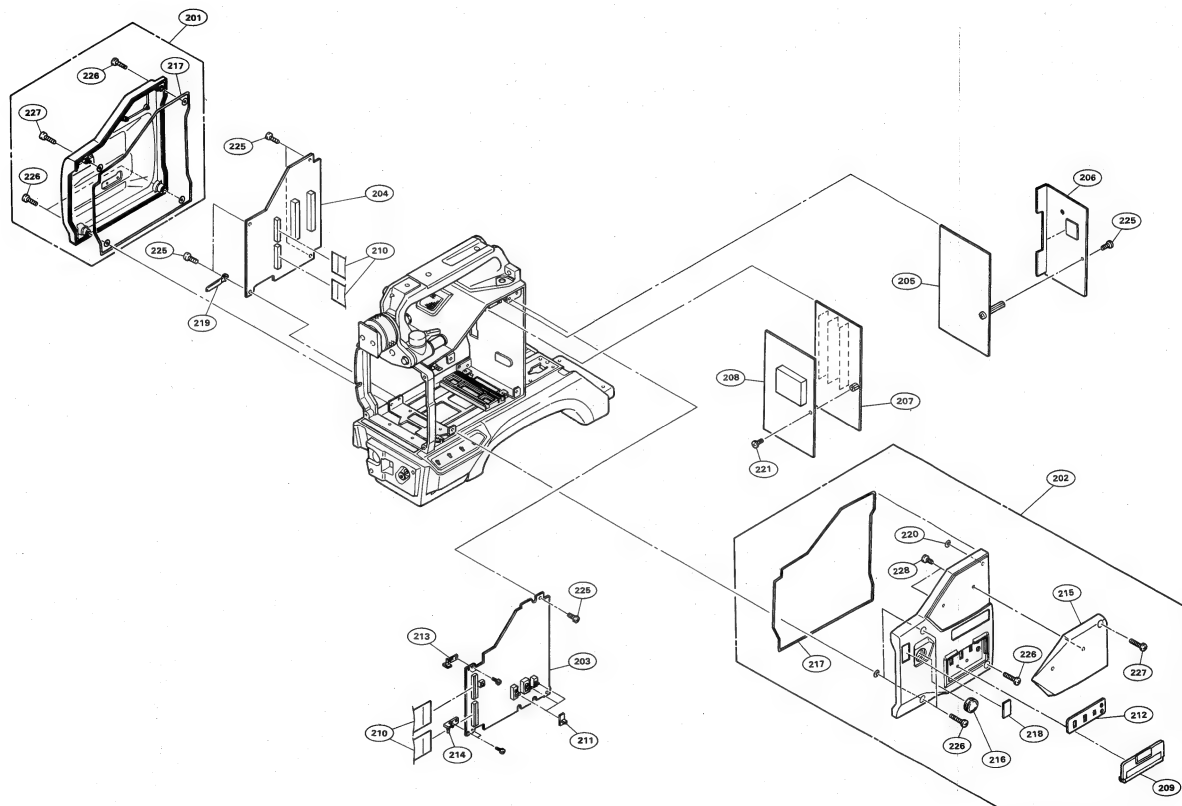

PACKING MATERIAL AND ACCESSORIES

DXC-537K

Q'ty	Part No.	SP Description
1pc	3-169-725-01	o CARTON, INDIVIDUAL
1pc	3-752-841-22	s MANUAL, INSTRUCTION "ENGLISH"
1pc	3-752-841-32	s MANUAL, INSTRUCTION "FRENCH"
1pc	3-764-889-01	o CHART, ADJUSTMENT

DXC-537L

Q'ty	Part No.	SP Description
1pc	3-169-727-01	o CARTON, INDIVIDUAL
1pc	3-752-841-22	s MANUAL, INSTRUCTION "ENGLISH"
1pc	3-752-841-32	s MANUAL, INSTRUCTION "FRENCH"
1pc	3-764-889-01	o CHART, ADJUSTMENT

DXC-537H

Q'ty	Part No.	SP Description
1pc	3-171-970-01	o CARTON, INDIVIDUAL
1pc	3-171-972-01	o CUSHION (UPPER)
1pc	3-171-973-01	o CUSHION (LOWER)
1pc	3-752-841-22	s MANUAL, INSTRUCTION "ENGLISH"
1pc	3-752-841-32	s MANUAL, INSTRUCTION "FRENCH"
1pc	3-764-889-01	o CHART, ADJUSTMENT

EVW-537K

Q'ty	Part No.	SP Description
1pc	3-169-721-01	o INDIVIDUAL CARTON
1pc	3-698-917-01	o BELT, SHOULDER
1pc	3-744-355-01	o SHAFT, GUIDE
1pc	3-752-841-22	s MANUAL, INSTRUCTION "ENGLISH"
1pc	3-752-841-32	s MANUAL, INSTRUCTION "FRENCH"
1pc	3-752-874-01	s MANUAL, INSTRUCTION "W.W"
1pc	3-764-889-01	o CHART, ADJUSTMENT
2pcs	7-882-500-09	s SCREW # 4X6
2pcs	7-882-553-09	s SCREW # 3 4X12

AT-59 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7915-282-A	o MOUNTED CIRCUIT BOARD, AT-59
3pcs	3-167-445-02	s KNOB, SWITCH
1pc	3-168-353-01	o BRACKET (UPPER), AT
1pc	3-168-354-01	o BRACKET (LOWER), AT
4pcs	7-621-772-18	s SCREW *B 2X4
C1	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C2	1-126-391-12	s ELECT, CHIP 47uF 20% 6.3V
C3	1-126-391-11	s ELECT, CHIP 47uF 20% 6.3V
C4	1-126-393-11	s ELECT 33uF 20% 10V
C5	1-126-393-11	s ELECT 33uF 20% 10V
C6	1-126-393-11	s ELECT 33uF 20% 10V
C8	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C9	1-163-251-11	s CERAMIC 100PF 5% 50V
C10	1-135-177-21	s TANTALUM CHIP 1uF 10% 25V
C11	1-135-177-21	s TANTALUM CHIP 1uF 10% 25V
C13	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C14	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C16	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C18	1-126-392-11	s ELECT, CHIP 100uF 20% 6.3V
C20	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C21	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C22	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C23	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C24	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C25	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C26	1-126-398-11	s ELECT, CHIP 4.7uF 20% 35V
C27	1-126-398-11	s ELECT, CHIP 4.7uF 20% 35V
C28	1-126-398-11	s ELECT, CHIP 4.7uF 20% 35V
C29	1-126-398-11	s ELECT, CHIP 4.7uF 20% 35V
C30	1-126-397-11	s ELECT, CHIP 33uF 20% 25V
C34	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C35	1-126-401-11	s ELECT, CHIP 1uF 20% 50V
C36	1-126-401-11	s ELECT, CHIP 1uF 20% 50V
C39	1-126-401-11	s ELECT, CHIP 1uF 20% 50V
C41	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C43	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C46	1-135-161-21	s TANTALUM, CHIP 22uF 10% 10V
C47	1-135-161-21	s TANTALUM, CHIP 22uF 10% 10V
C50	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C53	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C55	1-126-401-11	s ELECT, CHIP 1uF 20% 50V
C62	1-126-395-11	s ELECT, CHIP 22uF 20% 16V
C63	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C67	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C68	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C69	1-126-394-11	s ELECT, CHIP 10uF 20% 16V
C70	1-126-390-11	s ELECT, CHIP 22uF 20% 6.3V
C78	1-126-397-11	s ELECT, CHIP 33uF 20% 25V
CN1	1-580-834-11	s CONNECTOR, FPC (21F) 25P
CN2	1-580-834-11	s CONNECTOR, FPC (21F) 25P
CN3	1-506-470-11	o CONNECTOR, 5P, MALE
CV1	1-141-368-11	s
D2	8-719-800-76	s DIODE 1SS226
D3	8-719-400-18	s DIODE MA152WK
D5	8-719-400-18	s DIODE MA152WK
D9	8-719-400-18	s DIODE MA152WK
D10	8-719-400-18	s DIODE MA152WK

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

DXC-637 (UC)
DXC-637P (EK)

(AT-59 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
D11	8-719-400-18	s DIODE MA152WK
D12	8-719-400-18	s DIODE MA152WK
D13	8-719-106-08	s DIODE RD6.2M-B2
D14	8-719-400-18	s DIODE MA152WK
D15	8-719-105-91	s DIODE RD5.6M-B2
D16	8-719-400-18	s DIODE MA152WK
D17	8-719-400-18	s DIODE MA152WK
D21	8-719-800-76	s DIODE 1SS226
D23	8-719-400-18	s DIODE MA152WK
IC1	8-759-300-71	s IC MC14053BF
IC2	8-759-101-12	s IC UPC311G2
IC3	8-759-981-65	s IC LM2903M
IC4	8-759-906-54	s IC TL064CNS
IC5	8-759-300-71	s IC MC14053BF
IC7	8-759-906-54	s IC TL064CNS
IC8	8-759-009-10	s IC MC14089UBF
IC9	8-759-323-64	s IC DS30C030E27F
IC10	8-759-977-80	s IC MB89342PF
IC11	8-759-977-80	s IC MB89342PF
IC12	8-759-009-05	s IC MC14051BF
IC13	8-759-008-74	s IC MC14051BF
IC14	8-759-906-54	s IC TL064CNS
IC15	8-759-906-54	s IC TL064CNS
IC16	8-759-112-72	s IC UPD6142G-101
IC17	8-759-906-54	s IC TL064CNS
IC18	8-759-300-71	s IC MC14053BF
IC19	8-759-633-29	s IC MM80011L
IC20	8-759-009-10	s IC MC14089UBF
IC21	8-759-918-65	s IC TL7700CPS
L1	1-408-797-11	s CHIP 470uH
L2	1-408-797-11	s CHIP 470uH
L4	1-408-783-00	s CHIP 33uH
L5	1-408-786-21	s INDUCTOR CHIP 56uH
L6	1-408-783-00	s CHIP 33uH
Q1	8-729-216-22	s TRANSISTOR 2SA1162
Q2	8-729-216-22	s TRANSISTOR 2SA1162
Q3	8-729-216-22	s TRANSISTOR 2SA1162
Q4	8-729-100-66	s TRANSISTOR 2SC1623
Q5	8-729-402-19	s TRANSISTOR XNC501
Q6	8-729-402-19	s TRANSISTOR XNC501
Q7	8-729-100-66	s TRANSISTOR 2SC1623
Q8	8-729-402-84	s TRANSISTOR XN4601
Q9	8-729-402-84	s TRANSISTOR XN4601
Q10	8-729-141-53	s TRANSISTOR 2SK94-X2X3K4
Q11	8-729-100-66	s TRANSISTOR 2SC1623
Q12	8-729-402-19	s TRANSISTOR XNC501
Q13	8-729-403-32	s TRANSISTOR XNC534
Q14	8-729-402-84	s TRANSISTOR XN4601
Q16	8-729-402-84	s TRANSISTOR XN4601
Q17	8-729-141-53	s TRANSISTOR 2SK94-X2X3K4
Q18	8-729-800-37	s TRANSISTOR 2SD1048-X7
Q19	8-729-807-87	s TRANSISTOR 2SR1295-U16
Q20	8-729-402-19	s TRANSISTOR XNC501
Q21	8-729-402-19	s TRANSISTOR XNC501
Q22	8-729-100-66	s TRANSISTOR 2SC1623
Q24	8-729-402-19	s TRANSISTOR XNC501
Q25	8-729-100-66	s TRANSISTOR 2SC1623
R58	1-216-697-11	s METAL, CHIP 82K 0.5% 1/10W

(AT-59 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
R65	1-216-697-11	METAL, CHIP 82K 0.5% 1/10W
R111	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R112	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R114	1-216-663-11	METAL, CHIP 3.3K 0.5% 1/10W
R115	1-216-691-11	METAL, CHIP 47K 0.5% 1/10W
R138	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R139	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R140	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R141	1-216-665-11	METAL, CHIP 27K 0.5% 1/10W
R142	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R181	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R182	1-216-665-11	METAL, CHIP 3.9K 0.5% 1/10W
RB1	1-231-387-00	COMPOSITION CIRCUIT BLOCK
RV1	1-237-034-11	RES, ADJ, METAL 2K
RV2	1-237-037-11	RES, ADJ, METAL 20K
RV3	1-237-034-11	RES, ADJ, METAL 2K
RV4	1-237-518-21	RES, ADJ, METAL 10K
RV5	1-237-518-21	RES, ADJ, METAL 10K
S1	1-570-854-11	SWITCH, SLIDE
S2	1-570-859-11	SWITCH, SLIDE
S3	1-554-174-00	SWITCH, TACTILE
S4	1-570-865-11	SWITCH, SLIDE
S5	1-570-836-11	SWITCH, SLIDE
X1	1-567-192-11	RESONATOR, CERAMIC 4.00MHz

CN-439 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	1-638-047-11	PRINTED CIRCUIT BOARD, CN-439
CN1	1-566-260-21	CONNECTOR, BOARD TO BOARD 14P
CN2	1-566-260-21	CONNECTOR, BOARD TO BOARD 14P
CN3	1-566-098-11	PIN, BOARD TO BOARD 14P
CN4	1-566-098-11	PIN, BOARD TO BOARD 14P

EN-95 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7515-285-A	MOUNTED CIRCUIT BOARD, EN-95 (U)
1pc	2-280-622-41	SUPPORT (M3), HEXAGON
1pc	7-682-546-04	SCREW +B 3X5
C1	1-126-395-11	ELECT, CHIP 220f 20% 16V
C4	1-126-398-11	ELECT, CHIP 4.7uF 20% 35V
C5	1-135-158-21	TANTALUM 150f 10% 4V
C6	1-135-149-21	TANTALUM, CHIP 2.2uF 10% 10V
C7	1-163-251-11	CERAMIC 100PF 5% 50V
C8	1-135-181-21	TANTAL 4.7uF 10% 6.3V
C11	1-126-398-11	ELECT, CHIP 4.7uF 20% 35V
C12	1-135-149-21	TANTALUM, CHIP 2.2uF 10% 10V
C13	1-163-251-11	CERAMIC 100PF 5% 50V
C14	1-135-181-21	TANTAL 4.7uF 10% 6.3V
C15	1-126-395-11	ELECT, CHIP 220f 20% 16V
C21	1-126-394-11	ELECT, CHIP 10uF 20% 16V
C22	1-126-395-11	ELECT, CHIP 220f 20% 16V
C23	1-107-048-00	MICA 6.8PF 500V
C24	1-126-393-11	ELECT 33uF 20% 10V
C25	1-126-394-11	ELECT, CHIP 10uF 20% 16V
C26	1-126-394-11	ELECT, CHIP 10uF 20% 16V
C28	1-163-086-00	CERAMIC, CHIP 3PF 50V
C30	1-126-396-11	ELECT, CHIP 470f 20% 16V
C31	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C34	1-163-115-00	CERAMIC, CHIP 82PF 5% 50V
C36	1-126-393-11	ELECT 33uF 20% 10V
C37	1-126-393-11	ELECT 33uF 20% 10V
C44	1-126-176-11	ELECT 220uF 20% 10V
C46	1-126-393-11	ELECT 33uF 20% 10V
C48	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C50	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C52	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C53	1-163-251-11	CERAMIC 100PF 5% 50V
C57	1-135-162-21	TANTAL 33uF 10% 6.3V
C58	1-163-235-11	CERAMIC 22PF 5% 50V
C60	1-163-227-11	CERAMIC 10PF 5% 50V
C61	1-126-395-11	ELECT, CHIP 220f 20% 16V
C64	1-163-251-11	CERAMIC 100PF 5% 50V
C65	1-126-396-11	ELECT, CHIP 470f 20% 16V
C66	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C67	1-126-393-11	ELECT 33uF 20% 10V
C70	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C71	1-126-393-11	ELECT 33uF 20% 10V
C72	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C76	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C77	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C78	1-126-391-11	ELECT, CHIP 470f 20% 6.3V
C80	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C87	1-135-216-11	TANTAL 10uF 20% 10V
C90	1-135-216-11	TANTAL 10uF 20% 10V
C91	1-126-391-11	ELECT, CHIP 47uF 20% 6.3V
CN1	1-565-780-11	CONNECTOR, TX(P,L)(PC BOARD)50P
D1	8-719-800-76	DIODE 1SS225
D3	8-719-800-76	DIODE 1SS226
DL1	1-415-813-11	DELAY LINE
FL1	1-235-161-00	FILTER, BANDPASS 3.58MHz

(EN-95 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
IC1	8-759-906-59	IC CX22017
IC2	8-759-925-74	IC SN74HC04ANS
IC4	8-759-981-65	IC LM2903M
IC5	8-759-907-21	IC CX-7969
IC6	8-759-911-77	IC CX-7968A
IC8	8-759-234-20	IC TC7S08F
IC9	8-759-710-24	IC NJM319M
IC10	8-759-209-15	IC TC4SU69F
L1	1-408-785-21	CHIP 47uH
L2	1-408-795-21	CHIP 330uH
L3	1-408-795-21	CHIP 330uH
L4	1-408-785-21	CHIP 47uH
L6	1-408-785-21	CHIP 47uH
L8	1-408-785-21	CHIP 47uH
L9	1-408-788-21	INDUCTOR CHIP 82uH
L10	1-408-783-00	CHIP 33uH
L12	1-408-785-21	CHIP 47uH
L14	1-408-783-00	CHIP 33uH
LVI	1-408-844-00	INDUCTOR, VAR, 22uH
Q1	8-729-402-19	TRANSISTOR XN6501
Q2	8-729-402-19	TRANSISTOR XN6501
Q4	8-729-402-19	TRANSISTOR XN6501
Q5	8-729-402-19	TRANSISTOR XN6501
Q7	8-729-402-19	TRANSISTOR XN6501
Q8	8-729-402-19	TRANSISTOR XN6501
Q9	8-729-402-19	TRANSISTOR XN6501
Q10	8-729-122-53	TRANSISTOR 2SA1226
Q11	8-729-402-19	TRANSISTOR XN6501
Q12	8-729-402-78	TRANSISTOR XN6401
Q13	8-729-402-84	TRANSISTOR XN4601
Q14	8-729-216-22	TRANSISTOR 2SA1162
Q15	8-729-100-66	TRANSISTOR 2SC1623
Q16	8-729-403-32	TRANSISTOR XN6534
Q17	8-729-403-32	TRANSISTOR XN6534
Q18	8-729-216-22	TRANSISTOR 2SA1162
Q19	8-729-402-19	TRANSISTOR XN6501
Q20	8-729-402-78	TRANSISTOR XN6401
Q22	8-729-403-32	TRANSISTOR XN6534
Q24	8-729-402-19	TRANSISTOR XN6501
Q25	8-729-402-78	TRANSISTOR XN6401
Q27	8-729-403-29	TRANSISTOR XN6435
Q28	8-729-402-84	TRANSISTOR XN4601
Q29	8-729-403-29	TRANSISTOR XN6435
Q30	8-729-402-78	TRANSISTOR XN6401
Q31	8-729-402-78	TRANSISTOR XN6401
Q32	8-729-402-84	TRANSISTOR XN4601
Q33	8-729-216-22	TRANSISTOR 2SA1162
Q34	8-729-402-19	TRANSISTOR XN6501
Q35	8-729-402-19	TRANSISTOR XN6501
Q36	8-729-216-22	TRANSISTOR 2SA1162
Q37	8-729-402-78	TRANSISTOR XN6401
Q38	8-729-402-19	TRANSISTOR XN6501
Q39	8-729-402-19	TRANSISTOR XN6501
Q40	8-729-216-22	TRANSISTOR 2SA1162
Q41	8-729-402-78	TRANSISTOR XN6401
Q42	8-729-402-19	TRANSISTOR XN6501
Q43	8-729-402-19	TRANSISTOR XN6501
Q44	8-729-216-22	TRANSISTOR 2SA1162

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

DXC-537 (UC)
DXC-537P (EK)

(EN-95 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
Q45	8-729-402-78	TRANSISTOR XN6401
Q46	8-729-402-19	TRANSISTOR XN6501
Q47	8-729-402-84	TRANSISTOR XN4601
Q48	8-729-100-66	TRANSISTOR 2SC1623
Q49	8-729-100-66	TRANSISTOR 2SC1623
Q50	8-729-402-84	TRANSISTOR XN4601
R1	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R2	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R3	1-216-658-11	METAL, CHIP 2K 0.5% 1/10W
R5	1-216-681-11	METAL, CHIP 2.7K 0.5% 1/10W
R9	1-216-639-11	METAL, CHIP 330 0.5% 1/10W
R13	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R14	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
R15	1-216-683-11	METAL, CHIP 1K 0.5% 1/10W
R16	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R17	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R18	1-216-658-11	METAL, CHIP 2K 0.5% 1/10W
R21	1-216-656-11	METAL, CHIP 1.5K 0.5% 1/10W
R27	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R28	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
R29	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
R33	1-216-644-11	METAL, CHIP 510 0.5% 1/10W
R36	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R37	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R38	1-216-655-11	METAL, CHIP 1.5K 0.5% 1/10W
R42	1-216-665-11	METAL, CHIP 3.9K 0.5% 1/10W
R43	1-216-681-11	METAL, CHIP 18K 0.5% 1/10W
R47	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R48	1-216-659-11	METAL, CHIP 2.2K 0.5% 1/10W
R49	1-216-660-11	METAL, CHIP 2.4K 0.5% 1/10W
R51	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R56	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R57	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R59	1-216-653-11	METAL, CHIP 3.3K 0.5% 1/10W
R71	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R72	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R73	1-216-641-11	METAL, CHIP 390 0.5% 1/10W
R76	1-216-699-11	METAL, CHIP 390 0.5% 1/10W
R77	1-216-669-11	METAL, CHIP 5.6K 0.5% 1/10W
R78	1-216-661-11	METAL, CHIP 2.7K 0.5% 1/10W
R89	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R90	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R93	1-216-641-11	METAL, CHIP 390 0.5% 1/10W
R94	1-216-659-11	METAL, CHIP 2.2K 0.5% 1/10W
R95	1-216-693-11	METAL, CHIP 56K 0.5% 1/10W
R96	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R97	1-216-687-11	METAL, CHIP 33K 0.5% 1/10W
R104	1-216-649-11	METAL, CHIP 820 0.5% 1/10W
R105	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
R107	1-216-679-11	METAL, CHIP 8.2K 0.5% 1/10W
R108	1-216-660-11	METAL, CHIP 2.4K 0.5% 1/10W
R109	1-216-677-11	METAL, CHIP 12K 0.5% 1/10W
R110	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R111	1-216-679-11	METAL, CHIP 8.2K 0.5% 1/10W
R112	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R115	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R118	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R119	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W

(EN-95 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
R123	1-216-656-11	METAL, CHIP 2K 0.5% 1/10W
R127	1-216-644-11	METAL, CHIP 510 0.5% 1/10W
R128	1-216-644-11	METAL, CHIP 510 0.5% 1/10W
R139	1-216-619-11	METAL, CHIP 47 0.5% 1/10W
R144	1-216-685-11	METAL, CHIP 27K 0.5% 1/10W
R145	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R146	1-216-676-11	METAL, CHIP 11K 0.5% 1/10W
R147	1-216-678-11	METAL, CHIP 13K 0.5% 1/10W
R153	1-216-623-11	METAL, CHIP 88 0.5% 1/10W
R159	1-216-685-11	METAL, CHIP 27K 0.5% 1/10W
R160	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R161	1-216-678-11	METAL, CHIP 13K 0.5% 1/10W
R162	1-216-676-11	METAL, CHIP 11K 0.5% 1/10W
R169	1-216-623-11	METAL, CHIP 88 0.5% 1/10W
R173	1-216-685-11	METAL, CHIP 27K 0.5% 1/10W
R174	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R175	1-216-678-11	METAL, CHIP 13K 0.5% 1/10W
R176	1-216-676-11	METAL, CHIP 11K 0.5% 1/10W
R183	1-216-623-11	METAL, CHIP 88 0.5% 1/10W
R202	1-216-681-11	METAL, CHIP 18K 0.5% 1/10W
R203	1-216-631-11	METAL, CHIP 150 0.5% 1/10W
R204	1-216-677-11	METAL, CHIP 12K 0.5% 1/10W
R231	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R233	1-216-685-11	METAL, CHIP 27K 0.5% 1/10W
RV1	1-241-263-41	RES, ADJ, CERMET 5K
RV2	1-237-032-11	RES, ADJ, METAL 500
RV4	1-241-263-41	RES, ADJ, CERMET 5K
RV5	1-237-033-11	RES, ADJ, METAL 1K
RV8	1-237-032-11	RES, ADJ, METAL 500
RV7	1-241-262-41	RES, ADJ, CERMET 2K
RV8	1-241-260-41	RES, ADJ, CERMET 500
RV9	1-241-265-41	RES, ADJ, CERMET 20K
RV10	1-237-035-11	RES, ADJ, METAL 5K
RV11	1-241-261-41	RES, ADJ, CERMET 1K
RV12	1-237-032-11	RES, ADJ, METAL 500
RV13	1-237-036-11	RES, ADJ, METAL 10K
RV14	1-237-036-11	RES, ADJ, METAL 10K
RV15	1-237-036-11	RES, ADJ, METAL 10K
RV16	1-241-264-41	RES, ADJ, CERMET 10K
RV17	1-241-260-41	RES, ADJ, CERMET 500
RV18	1-241-260-41	RES, ADJ, CERMET 500
S1	1-570-853-11	SWITCH, SLIDE
S2	1-570-863-11	SWITCH, SLIDE

IE-28 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7515-292-A	MOUNTED CIRCUIT BOARD, IE-28 (N)
C1	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C3	1-163-227-11	CERAMIC 10PF 5% 50V
C4	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C6	1-135-160-21	TANTAL 15uF 10% 16V
C7	1-135-160-21	TANTAL 15uF 10% 16V
C8	1-163-251-11	CERAMIC 100PF 5% 50V
C10	1-163-227-11	CERAMIC 10PF 5% 50V
C12	1-135-216-11	TANTAL 10uF 20% 10V
C15	1-126-396-11	ELECT, CHIP 47uF 20% 16V
C17	1-135-216-11	TANTAL 10uF 20% 10V
C19	1-135-216-11	TANTAL 10uF 20% 10V
C25	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C27	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C28	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C32	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C39	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C41	1-126-396-11	ELECT, CHIP 47uF 20% 16V
C42	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C46	1-135-210-11	TANTALUM 4.7uF 10% 10V
C47	1-135-210-11	TANTALUM 4.7uF 10% 10V
C48	1-163-251-11	CERAMIC 100PF 5% 50V
C50	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C51	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C52	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C53	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C56	1-135-216-11	TANTAL 10uF 20% 10V
C63	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C65	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C74	1-135-145-11	TANTALUM, CHIP 0.47uF 10% 35V
C75	1-135-145-11	TANTALUM, CHIP 0.47uF 10% 35V
C78	1-135-145-11	TANTALUM, CHIP 0.47uF 10% 35V
C77	1-135-145-11	TANTALUM, CHIP 0.47uF 10% 35V
C78	1-126-394-11	ELECT, CHIP 10uF 20% 16V
C82	1-135-216-11	TANTAL 10uF 20% 10V
C83	1-135-216-11	TANTAL 10uF 20% 10V
C90	1-135-216-11	TANTAL 10uF 20% 10V
C91	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C92	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C97	1-135-160-21	TANTAL 15uF 10% 16V
C94	1-135-216-11	TANTAL 10uF 20% 10V
C95	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C97	1-135-177-21	TANTALUM CHIP 1uF 10% 25V
C101	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C102	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C104	1-126-391-11	ELECT, CHIP 47uF 20% 6.3V
C105	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C106	1-163-086-00	CERAMIC, CHIP 3PF 50V
C107	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C108	1-126-395-11	ELECT, CHIP 22uF 20% 16V
C109	1-126-391-11	ELECT, CHIP 47uF 20% 6.3V
C111	1-135-166-21	TANTALUM, CHIP 47uF 10% 10V
C112	1-135-210-11	TANTALUM 4.7uF 10% 10V
C113	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C114	1-135-160-21	TANTAL 15uF 10% 16V
C116	1-126-392-11	ELECT, CHIP 100uF 20% 6.3V
C117	1-135-216-11	TANTAL 10uF 20% 10V
C118	1-135-216-11	TANTAL 10uF 20% 10V

(1E-28 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
C119	1-163-251-11	5 CERAMIC 100PF 5% 50V
C120	1-135-216-11	5 TANTAL 10uF 20% 10V
C121	1-135-216-11	5 TANTAL 10uF 20% 10V
C122	1-163-235-11	5 CERAMIC 22PF 5% 50V
CR2	1-566-270-21	1 CONNECTOR, BOARD TO BOARD 8P
CR3	1-566-276-21	1 CONNECTOR, BOARD TO BOARD 14P
CV1	1-141-370-11	1 CAP, CHIP TRIMMER
CV2	1-141-311-11	1 CAR, TRIMMER 20PF
CV3	1-141-311-11	1 CAR, TRIMMER 20PF
D1	8-719-800-76	5 DIODE 1SS226
D2	8-719-800-76	5 DIODE 1SS226
D3	8-719-800-76	5 DIODE 1SS226
D4	8-719-101-97	5 DIODE 1SS97-1
D5	8-719-101-97	5 DIODE 1SS97-1
DL1	1-415-814-11	1 DELAY LINE
DL2	1-415-502-11	1 DELAY LINE 100ns
DL3	1-415-433-11	1 DELAY LINE 30ns
IC1	8-759-981-51	1 IC MC1496M
IC5	8-759-981-51	1 IC MC1496M
IC6	8-759-300-71	1 IC MC14053BF
IC7	8-759-242-64	1 IC TC4053F
IC8	8-759-200-71	1 IC TC4017BF
IC9	8-759-200-84	1 IC TC4081BF
IC10	8-759-908-17	1 IC TL062CPS
IC11	8-759-300-71	1 IC MC14053BF
IC12	8-759-905-53	1 IC TC062CPS
IC13	8-759-242-64	1 IC TC4053F
L1	1-408-777-00	1 CHIP 10uH
L2	1-408-785-21	1 CHIP 47uH
L3	1-410-717-31	1 INDUCTOR, CHIP 100uH
L4	1-408-785-21	1 CHIP 47uH
L5	1-410-703-21	1 INDUCTOR, CHIP 6.8uH
L6	1-410-703-21	1 INDUCTOR, CHIP 6.8uH
L7	1-408-785-21	1 CHIP 47uH
L8	1-410-711-31	1 INDUCTOR CHIP 33uH
L9	1-410-711-31	1 INDUCTOR CHIP 33uH
L10	1-408-797-11	1 CHIP 470uH
L11	1-408-785-21	1 CHIP 47uH
L12	1-408-785-21	1 CHIP 47uH
L13	1-408-781-00	1 CHIP 22uH
Q1	8-729-100-66	5 TRANSISTOR 2SC1623
Q2	8-729-100-66	5 TRANSISTOR 2SC1623
Q3	8-729-175-73	5 TRANSISTOR 2SC2757
Q4	8-729-216-22	5 TRANSISTOR 2SA1162
Q5	8-729-216-22	5 TRANSISTOR 2SA1162
Q6	8-729-175-73	5 TRANSISTOR 2SC2757
Q7	8-729-175-73	5 TRANSISTOR 2SC2757
Q8	8-729-122-63	5 TRANSISTOR 2SA1226
Q9	8-729-175-73	5 TRANSISTOR 2SC2757
Q10	8-729-122-63	5 TRANSISTOR 2SA1226
Q11	8-729-175-73	5 TRANSISTOR 2SC2757
Q12	8-729-175-73	5 TRANSISTOR 2SC2757
Q13	8-729-109-44	5 TRANSISTOR 2SK94
Q14	8-729-175-73	5 TRANSISTOR 2SC2757
Q15	8-729-175-73	5 TRANSISTOR 2SC2757
Q16	8-729-122-63	5 TRANSISTOR 2SA1226
Q17	8-729-122-63	5 TRANSISTOR 2SA1226

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

DXC-637 (UC)
DXC-537P (EK)

(1E-28 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
Q18	8-729-122-63	5 TRANSISTOR 2SA1226
Q19	8-729-175-73	5 TRANSISTOR 2SC2757
Q21	8-729-175-73	5 TRANSISTOR 2SC2757
Q22	8-729-100-66	5 TRANSISTOR 2SC1623
Q23	8-729-216-22	5 TRANSISTOR 2SA1162
Q24	8-729-100-66	5 TRANSISTOR 2SC1623
Q25	8-729-100-66	5 TRANSISTOR 2SC1623
Q26	8-729-109-44	5 TRANSISTOR 2SK94
Q27	8-729-109-44	5 TRANSISTOR 2SK94
Q28	8-729-175-73	5 TRANSISTOR 2SC2757
Q29	8-729-175-73	5 TRANSISTOR 2SC2757
Q30	8-729-122-63	5 TRANSISTOR 2SA1226
Q31	8-729-175-73	5 TRANSISTOR 2SC2757
Q32	8-729-122-63	5 TRANSISTOR 2SA1226
Q33	8-729-175-73	5 TRANSISTOR 2SC2757
Q34	8-729-175-73	5 TRANSISTOR 2SC2757
Q35	8-729-109-44	5 TRANSISTOR 2SK94
Q36	8-729-175-73	5 TRANSISTOR 2SC2757
Q37	8-729-175-73	5 TRANSISTOR 2SC2757
Q38	8-729-122-63	5 TRANSISTOR 2SA1226
Q39	8-729-122-63	5 TRANSISTOR 2SA1226
Q41	8-729-175-73	5 TRANSISTOR 2SC2757
Q42	8-729-175-73	5 TRANSISTOR 2SC2757
Q43	8-729-100-66	5 TRANSISTOR 2SC1623
Q44	8-729-109-44	5 TRANSISTOR 2SK94
Q45	8-729-109-44	5 TRANSISTOR 2SK94
Q46	8-729-109-44	5 TRANSISTOR 2SK94
Q47	8-729-100-66	5 TRANSISTOR 2SC1623
Q48	8-729-100-66	5 TRANSISTOR 2SC1623
Q49	8-729-100-66	5 TRANSISTOR 2SC1623
Q50	8-729-100-66	5 TRANSISTOR 2SC1623
Q51	8-729-100-66	5 TRANSISTOR 2SC1623
Q52	8-729-100-66	5 TRANSISTOR 2SC1623
Q53	8-729-100-66	5 TRANSISTOR 2SC1623
Q54	8-729-100-66	5 TRANSISTOR 2SC1623
Q55	8-729-100-66	5 TRANSISTOR 2SC1623
Q56	8-729-100-66	5 TRANSISTOR 2SC1623
Q57	8-729-175-73	5 TRANSISTOR 2SC2757
Q58	8-729-109-44	5 TRANSISTOR 2SK94
Q59	8-729-216-22	5 TRANSISTOR 2SA1162
Q61	8-729-216-22	5 TRANSISTOR 2SA1162
Q62	8-729-100-66	5 TRANSISTOR 2SC1623
Q63	8-729-216-22	5 TRANSISTOR 2SA1162
Q64	8-729-216-22	5 TRANSISTOR 2SA1162
Q65	8-729-122-63	5 TRANSISTOR 2SA1226
Q66	8-729-175-73	5 TRANSISTOR 2SC2757
Q67	8-729-175-73	5 TRANSISTOR 2SC2757
Q68	8-729-175-73	5 TRANSISTOR 2SC2757
Q69	8-729-175-73	5 TRANSISTOR 2SC2757
Q70	8-729-175-73	5 TRANSISTOR 2SC2757
Q71	8-729-100-66	5 TRANSISTOR 2SC1623
Q72	8-729-216-22	5 TRANSISTOR 2SA1162
Q73	8-729-175-73	5 TRANSISTOR 2SC2757
Q74	8-729-175-73	5 TRANSISTOR 2SC2757
Q75	8-729-175-73	5 TRANSISTOR 2SC2757
Q76	8-729-175-73	5 TRANSISTOR 2SC2757
Q77	8-729-175-73	5 TRANSISTOR 2SC2757
R5	1-216-644-11	5 METAL, CHIP 510 0.5% 1/10W

(IE-28 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
R6	1-216-677-11	METAL, CHIP 12K 0.5% 1/10W
R10	1-216-627-11	METAL, CHIP 100 0.5% 1/10W
R13	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R14	1-216-674-11	METAL, CHIP 9.1K 0.5% 1/10W
R15	1-216-683-11	METAL, CHIP 3.3K 0.5% 1/10W
R17	1-216-647-11	METAL, CHIP 680 0.5% 1/10W
R21	1-216-643-11	METAL, CHIP 470 0.5% 1/10W
R22	1-216-641-11	METAL, CHIP 390 0.5% 1/10W
R29	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R30	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R31	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R35	1-216-647-11	METAL, CHIP 680 0.5% 1/10W
R44	1-216-637-11	METAL, CHIP 270 0.5% 1/10W
R47	1-216-637-11	METAL, CHIP 270 0.5% 1/10W
R50	1-216-663-11	METAL, CHIP 3.3K 0.5% 1/10W
R62	1-216-691-11	METAL, CHIP 47K 0.5% 1/10W
R63	1-216-659-11	METAL, CHIP 2.2K 0.5% 1/10W
R76	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R77	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R78	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R83	1-216-647-11	METAL, CHIP 680 0.5% 1/10W
R91	1-216-637-11	METAL, CHIP 270 0.5% 1/10W
R93	1-216-637-11	METAL, CHIP 270 0.5% 1/10W
R94	1-216-671-11	METAL, CHIP 6.8K 0.5% 1/10W
R96	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R99	1-216-691-11	METAL, CHIP 47K 0.5% 1/10W
R101	1-216-659-11	METAL, CHIP 2.2K 0.5% 1/10W
R102	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R112	1-216-669-11	METAL, CHIP 5.6K 0.5% 1/10W
R113	1-216-661-11	METAL, CHIP 2.7K 0.5% 1/10W
R114	1-216-669-11	METAL, CHIP 5.6K 0.5% 1/10W
R115	1-216-653-11	METAL, CHIP 1.2K 0.5% 1/10W
R125	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R126	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R130	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R158	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R159	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R168	1-216-640-11	METAL, CHIP 350 0.5% 1/10W
R181	1-216-640-11	METAL, CHIP 350 0.5% 1/10W
R182	1-216-640-11	METAL, CHIP 350 0.5% 1/10W
R188	1-216-659-11	METAL, CHIP 2.2K 0.5% 1/10W
R189	1-216-671-11	METAL, CHIP 6.8K 0.5% 1/10W
RV1	1-237-038-11	RES, ADJ, METAL 50K
RV2	1-237-038-11	RES, ADJ, METAL 50K
RV3	1-241-262-41	RES, ADJ, CERMET 2K
RV4	1-237-033-11	RES, ADJ, METAL 1K
RV5	1-241-263-41	RES, ADJ, CERMET 5K
RV6	1-237-032-11	RES, ADJ, METAL 500
RV7	1-237-034-11	RES, ADJ, METAL 2K
S1	1-571-259-11	SWITCH, SLIDE

MB-307 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7515-283-A	MOUNTED CIRCUIT BOARD, MB-307 (N)
C1	1-135-070-00	TANTALUM, CHIP 0.1uF 10% 35V
C2	1-135-157-21	TANTAL 10uF 10% 6.3V
C3	1-135-180-21	TANTAL 3.3uF 20% 6.3V
C4	1-135-161-21	TANTALUM, CHIP 22uF 10% 10V
C5	1-135-216-11	TANTAL 10uF 20% 10V
C6	1-163-227-11	CERAMIC 10PF 5% 50V
C7	1-163-227-11	CERAMIC 10PF 5% 50V
C9	1-135-216-11	TANTAL 10uF 20% 10V
C10	1-163-251-11	CERAMIC 100PF 5% 50V
C12	1-135-212-21	TANTAL 2.2uF 10% 35V
C13	1-124-910-11	ELECT 47uF 20% 50V
C14	1-163-251-11	CERAMIC 100PF 5% 50V
C15	1-135-155-21	TANTAL CHIP 4.7uF 10% 16V
C17	1-124-478-11	ELECT 100uF 20% 25V
C18	1-163-251-11	CERAMIC 100PF 5% 50V
C19	1-135-070-00	TANTALUM, CHIP 0.1uF 10% 35V
C20	1-124-584-00	ELECT 100uF 20% 10V
C21	1-135-195-21	TANTAL CHIP 4.7uF 10% 16V
C22	1-135-212-21	TANTAL 2.2uF 10% 35V
CN1	1-565-781-11	CONNECTOR, TX(S, S) (PC BOARD) 50P
CN2	1-565-781-11	CONNECTOR, TX(S, S) (PC BOARD) 50P
CN3	1-562-728-11	CONNECTOR, MULTI 50P
CN4	1-506-467-11	CONNECTOR, 2P, MALE
CN5	1-506-475-11	CONNECTOR, 10P, MALE
CN6	1-506-472-11	CONNECTOR, 7P, MALE
CN7	1-506-467-11	CONNECTOR, 2P, MALE
CN8	1-506-467-11	CONNECTOR, 2P, MALE
CN9	1-506-467-11	CONNECTOR, 2P, MALE
CN10	1-506-472-11	CONNECTOR, 7P, MALE
CN11	1-506-471-11	CONNECTOR, 6P, MALE
CN12	1-506-473-11	CONNECTOR, 8P, MALE
CN13	1-506-364-00	CONNECTOR POST HEADER, 1LG (2P)
CN14	1-506-467-11	CONNECTOR, 2P, MALE
CN15	1-565-819-11	CONNECTOR, FPC (DIP TYPE) 25P
CN16	1-565-819-11	CONNECTOR, FPC (DIP TYPE) 25P
CN19	1-506-468-11	CONNECTOR, 4P, MALE
CN20	1-506-468-11	CONNECTOR, 3P, MALE
CN21	1-506-467-11	CONNECTOR, 2P, MALE
CP1	1-466-498-11	CONVERTER UNIT, DC-DC
D1	8-719-104-34	DIODE 1S2836
D2	8-719-800-76	DIODE 1S2225
IC1	8-759-242-64	IC TC4W53F
IC2	8-759-153-63	IC CXD8154AM
IC3	8-759-234-20	IC TC7S08F
IC5	8-759-908-54	IC TL064CNS
L1	1-408-785-21	CHIP 47uH
L2	1-408-789-11	INDUCTOR CHIP 2.2uH
L3	1-408-785-21	CHIP 47uH
Q1	8-729-100-66	TRANSISTOR 2SC1623
Q2	8-729-216-22	TRANSISTOR 2SA1162
Q3	8-729-100-66	TRANSISTOR 2SC1623
Q4	8-729-175-73	TRANSISTOR 2SC2757
Q5	8-729-122-63	TRANSISTOR 2SA1225
Q6	8-729-175-73	TRANSISTOR 2SC2757
Q8	8-729-104-75	TRANSISTOR 2SB799-ML

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

(MB-307 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
Q9	8-725-100-66	TRANSISTOR 2SC1623
Q10	8-725-101-07	TRANSISTOR 2SB798
Q11	8-725-100-66	TRANSISTOR 2SC1623
Q12	8-725-140-75	TRANSISTOR 2SD998-CLKK
R3	1-216-682-11	METAL, CHIP 20K 0.5% 1/10W
R4	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
R15	1-216-639-11	METAL, CHIP 330 0.5% 1/10W
R16	1-216-639-11	METAL, CHIP 330 0.5% 1/10W
R34	1-216-693-11	METAL, CHIP 56K 0.5% 1/10W
R35	1-216-684-11	METAL, CHIP 24K 0.5% 1/10W
R39	1-216-675-11	METAL, CHIP 10K 0.5% 1/10W
R40	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R42	1-216-676-11	METAL, CHIP 11K 0.5% 1/10W
R43	1-216-683-11	METAL, CHIP 22K 0.5% 1/10W
S1	1-572-658-21	SWITCH, ROTARY
S2	1-571-259-11	SWITCH, SLIDE
VC01	1-577-181-11	OSCILLATOR, CRYSTAL

PR-143 BOARD

Ref. No. or Q'ty	Part No.	SP Description
ipc	A-7515-290-A	o MOUNTED CIRCUIT BOARD, PR-143 (U)
ipc	7-621-775-08	s SCREW #8 2.6X3
C3	1-135-216-11	s TANTAL 10uF 20% 10V
C4	1-135-161-21	s TANTALUM, CHIP 22uF 10% 10V
C5	1-135-159-21	s TANTALUM, CHIP 10uF 10% 20V
C6	1-135-216-11	s TANTAL 10uF 20% 10V
C8	1-135-216-11	s TANTAL 10uF 20% 10V
C10	1-135-216-11	s TANTAL 10uF 20% 10V
C11	1-135-158-21	s TANTALUM, CHIP 10uF 10% 20V
C14	1-135-216-11	s TANTAL 10uF 20% 10V
C15	1-135-161-21	s TANTALUM, CHIP 22uF 10% 10V
C16	1-135-159-21	s TANTALUM, CHIP 10uF 10% 20V
C17	1-135-216-11	s TANTAL 10uF 20% 10V
C18	1-135-216-11	s TANTAL 10uF 20% 10V
C22	1-135-216-11	s TANTAL 10uF 20% 10V
C27	1-135-216-11	s TANTAL 10uF 20% 10V
C28	1-135-161-21	s TANTALUM, CHIP 22uF 10% 10V
C29	1-135-159-21	s TANTALUM, CHIP 10uF 10% 20V
C32	1-135-216-11	s TANTAL 10uF 20% 10V
C34	1-135-216-11	s TANTAL 10uF 20% 10V
C36	1-135-216-11	s TANTAL 10uF 20% 10V
C38	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C39	1-126-392-11	s ELECT, CHIP 100uF 20% 6.3V
C42	1-126-392-11	s ELECT, CHIP 100uF 20% 8.3V
C51	1-135-180-21	s TANTAL 3.3uF 20% 6.3V
C53	1-135-211-11	s TANTAL 8.8uF 20% 6.3VW
C54	1-135-211-11	s TANTAL 8.8uF 20% 6.3VW
C55	1-135-216-11	s TANTAL 10uF 20% 10V
C56	1-135-216-11	s TANTAL 10uF 20% 10V
C61	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C62	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C63	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C64	1-126-396-11	s ELECT, CHIP 47uF 20% 16V
C65	1-135-216-11	s TANTAL 10uF 20% 10V
C68	1-135-216-11	s TANTAL 10uF 20% 10V
C69	1-135-216-11	s TANTAL 10uF 20% 10V
C71	1-135-216-11	s TANTAL 10uF 20% 10V
C72	1-135-177-21	s TANTALUM CHIP 1uF 10% 25V
CN1	1-565-780-11	o CONNECTOR, TX (P.L.) (PC BOARD)SOP
CN2	1-563-681-21	o CONNECTOR, BOARD TO BOARD 8P
CN3	1-563-687-21	o CONNECTOR, BOARD TO BOARD 14P
D1	8-719-104-34	s DIODE 1S2836
D2	8-719-104-34	s DIODE 1S2836
D3	8-719-951-13	s DIODE H25CLL
DL1	1-415-307-00	s 185nS
DL2	1-415-307-00	s 185nS
DL3	1-415-307-00	s 185nS
FL1	1-409-427-11	s FILTER, TRAP 14.3MHz
FL2	1-409-427-11	s FILTER, TRAP 14.3MHz
FL3	1-409-427-11	s FILTER, TRAP 14.3MHz
IC1	1-465-678-11	s HYBRID IC
IC2	1-807-837-21	s IC GAM
IC3	1-807-838-11	s IC WCL
IC4	1-465-678-11	s HYBRID IC
IC5	1-807-837-21	s IC GAM
IC6	1-807-838-11	s IC WCL

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

DXC-537 (UC)
DXC-537P (EK)

(PR-143 BOARD)

Ref. No. or Q' ty	Part No.	SP Description
IC7	1-465-679-11	s HYBRID IC
IC8	1-807-837-21	s IC GAM
IC9	1-807-839-11	s IC WCL
IC10	8-759-300-71	s IC MC14053BF
IC11	8-759-300-71	s IC MC14053BF
IC12	8-759-031-84	s IC TC7S04F
IC13	8-759-234-20	s IC TC7S08F
IC14	8-759-234-20	s IC TC7S08F
IC16	8-759-630-27	s IC MS236ML
IC17	8-759-906-53	s IC TL062CPS
Q1	8-729-122-63	s TRANSISTOR 2SA1226
Q2	8-729-175-73	s TRANSISTOR 2SC2757
Q3	8-729-122-63	s TRANSISTOR 2SA1226
Q4	8-729-175-73	s TRANSISTOR 2SC2757
Q5	8-729-122-63	s TRANSISTOR 2SA1226
Q6	8-729-122-63	s TRANSISTOR 2SA1226
Q7	8-729-175-73	s TRANSISTOR 2SC2757
Q8	8-729-122-63	s TRANSISTOR 2SA1226
Q9	8-729-122-63	s TRANSISTOR 2SA1226
Q11	8-729-175-73	s TRANSISTOR 2SC2757
Q12	8-729-122-63	s TRANSISTOR 2SA1226
Q13	8-729-122-63	s TRANSISTOR 2SA1226
Q14	8-729-175-73	s TRANSISTOR 2SC2757
Q15	8-729-122-63	s TRANSISTOR 2SA1226
Q16	8-729-175-73	s TRANSISTOR 2SC2757
Q17	8-729-122-63	s TRANSISTOR 2SA1226
Q18	8-729-175-73	s TRANSISTOR 2SC2757
Q19	8-729-175-73	s TRANSISTOR 2SC2757
Q21	8-729-100-66	s TRANSISTOR 2SC1623
Q22	8-729-175-73	s TRANSISTOR 2SC2757
Q23	8-729-175-73	s TRANSISTOR 2SC2757
Q24	8-729-175-73	s TRANSISTOR 2SC2757
Q25	8-729-175-73	s TRANSISTOR 2SC2757
Q26	8-729-175-73	s TRANSISTOR 2SC2757
Q27	8-729-175-73	s TRANSISTOR 2SC2757
Q28	8-729-175-73	s TRANSISTOR 2SC2757
Q29	8-729-175-73	s TRANSISTOR 2SC2757
Q30	8-729-175-73	s TRANSISTOR 2SC2757
Q31	8-729-175-73	s TRANSISTOR 2SC2757
Q32	8-729-807-50	s TRANSISTOR 2SD1623
Q33	8-729-101-07	s TRANSISTOR 2SB798
Q34	8-729-101-07	s TRANSISTOR 2SB798
R1	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R4	1-216-651-11	s METAL, CHIP 1K 0.5% 1/10W
R5	1-216-689-11	s METAL, CHIP 39K 0.5% 1/10W
R7	1-216-643-11	s METAL, CHIP 470 0.5% 1/10W
R11	1-216-655-11	s METAL, CHIP 1.5K 0.5% 1/10W
R13	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R14	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R15	1-216-653-11	s METAL, CHIP 1.2K 0.5% 1/10W
R16	1-216-667-11	s METAL, CHIP 4.7K 0.5% 1/10W
R26	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R28	1-216-651-11	s METAL, CHIP 1K 0.5% 1/10W
R29	1-216-643-11	s METAL, CHIP 470 0.5% 1/10W
R31	1-216-689-11	s METAL, CHIP 39K 0.5% 1/10W
R36	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R39	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R41	1-216-653-11	s METAL, CHIP 1.2K 0.5% 1/10W

(PR-143 BOARD)

Ref. No. or Q' ty	Part No.	SP Description
R42	1-216-667-11	s METAL, CHIP 4.7K 0.5% 1/10W
R59	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R61	1-216-651-11	s METAL, CHIP 1K 0.5% 1/10W
R62	1-216-689-11	s METAL, CHIP 39K 0.5% 1/10W
R64	1-216-643-11	s METAL, CHIP 470 0.5% 1/10W
R67	1-216-655-11	s METAL, CHIP 1.5K 0.5% 1/10W
R70	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R71	1-216-644-11	s METAL, CHIP 510 0.5% 1/10W
R72	1-216-667-11	s METAL, CHIP 4.7K 0.5% 1/10W
R73	1-216-653-11	s METAL, CHIP 1.2K 0.5% 1/10W
R78	1-216-683-11	s METAL, CHIP 22K 0.5% 1/10W
R79	1-216-687-11	s METAL, CHIP 33K 0.5% 1/10W
R123	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R127	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R130	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R136	1-216-659-11	s METAL, CHIP 2.2K 0.5% 1/10W
R147	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
R148	1-216-627-11	s METAL, CHIP 100 0.5% 1/10W
RV1	1-237-035-11	s RES, ADJ, METAL 5K
RV3	1-237-034-11	s RES, ADJ, METAL 2K
RV4	1-237-032-11	s RES, ADJ, METAL 500
RV5	1-237-035-11	s RES, ADJ, METAL 5K
RV6	1-237-032-11	s RES, ADJ, METAL 500
RV7	1-241-266-41	s RES, ADJ, CERMET 50K
RV8	1-237-035-11	s RES, ADJ, METAL 5K
RV10	1-237-034-11	s RES, ADJ, METAL 2K
RV13	1-237-035-11	s RES, ADJ, METAL 5K
RV14	1-237-032-11	s RES, ADJ, METAL 500
RV15	1-241-266-41	s RES, ADJ, CERMET 50K
RV16	1-237-035-11	s RES, ADJ, METAL 5K
RV18	1-237-034-11	s RES, ADJ, METAL 2K
RV19	1-237-032-11	s RES, ADJ, METAL 500
RV20	1-237-035-11	s RES, ADJ, METAL 5K
RV21	1-237-032-11	s RES, ADJ, METAL 500
RV22	1-241-266-41	s RES, ADJ, CERMET 50K
RV24	1-241-264-41	s RES, ADJ, CERMET 10K
RV25	1-241-264-41	s RES, ADJ, CERMET 10K
RV26	1-241-264-41	s RES, ADJ, CERMET 10K
RV27	1-237-035-11	s RES, ADJ, METAL 5K
RV28	1-237-035-11	s RES, ADJ, METAL 5K
RV29	1-241-262-41	s RES, ADJ, CERMET 2K
RV30	1-241-262-41	s RES, ADJ, CERMET 2K
RV31	1-241-262-41	s RES, ADJ, CERMET 2K
RV32	1-237-036-11	s RES, ADJ, METAL 10K
RV33	1-237-036-11	s RES, ADJ, METAL 10K
RV34	1-237-036-11	s RES, ADJ, METAL 10K
RV35	1-237-036-11	s RES, ADJ, METAL 10K
RV36	1-237-033-11	s RES, ADJ, METAL 1K

S1 1-571-259-11 s SWITCH, SLIDE

SG-171 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7515-288-A	o MOUNTED CIRCUIT BOARD, SG-171 (N)
C3	1-135-159-21 s	TANTALUM, CHIP 10uF 10% 20V
C5	1-135-159-21 s	TANTALUM, CHIP 10uF 10% 20V
C6	1-163-037-11 s	CERAMIC, CHIP 0.022uF 10% 25V
C8	1-126-392-11 s	ELECT, CHIP 100uF 20% 6.3V
C9	1-163-251-11 s	CERAMIC 100PF 5% 50V
C11	1-135-216-11 s	TANTALUM 10uF 20% 10V
C12	1-135-216-11 s	TANTALUM 10uF 20% 10V
C14	1-135-073-00 s	TANTALUM, CHIP 0.33uF 10% 35V
C16	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C17	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C18	1-135-210-11 s	TANTALUM 4.7uF 10% 10V
C20	1-135-161-21 s	TANTALUM, CHIP 22uF 10% 10V
C22	1-135-210-11 s	TANTALUM 4.7uF 10% 10V
C23	1-135-166-21 s	TANTALUM, CHIP 47uF 10% 10V
C32	1-135-216-11 s	TANTALUM 10uF 20% 10V
C33	1-135-216-11 s	TANTALUM 10uF 20% 10V
C37	1-135-216-11 s	TANTALUM 10uF 20% 10V
C38	1-135-091-00 s	TANTALUM, CHIP 1uF 10% 16V
C41	1-128-320-11 s	ELECT, NONPOLAR 10uF 20% 16V
C43	1-135-216-11 s	TANTALUM 10uF 20% 10V
C46	1-135-216-11 s	TANTALUM 10uF 20% 10V
C50	1-163-227-11 s	CERAMIC 10PF 5% 50V
C59	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C60	1-135-215-21 s	TANTALUM 6.8uF 20% 16V
C61	1-163-235-11 s	CERAMIC 22PF 5% 50V
C64	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C65	1-135-215-21 s	TANTALUM 6.8uF 20% 16V
C66	1-163-235-11 s	CERAMIC 22PF 5% 50V
C68	1-163-135-00 s	CERAMIC, CHIP 560PF 5% 50V
C70	1-135-156-21 s	TANTALUM 6.8uF 10% 8.3V
C75	1-135-216-11 s	TANTALUM 10uF 20% 10V
C76	1-135-159-21 s	TANTALUM, CHIP 10uF 10% 20V
C77	1-135-156-21 s	TANTALUM 6.8uF 10% 8.3V
C78	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C80	1-135-215-21 s	TANTALUM 6.8uF 20% 16V
C81	1-163-235-11 s	CERAMIC 22PF 5% 50V
C84	1-135-070-00 s	TANTALUM, CHIP 0.1uF 10% 35V
C85	1-135-215-21 s	TANTALUM 6.8uF 20% 16V
C86	1-163-235-11 s	CERAMIC 22PF 5% 50V
C87	1-135-216-11 s	TANTALUM 10uF 20% 10V
C88	1-135-216-11 s	TANTALUM 10uF 20% 10V
C89	1-126-396-11 s	ELECT, CHIP 47uF 20% 16V
C93	1-135-216-11 s	TANTALUM 10uF 20% 10V
C95	1-135-216-11 s	TANTALUM 10uF 20% 10V
CW1	1-563-687-21 o	CONNECTOR, BOARD TO BOARD 14P
CW2	1-563-687-21 o	CONNECTOR, BOARD TO BOARD 14P
D1	8-719-104-34 s	DIODE 1S2836
D2	8-719-104-34 s	DIODE 1S2836
D3	8-719-104-34 s	DIODE 1S2836
D5	8-719-815-59 s	DIODE 1S1555-S
IC1	8-759-101-12 s	IC UPC311G2
IC2	8-752-335-47 s	IC CXD1216W
IC3	8-759-100-94 s	IC UPC35862
IC5	8-759-100-94 s	IC UPC35862
IC6	8-759-902-88 s	IC SN74LS123NS
IC7	8-759-100-94 s	IC UPC35862

Please see pages D-13 and D-14 for the part numbers of capacitors and resistors that are not listed in the parts list.

DXC-537 (UC)
DXC-537P (EK)

(SG-171 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
IC8	8-759-902-88 s	IC SN74LS123NS
IC9	8-752-332-87 s	IC CXD1217M
IC10	8-759-239-23 s	IC SN74HC8NS
IC11	8-759-234-77 s	IC TC4S66F
IC12	8-759-239-34 s	IC TC74HC438AF
IC13	8-759-231-32 s	IC TC7S00F
IC14	8-759-112-66 s	IC UPC812G2
IC15	8-759-242-84 s	IC TC4W53F
IC16	8-759-242-84 s	IC TC4W53F
IC18	8-759-927-46 s	IC SN74HC00ANS
IC19	8-759-234-77 s	IC TC4S66F
L1	1-408-785-21 s	CHIP 47uH
L2	1-408-785-21 s	CHIP 47uH
L3	1-408-785-21 s	CHIP 47uH
L4	1-410-711-31 s	INDUCTOR CHIP 330uH
L5	1-408-785-21 s	CHIP 47uH
L8	1-408-785-21 s	CHIP 47uH
L9	1-410-719-31 s	INDUCTOR CHIP 150uH
L10	1-408-785-21 s	CHIP 47uH
L11	1-408-785-21 s	CHIP 47uH
Q1	8-729-402-19 s	TRANSISTOR XN6501
Q2	8-729-402-84 s	TRANSISTOR XN4601
Q3	8-729-216-22 s	TRANSISTOR 2SA1162
Q4	8-729-402-19 s	TRANSISTOR XN6501
Q5	8-729-403-29 s	TRANSISTOR XN6435
Q6	8-729-402-84 s	TRANSISTOR XN4601
Q9	8-729-402-19 s	TRANSISTOR XN6501
Q10	8-729-403-29 s	TRANSISTOR XN6435
Q12	8-729-402-84 s	TRANSISTOR XN4601
Q13	8-729-402-19 s	TRANSISTOR XN6501
Q14	8-729-403-29 s	TRANSISTOR XN6435
Q15	8-723-216-22 s	TRANSISTOR 2SA1162
Q16	8-729-141-53 s	TRANSISTOR 2SK394-K2X3K4
Q17	8-729-402-84 s	TRANSISTOR XN4601
Q21	8-723-216-22 s	TRANSISTOR 2SA1162
R10	1-216-644-11 s	METAL, CHIP 510 0.5% 1/10W
R12	1-216-657-11 s	METAL, CHIP 1.8K 0.5% 1/10W
R13	1-216-663-11 s	METAL, CHIP 3.3K 0.5% 1/10W
R15	1-216-652-11 s	METAL, CHIP 1.1K 0.5% 1/10W
R23	1-216-670-11 s	METAL, CHIP 6.2K 0.5% 1/10W
R36	1-216-687-11 s	METAL, CHIP 33K 0.5% 1/10W
R68	1-216-641-11 s	METAL, CHIP 390 0.5% 1/10W
R69	1-216-641-11 s	METAL, CHIP 390 0.5% 1/10W
R82	1-216-686-11 s	METAL, CHIP 30K 0.5% 1/10W
R83	1-216-685-11 s	METAL, CHIP 27K 0.5% 1/10W
R89	1-216-675-11 s	METAL, CHIP 10K 0.5% 1/10W
R90	1-216-697-11 s	METAL, CHIP 390 0.5% 1/10W
R91	1-216-683-11 s	METAL, CHIP 22K 0.5% 1/10W
R99	1-216-657-11 s	METAL, CHIP 1.8K 0.5% 1/10W
R116	1-216-686-11 s	METAL, CHIP 30K 0.5% 1/10W
R117	1-216-685-11 s	METAL, CHIP 27K 0.5% 1/10W
R123	1-216-651-11 s	METAL, CHIP 1K 0.5% 1/10W
R124	1-216-687-11 s	METAL, CHIP 33K 0.5% 1/10W
R125	1-216-683-11 s	METAL, CHIP 22K 0.5% 1/10W
R137	1-216-691-11 s	METAL, CHIP 47K 0.5% 1/10W
R138	1-216-683-11 s	METAL, CHIP 22K 0.5% 1/10W
R140	1-216-672-11 s	METAL, CHIP 7.5K 0.5% 1/10W

(SG-171 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
RV1	1-241-262-41 s	RES. ADJ. CERMET 2K
RV2	1-241-265-41 s	RES. ADJ. CERMET 20K
VC01	1-577-089-11 s	OSCILLATOR, CRYSTAL

SW-414 BOARD


Ref. No. or Q'ty	Part No.	SP Description
1pc	1-562-736-11 o	HOUSING, 3P
1pc	1-564-831-11 o	CONTACT, FEMALE
1pc	1-569-193-11 s	CONTACT
1pc	1-569-196-11 o	HOUSING, 3P
1pc	1-569-198-11 o	PLUG HOUSING, 5P
1pc	1-638-051-11 o	PRINTED CIRCUIT BOARD, SW-414
CN2	1-506-482-11 o	CONNECTOR, 3P, MALE
R1	1-249-409-11 s	CARBON 220 5K 1/4W
R2	1-249-419-11 s	CARBON 1.5K 5K 1/4W
R3	1-249-393-11 s	CARBON 10 5K 1/4W
R4	1-249-437-11 s	CARBON 47K 5K 1/4W
R5	1-249-433-11 s	CARBON 22K 5K 1/4W
S1	1-554-174-00 s	SWITCH, TACTILE
S2	1-554-174-00 s	SWITCH, TACTILE
S3	1-554-174-00 s	SWITCH, TACTILE

SW-415 BOARD

Ref. No. or Q'ty	Part No.	SP Description
1pc	1-638-052-11 o	PRINTED CIRCUIT BOARD, SW-415
CN1	1-506-482-11 o	CONNECTOR, 3P, MALE
R1	1-249-437-11 s	CARBON 47K 5K 1/4W
R2	1-249-429-11 s	CARBON 10K 5K 1/4W
R3	1-249-434-11 s	CARBON 27K 5K 1/4W
R4	1-249-437-11 s	CARBON 47K 5K 1/4W
R5	1-249-429-11 s	CARBON 10K 5K 1/4W
R6	1-249-434-11 s	CARBON 27K 5K 1/4W
S1	1-570-985-11 s	SWITCH, TOGGLE
S2	1-570-984-11 s	SWITCH, TOGGLE
S3	1-570-985-11 s	SWITCH, TOGGLE
S4	1-572-660-11 s	SWITCH, TOGGLE

FRAME

Ref. No. or Q'ty	Part No.	SP Description
	1-542-126-31 s	MICROPHONE UNIT
	1-547-474-11 o	FILTER UNIT, OPTICS
	1-554-486-00 s	SWITCH, TOGGLE "AUTO W/B BAL"
	1-561-781-21 s	CONNECTOR, BNC, FEMALE
	1-572-659-11 s	SWITCH, TOGGLE "POWER"
	1-590-489-11 s	WIRE, FLAT TYPE (25 CORE)
	1-946-188-11 o	HARNESS (CN)
	8-759-747-09 s	IC MB7115H
CN101	1-562-782-21 s	RECEPTACLE, CONNECTOR 10P "REMOTE"
CN102	1-562-221-21 s	CONNECTOR, 12P, FEMALE "LENS"
CN103	1-561-320-00 o	SOCKET, DIN 8P "VF"

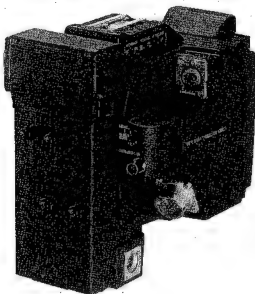

SPECIFICATIONS

Inputs/Outputs VTR/CCU/CMA connector: Sony Z-type, 26-pin
DC IN: XLR-type, 4-pin
MIC IN: XLR-type, 3-pin
GEN LOCK IN: BNC-type
EARPHONE: mini jack
INTERCOM: mini intercom jack

Power requirements
12 V DC

Power consumption
1.7 W

Operating temperature
-10°C to +45°C (14°F to 113°F)

Storage temperature
-20°C to +60°C (-4°F to +140°F)

Weight
1.3 kg (2 lb 14 oz)

Dimensions
118 × 205 × 187 mm
(4³/₄ × 8¹/₈ × 7¹/₈ inches)

Supplied accessories
Screws for attaching the CA-537/537P
M4 × 6 (2)
M4 × 12 (2)
Operating instructions (1)

Design and specifications are subject to change without notice.

TABLE OF CONTENTS



A. BLOCK DIAGRAMS

Overall	A-1
---------------	-----

B. SEMICONDUCTOR

Semiconductor	B-1
---------------------	-----

C. SCHEMATIC DIAGRAMS AND BOARD ILLUSTRATIONS

IF-313	C-3
AU-141 	C-15
SW-416 	

D. SPARE PARTS


Parts Information	D-1
Exploded View	D-3
Packing Material and Accessories	D-6
Electrical Parts	D-7

OVERALL BLOCK

OVERALL BLOCK

SECTION A BLOCK DIAGRAM

OVERALL BLOCK

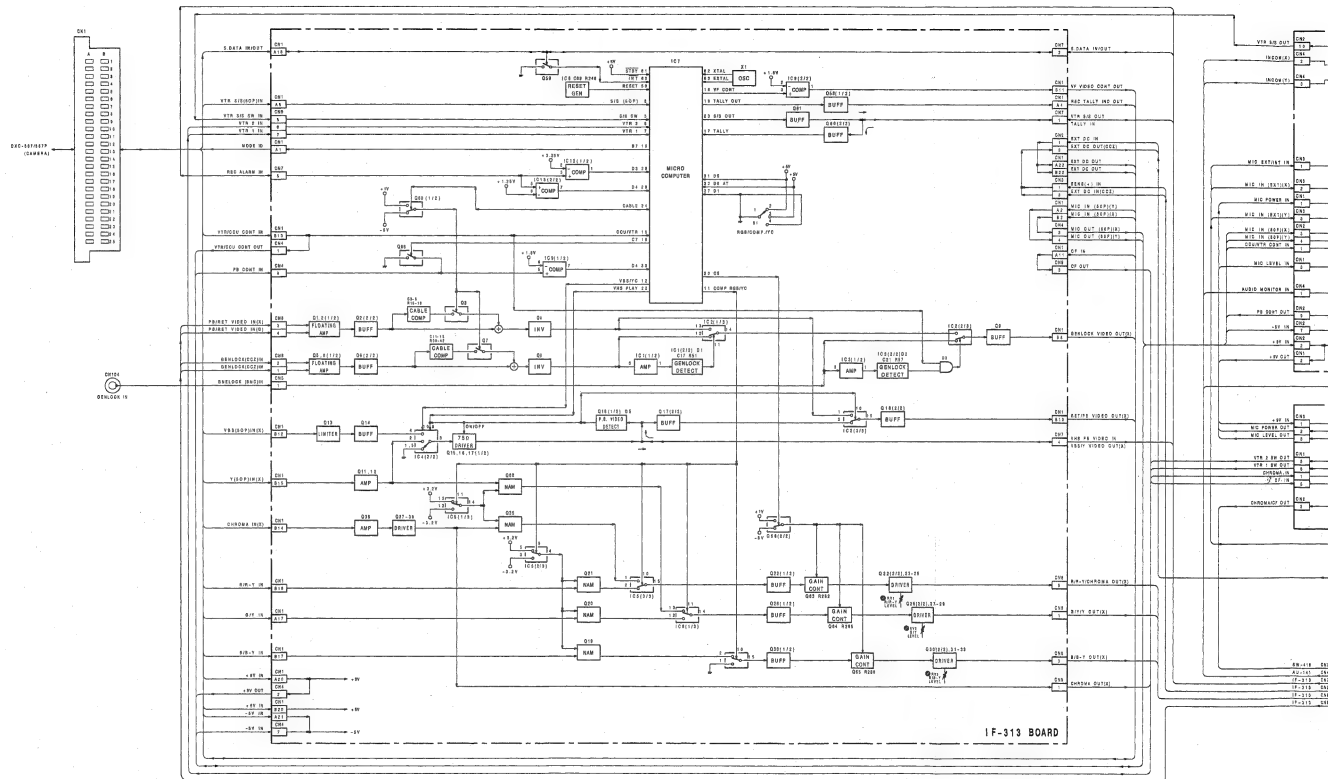

CA-537 (J,U,C)
CA-537P(EK)

A-1

A-2

A

B

C


D

E

F

G

H

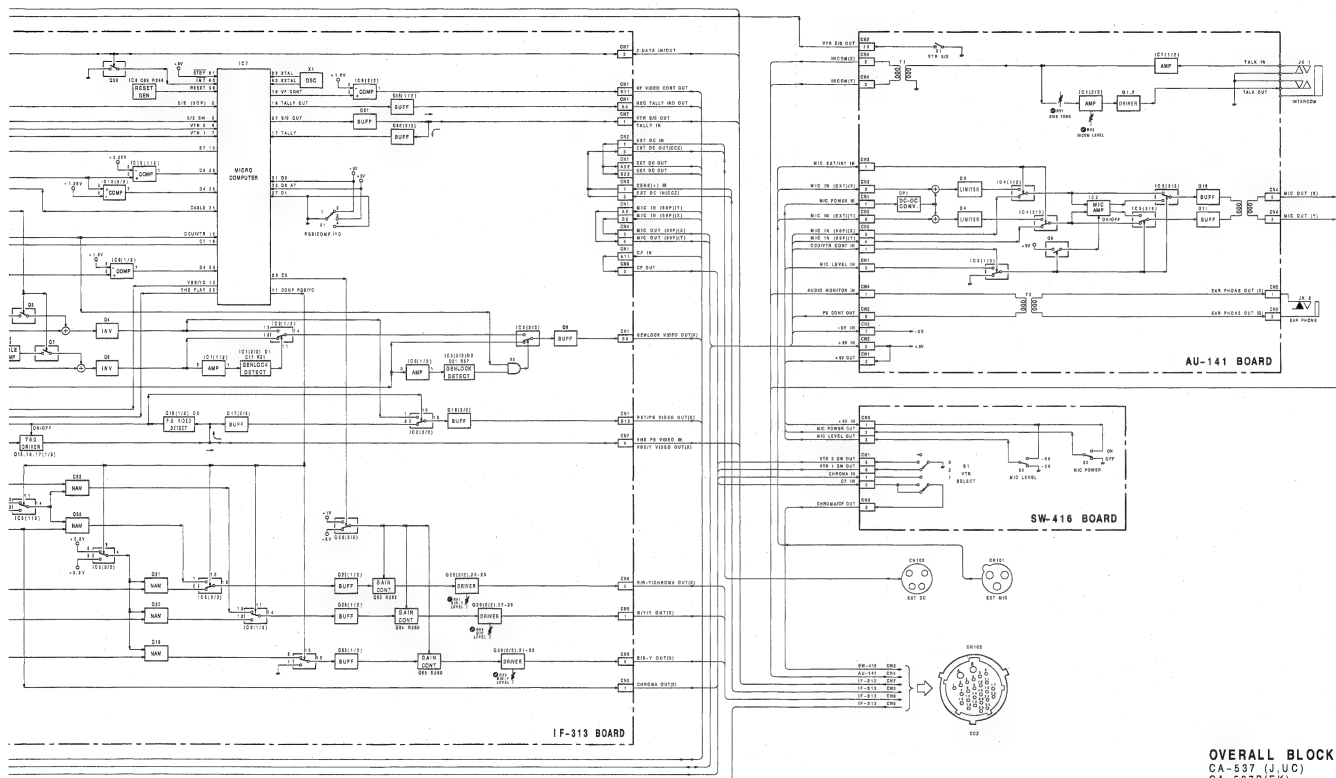

OVERALL BLOCK
CA-537 (J,UC)
CA-537P(EK)

SECTION B SEMICONDUCTOR

The circuit diagram of IC is obtained from the IC data book published by the manufacturer.

TYPE	PAGE
------	------

1S2835	B-2
1S2836	B-2
1SS123	B-2
1SS226	B-2

2SA1162	B-2
2SA812	B-2
2SC1623	B-2
2SC2757	B-2
2SC2878	B-2
2SK94	B-2

HD6305Y0E26F	B-3
--------------------	-----

LM2903M	B-3
---------------	-----

MC14052BF	B-4
MC14053BF	B-4

RC2043MD	B-4
RD ? ? M	B-2

TC4S81F	B-4
---------------	-----

uPC358G2	B-4
uPC4558G2	B-4

XN4601	B-2
XN6401	B-2
XN6501	B-2
XN6534	B-2

(SCALE 4/11)
TOP VIEW



1S2635
1S2636

(SCALE 4/11)
TOP VIEW



1S5123
1S5226

(SCALE 4/11)
TOP VIEW



RD 7 M

(SCALE 4/11)
TOP VIEW



2SA1162
2SA812

(SCALE 4/11)
TOP VIEW



2SC1623
2SC2757

(SCALE 4/11)
TOP VIEW



2SC2878

TOP VIEW (SCALE 4/11)



2SK94

(SCALE 6/11)
TOP VIEW



XN4501



(SCALE 6/11)
TOP VIEW



XN6401





(SCALE 6/11)
TOP VIEW




XN6501
XN6534




C-MOS 8-BIT MICROPROCESSOR UNIT
- TOP VIEW -

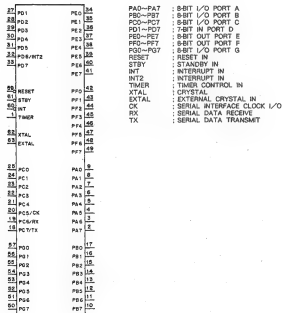

MC14052BF (MOTOROLA) FLAT PACKAGE
CMOS DUAL 4-CHANNEL ANALOG MULTIPLEXER/DEMULPLEXER
- TOP VIEW -

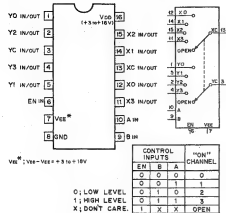


TC4581F (TOSHIBA) FLAT PACKAGE
CMOS 2-INPUT AND GATE
- TOP VIEW -



μPC35802 (NEC) FLAT PACKAGE
DUAL OPERATIONAL AMPLIFIERS
- TOP VIEW -



MC14053BF (MOTOROLA) FLAT PACKAGE
CMOS TRIPLE 2-CHANNEL ANALOG MULTIPLEXER/DEMULPLEXER
- TOP VIEW -

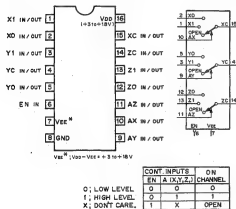


μPC455802 (NEC) FLAT PACKAGE
OPERATIONAL AMPLIFIER
- TOP VIEW -



RC2043MD (RAYTHEON) FLAT PACKAGE
OPERATIONAL AMPLIFIER
- TOP VIEW -



SECTION C
SCHEMATIC DIAGRAMS AND BOARD ILLUSTRATIONS

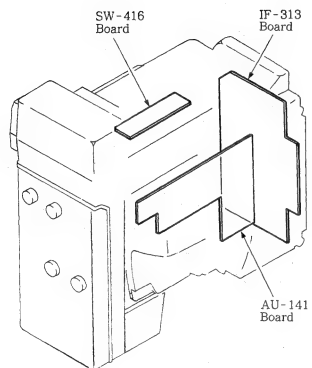

IF-313 BOARD

IF-313(1-638-053-11)

CN1	G-6	Q17	E-2
CN2	G-6	Q18	F-4
CN3	G-5	Q19	G-4
CN4	D-6	Q20	G-4
CN5	A-1	Q21	G-3
CN6	J-3	Q22	H-1
CN7	E-2	Q23	I-1
CN8	C-1	Q24	I-1
CN9	E-1	Q25	I-1


D1	D-3	Q26	I-5
D2	A-2	Q27	I-5
D3	C-4	Q28	J-5
D4	F-3	Q29	J-4
D5	F-4	Q30	I-3
D6	B-2	Q31	I-3
D7	G-6	Q32	J-3
D8	G-2	Q33	J-3
		Q35	E-3
		Q36	E-5

IC1	B-3	Q37	E-5
IC2	C-4	Q38	E-5
IC3	A-1	Q39	E-4
IC4	F-3	Q58	D-5
IC5	G-1	Q59	A-4
IC6	H-4	Q60	D-5
IC7	A-4	Q61	C-5
IC8	B-2	Q62	G-4
IC9	A-2	Q63	H-1
IC13	G-2	Q64	I-5
		Q65	I-4
L2	C-6	Q66	B-5


Q1	C-1	RV1	I-1
Q2	C-2	RV2	I-4
Q3	C-3	RV3	I-3
Q4	C-3		

Q5	C-2	S1	A-5
Q6	D-2		
Q7	D-2	X1	A-3
Q8	C-3		
Q9	D-4		

Q11	G-5		
Q12	F-4		
Q13	F-5		
Q14	F-5		
Q15	F-2		
Q16	F-3		

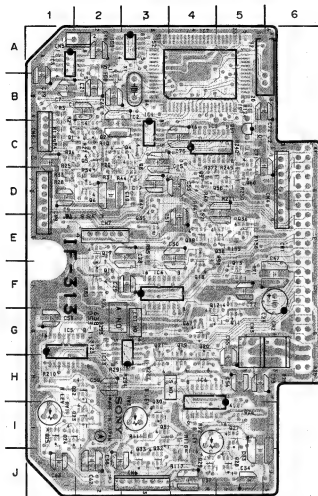

1-638-053-11 COMPONENT SIDE

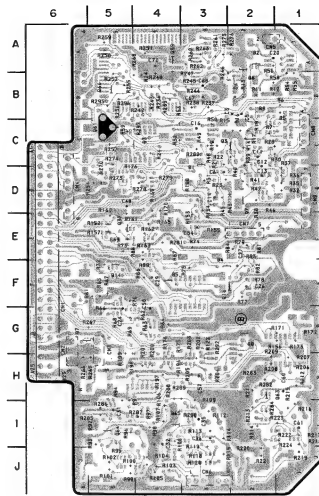

1-638-053-11 SOLDERING SIDE

IF-313(1-638-053-11)

CN1	G-6	Q17	E-2
CN2	G-6	Q18	F-4
CN3	G-5	Q19	G-4
CN4	D-6	Q20	G-4
CN5	A-1	Q21	G-3
CN6	J-3	Q22	H-1
CN7	E-2	Q23	I-1
CN8	C-1	Q24	I-1
CN9	E-1	Q25	I-1

D1	D-3	Q27	I-5
D2	A-2	Q28	J-5
D3	C-4	Q29	J-4
D4	F-3	Q30	I-3
D5	F-4	Q31	I-3
D6	B-2	Q32	J-3
D7	G-6	Q33	J-3
D8	G-2	Q35	E-3
		Q36	E-5

IC1	B-3	Q37	E-5
IC2	C-4	Q38	E-5
IC3	A-1	Q39	E-4
IC4	F-3	Q58	D-5
IC5	G-1	Q59	A-4
IC6	H-4	Q60	D-5
IC7	A-4	Q61	C-5
IC8	B-2	Q62	G-4
IC9	A-2	Q63	H-1
IC13	G-2	Q64	I-5
		Q65	I-4
L2	C-6	Q66	B-5

Q1	C-1	RV1	I-1
Q2	C-2	RV2	I-4
Q3	C-3	RV3	I-3
Q4	C-3		

Q5	C-2	S1	A-5
Q6	D-2		
Q7	D-2	X1	A-3
Q8	C-3		
Q9	D-4		

Q11	G-5		
Q12	F-4		
Q13	F-5		
Q14	F-5		
Q15	F-2		
Q16	F-3		









IF-313 BOARD

注意:


1. DC電圧はデジタル電圧計による値。
2. 波形写真、及びDC電圧は下記条件での測定。
 - ・本機を DXC-537に接続する。
 - ・OUTPUT : BARS
 - ・GAIN : 0dB
 - ・WHITE BAL : PRE
 - ・SHUTTER : OFF
 - ・ZEBRA MARKER : OFF OFF
 - ・PHASE : 0°
3. *はUCモデルの波形です。Jモデルのものは、セットアップレベルがゼロになっています。

NOTE:

1. All voltage are DC, measured with a digital voltmeter.
2. All waveforms are taken and DC voltage is measured in condition below.
 - ・Connect the camera adapter to the camera DXC-537.
 - ・OUTPUT : BARS
 - ・GAIN : 0dB
 - ・WHITE BAL : PRE
 - ・SHUTTER : OFF
 - ・ZEBRA MARKER : OFF OFF
 - ・PHASE : 0°
3. The waveform marked with * is for UCmodel.
For J model, the setup level is set to "0" at factory.

CN1-B16pin
R-YCN1-B15pin
LUMINANCECN1-A17pin
YCN1-B12pin
VBSCN1-B17pin
B-YCN7-4pin
VBSCN1-B14pin
CHROMAQ12-5pin
Y

CA-537 (J, U C)
CA-537P (E K)

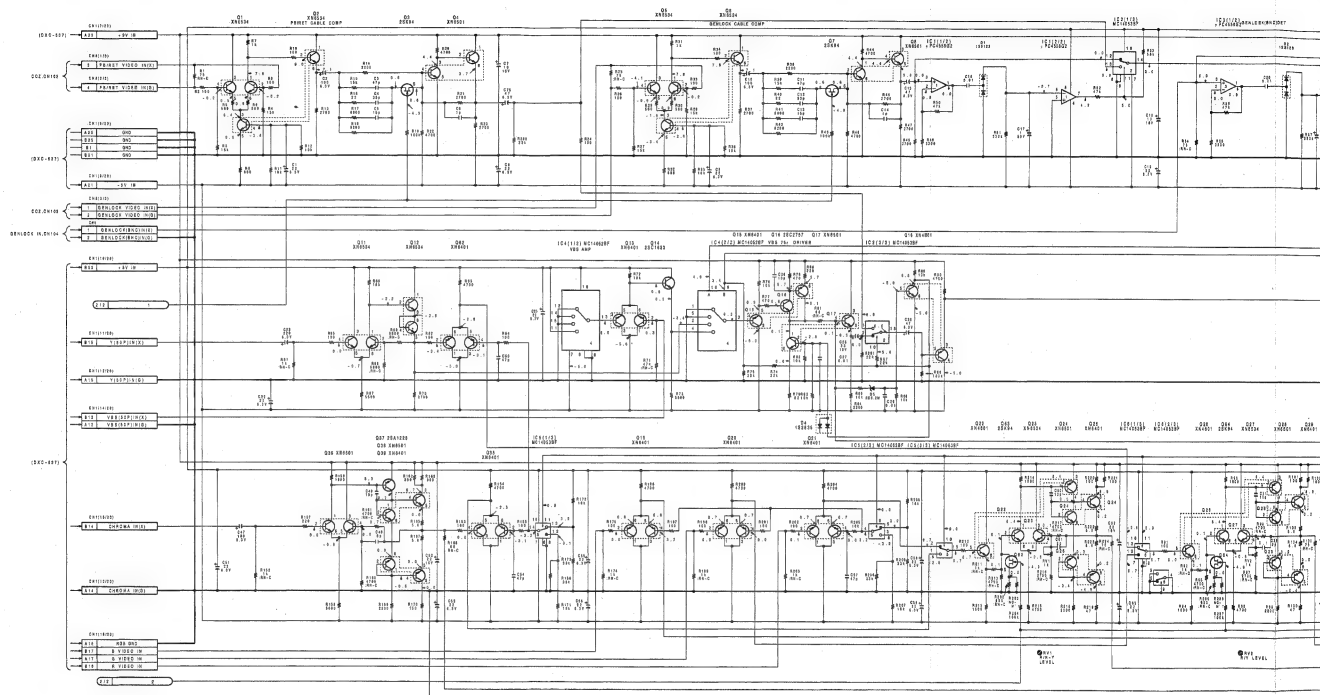

C-7

C-8

A

B

C


D

E

F


G

• **H**

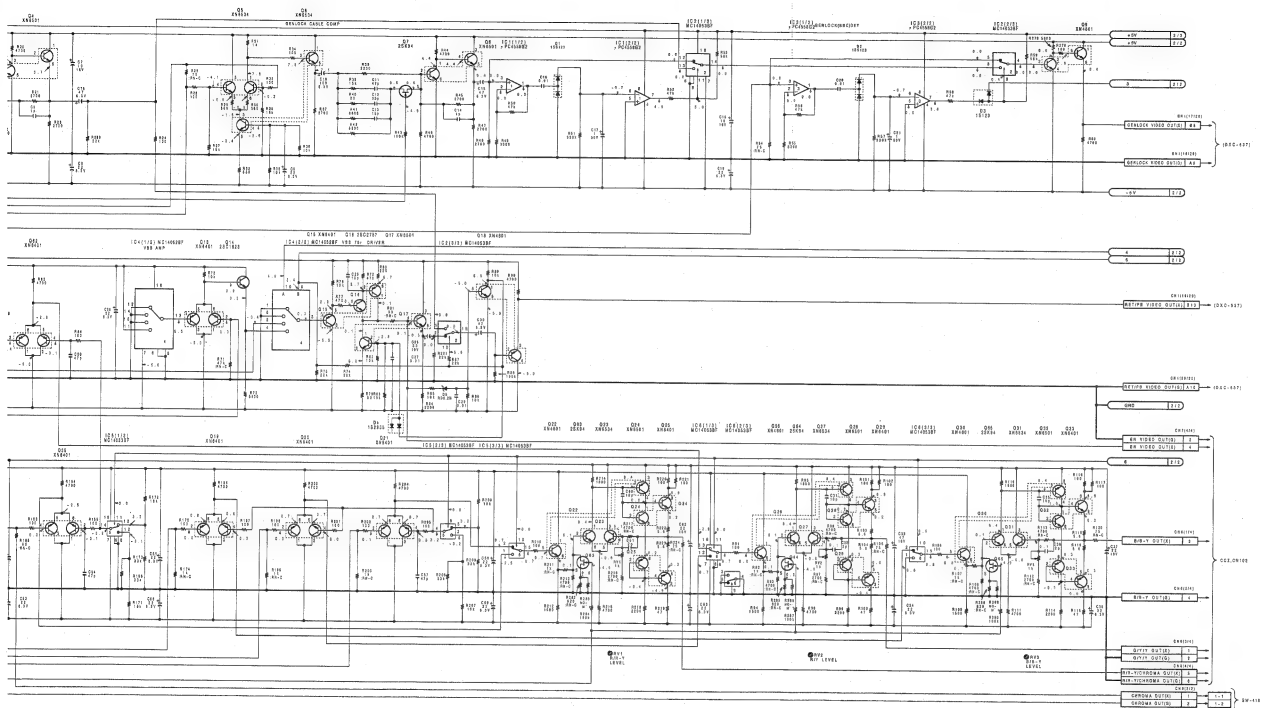

IF-313 BOARD (1/2)
CA-537 (J.U.C)
CA-537P (E.K)

IF-313 BOARD (2/2)

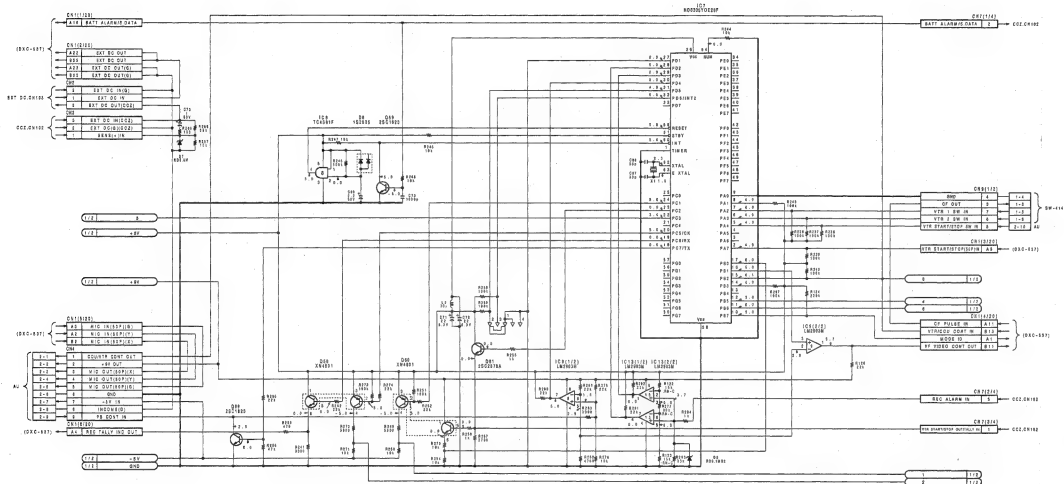

IF-313 BOARD (2/2)
CA-537 (J.U.C)
CA-537P(EK)

CA-537 (J.U.C)
CA-537P(EK)

C-13

C-14

B-5 CA537-IF313/M12

AU-141 BOARD

AU-141(1-638-054-11)

CN1 A-4
CN2 C-4
CN3 A-4
CN4 C-4
CN5 D-4

CP1 A-1
D1 E-4
D2 D-4
D3 A-3
D4 A-3

IC1 E-4
IC2 B-3
IC3 B-4
IC4 A-3


L1 A-4

Q1 D-4
Q2 D-4
Q9 B-4
Q10 B-4
Q11 B-4


RV1 D-4
RV2 F-4

S1 E-4

T1 D-3
T2 C-3
T3 B-2

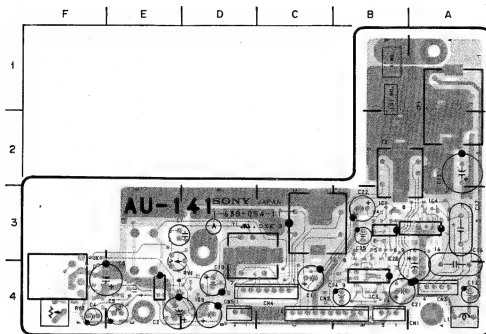

1-638-054-11 COMPONENT SIDE

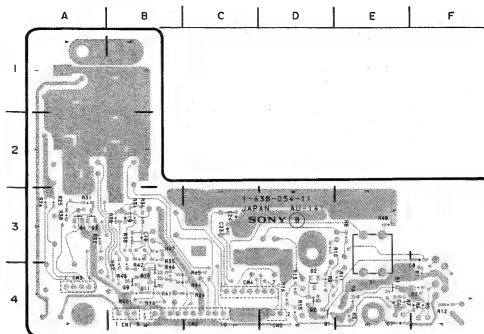

1-638-054-11 SOLDERING SIDE

AU-141(1-638-054-11)

CN1 A-4
CN2 C-4
CN3 A-4
CN4 C-4
CN5 D-4

CP1 A-1

D1 E-4
D2 D-4
D3 A-3
D4 A-3

IC1 E-4
IC2 B-3
IC3 B-4
IC4 A-3

L1 A-4


Q1 D-4
Q2 D-4
Q9 B-4
Q10 B-4
Q11 B-4

RV1 D-4
RV2 F-4


S1 E-4

T1 D-3
T2 C-3
T3 B-2

SW-416 BOARD



1-638-055-11 COMPONENT SIDE



1-638-055-11 SOLDERING SIDE

注意:

1. DC電圧はデジタル電圧計による値。
2. 波形写真、及びDC電圧は下記条件での測定。


- 本機を DXC-537に接続する。
- OUTPUT : BARS
- GAIN : 0 dB
- WHITE BAL : PRE
- SHUTTER : OFF
- ZEBRA MARKER : OFF OFF
- PHASE : 0°

NOTE:


1. All voltage are DC, measured with a digital voltmeter.
2. All waveforms are taken and DC voltage is measured in condition below.

- Connect the camera adapter to the camera DXC-537.
- OUTPUT : BARS
- GAIN : 0 dB
- WHITE BAL : PRE
- SHUTTER : OFF
- ZEBRA MARKER : OFF OFF
- PHASE : 0°

FRAME
AU-141 BOARD
SW-416 BOARD

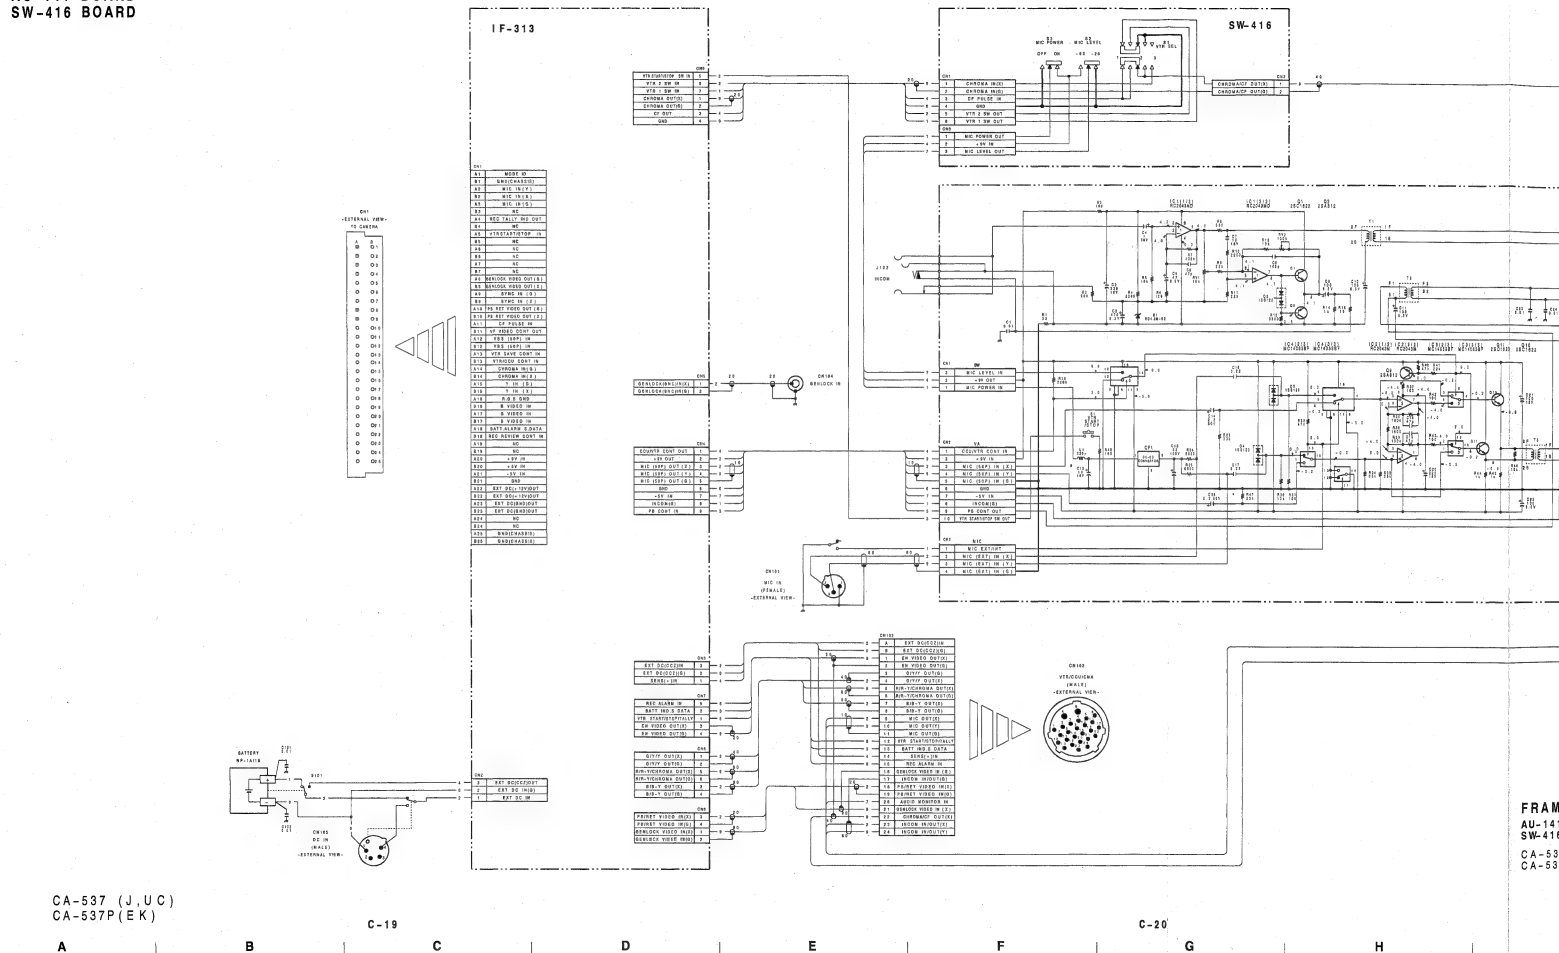

FRAM
AU-141
SW-416
CA-53
CA-53

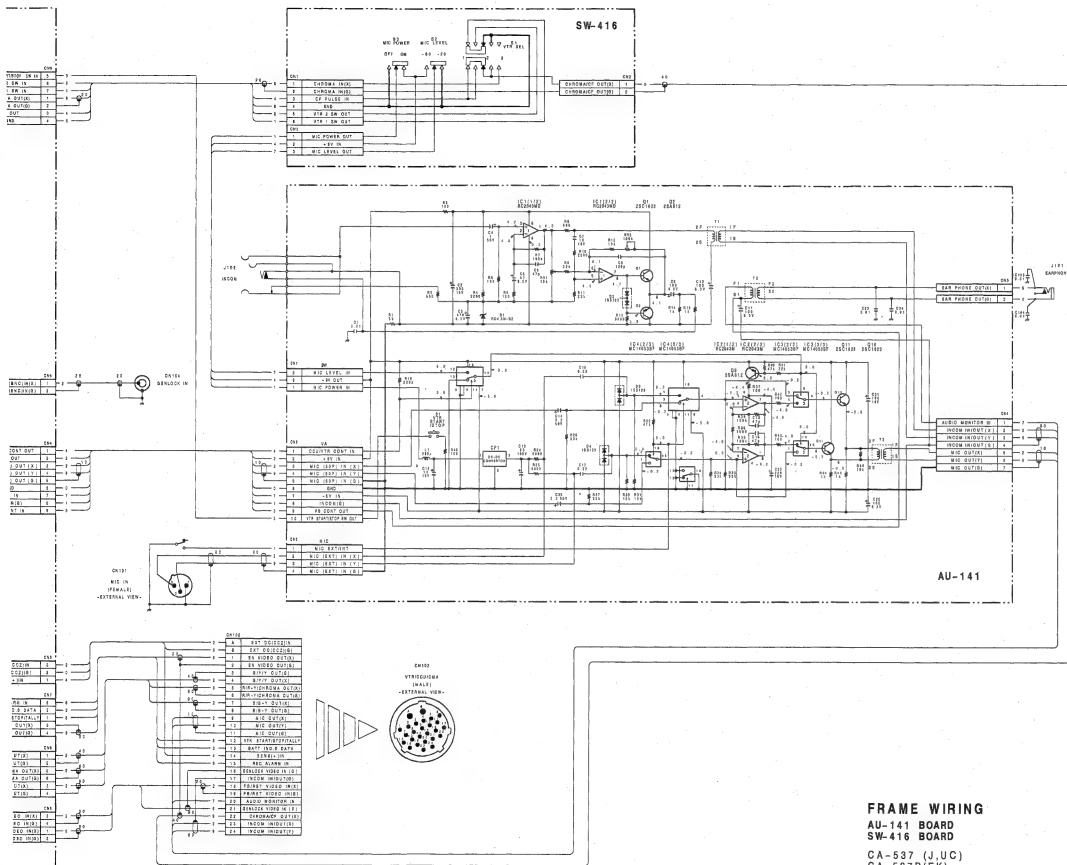

FRAME WIRING
AU-141 BOARD
SW-416 BOARD
CA-537 (JUC)
CA-537P(EK)

E

F

G

H

I

J

K

L

SECTION D SPARE PARTS


PARTS INFORMATION

1. Safety Related Component Warning

Components identified by shading marked with Δ on the schematic diagrams, exploded views and electrical spare parts list are critical to safe operation. Replace these components with Sony parts whose parts numbers appear as shown in this manual or in service manual supplements published by Sony.

2. Replacement Parts supplied from Sony Parts Center will sometimes have different shape and outside view from the parts which actually in use. This is due to **"accommodating the improved parts and/or engineering changes" or "standardization of genuine parts."** This manual's exploded view and electrical spare parts lists are indicating the parts numbers of "the standardized genuine parts at present." Regarding engineering parts and diagrams changes in our engineering department, refer to SONY service bulletins and service manual supplements.
3. The parts marked with "S" in the SP column of the exploded views and electrical spare parts list are normally required for routine service work. Orders for parts marked with "O" will be processed, but allow for additional delivery time.
4. Item with no parts number and/or no description are not stocked because they are seldom required for routine service.
5. All capacitors are in micro farads unless otherwise specified.
All inductors are in micro henries unless otherwise specified.
All resistors are in ohms.

EXPLODED VIEW

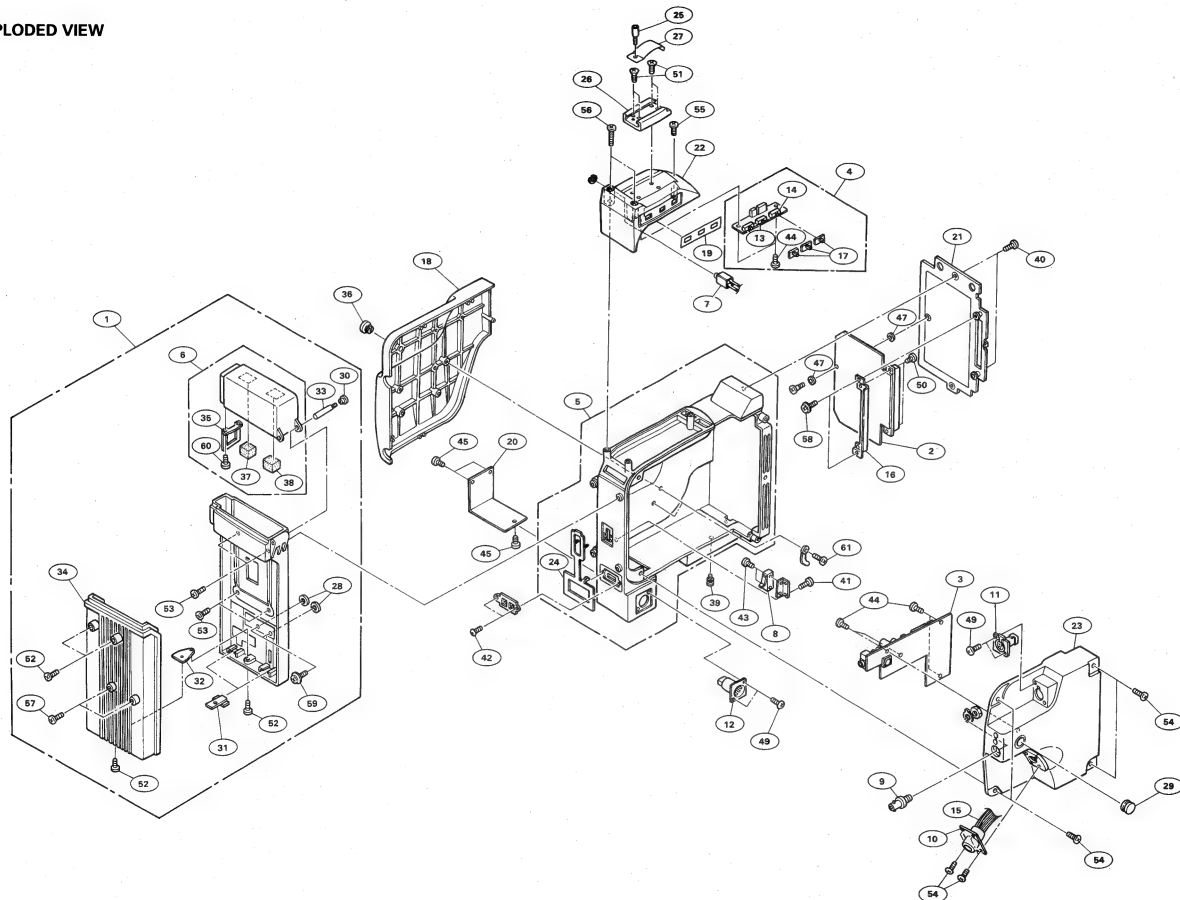

D-3


D-4

No.	Part No.	SP Description
1	A-6703-651-C	s CASE ASSY, BATTERY
2	A-7515-272-A	o MOUNTED CIRCUIT BOARD, IF-313
3	A-7515-273-A	o MOUNTED CIRCUIT BOARD, AU-141
4	A-7520-537-A	o MOUNTED CIRCUIT BOARD, SW-418
5	X-3165-587-1	o CHASSIS ASSY, CA
6	X-3717-701-3	o COVER ASSY, TOP, BATTERY
7	1-507-756-00	s JACK "EAR"
8	1-552-665-00	s SWITCH, MICRO
9	1-561-781-11	s CONNECTOR, BNC "GENLOCK IN"
10	1-562-244-00	o CONNECTOR, 26P "VTR/CCU/CMA"
11	1-563-086-11	s CONNECTOR, 3P (WITH SW) "MIC IN"
12	1-564-603-11	s CONNECTOR, 4P (WITH DC SW) "DC IN"
13	1-571-259-11	s SWITCH, SLIDE "MIC LEVEL"
14	1-571-788-11	s SWITCH, SLIDE "VTR SELECT"
15	1-940-158-11	o HARNESS (CC2)
16	3-168-318-01	o BRACKET, CONNECTOR
17	3-167-445-01	s KNOB, SWITCH
18	3-167-450-01	o PAD, SIDE
19	3-168-313-01	o PANEL, SWITCH
20	3-168-317-01	o PLATE (B), BOTTOM
21	3-168-318-01	o PANEL (2), CONNECTOR
22	3-168-319-01	o CHASSIS, TOP
23	3-168-320-01	o COVER (2), SIDE
24	3-168-435-01	o PACKING, DROP PROTECTION
25	3-664-213-00	o SCREW, STOPPER
26	3-654-218-00	o SHUE
27	3-654-228-00	o PLATE, SPRING
28	3-669-596-00	s WASHER (2.3), STOPPER
29	3-672-221-02	s PACKING, CONTROL
30	3-703-075-00	s CAP 2, SHAFT
31	3-717-707-02	o CUSHION (2)
32	3-717-708-01	o RETAINER, CASE
33	3-717-709-01	o SHAFT, LID
34	3-718-040-01	o COVER (1), BATTERY CASE
35	3-718-172-01	o RETAINER, HOOK
36	3-725-907-01	s BUSHING, BLIND
37	3-729-720-01	o CUSHION (LEFT)
38	3-729-721-01	o CUSHION (RIGHT)
39	3-744-355-01	o SHAFT, GUIDE
40	7-621-770-67	s SCREW +B 2.6X6
41	7-621-772-18	s SCREW +B 2X4
42	7-621-772-30	s SCREW +B 2X8
43	7-621-772-48	s SCREW +B 2X8
44	7-621-773-86	s SCREW +B 2.8X4
45	7-621-775-10	s SCREW +B 2.6X4
46	7-623-508-01	s LUG, 2.
47	7-623-925-11	s WASHER 4.0, NYLONE
48	7-624-200-01	s NUT, PUSH 1.5
49	7-627-556-77	s SCREW, PRECISION +P2.6X6 TYPE 1
50	7-628-254-20	s SCREW +PS 2.6X8
51	7-682-247-04	s SCREW +K 3X6
52	7-682-546-09	s SCREW +B 3X5
53	7-682-547-09	s SCREW +B 3X6
54	7-682-548-04	s SCREW +B 3X8
55	7-682-548-09	s SCREW +B 3X8

No.	Part No.	SP Description
56	7-682-553-09	s SCREW +B 3X20
57	7-682-555-09	s SCREW +B 4X5
58	7-682-947-01	s SCREW +PSW 3X6
59	7-682-948-01	s SCREW +PSW 3X8
60	7-685-133-19	s SCREW +P 2.6X6 TYPE2
61	7-685-649-79	s SCREW +BTP 3X14 TYPE2 N-S

PACKING MATERIAL AND ACCESSORIES

No.	Part No.	SP Description
1	3-167-622-01	o CUSHION (LOWER)
2	3-187-623-01	o CUSHION (UPPER)
3	3-188-980-01	o INDIVIDUAL CARTON
4	3-752-842-11	s MANUAL, INSTRUCTION
5	7-682-560-09	s SCREW +B 4X6
6	7-682-563-09	s SCREW +B 4X12

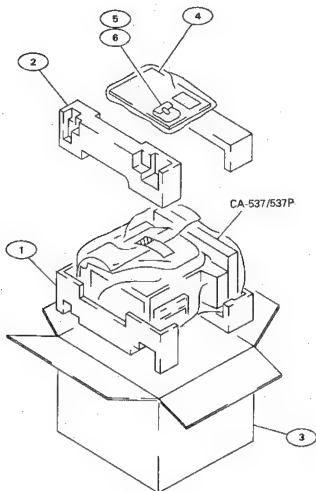

ELECTRICAL PARTS

RESISTOR, CHIP

Part No. SP Description

1-216-295-00 s RES, CHIP 0 5% 1/10W
1-216-298-00 s RES, CHIP 2.2 5% 1/10W
1-216-302-00 s RES, CHIP 2.7 5% 1/10W
1-216-304-11 s RES, CHIP 3.3 5% 1/10W
1-216-308-11 s RES, CHIP 3.9 5% 1/10W

1-216-308-00 s RES, CHIP 4.7 5% 1/10W
1-216-309-00 s RES, CHIP 5.6 5% 1/10W
1-216-311-00 s RES, CHIP 6.8 5% 1/10W
1-216-313-00 s RES, CHIP 8.2 5% 1/10W
1-216-001-00 s RES, CHIP 10 5% 1/10W

1-216-003-11 s RES, CHIP 12 5% 1/10W
1-216-005-00 s RES, CHIP 15 5% 1/10W
1-216-007-00 s RES, CHIP 18 5% 1/10W
1-216-009-00 s RES, CHIP 22 5% 1/10W
1-216-011-00 s RES, CHIP 27 5% 1/10W

1-216-013-00 s RES, CHIP 33 5% 1/10W
1-216-015-00 s RES, CHIP 39 5% 1/10W
1-216-017-00 s RES, CHIP 47 5% 1/10W
1-216-019-00 s RES, CHIP 56 5% 1/10W
1-216-021-00 s RES, CHIP 68 5% 1/10W

1-216-023-00 s RES, CHIP 82 5% 1/10W
1-216-025-00 s RES, CHIP 100 5% 1/10W
1-216-027-00 s RES, CHIP 120 5% 1/10W
1-216-029-00 s RES, CHIP 150 5% 1/10W
1-216-031-00 s RES, CHIP 180 5% 1/10W

1-216-033-00 s RES, CHIP 220 5% 1/10W
1-216-035-00 s RES, CHIP 270 5% 1/10W
1-216-037-00 s RES, CHIP 330 5% 1/10W
1-216-039-00 s RES, CHIP 390 5% 1/10W
1-216-041-00 s RES, CHIP 470 5% 1/10W

1-216-043-00 s RES, CHIP 560 5% 1/10W
1-216-045-00 s RES, CHIP 680 5% 1/10W
1-216-047-00 s RES, CHIP 820 5% 1/10W
1-216-049-00 s RES, CHIP 1k 5% 1/10W
1-216-051-00 s RES, CHIP 1.2k 5% 1/10W

1-216-053-00 s RES, CHIP 1.5k 5% 1/10W
1-216-055-00 s RES, CHIP 1.8k 5% 1/10W
1-216-057-00 s RES, CHIP 2.2k 5% 1/10W
1-216-059-00 s RES, CHIP 2.7k 5% 1/10W
1-216-061-00 s RES, CHIP 3.3k 5% 1/10W

1-216-063-00 s RES, CHIP 3.9k 5% 1/10W
1-216-065-00 s RES, CHIP 4.7k 5% 1/10W
1-216-067-00 s RES, CHIP 5.6k 5% 1/10W
1-216-069-00 s RES, CHIP 6.8k 5% 1/10W
1-216-071-00 s RES, CHIP 8.2k 5% 1/10W

1-216-073-00 s RES, CHIP 10k 5% 1/10W
1-216-075-00 s RES, CHIP 12k 5% 1/10W
1-216-077-00 s RES, CHIP 15k 5% 1/10W
1-216-079-00 s RES, CHIP 18k 5% 1/10W
1-216-081-00 s RES, CHIP 22k 5% 1/10W

1-216-083-00 s RES, CHIP 27k 5% 1/10W
1-216-085-00 s RES, CHIP 33k 5% 1/10W
1-216-748-11 s RES, CHIP 39k 5% 1/10W
1-216-089-00 s RES, CHIP 47k 5% 1/10W
1-216-091-00 s RES, CHIP 56k 5% 1/10W

RESISTOR, CHIP

Part No. SP Description

1-216-093-00 s RES, CHIP 68k 5% 1/10W
1-216-095-00 s RES, CHIP 82k 5% 1/10W
1-216-097-00 s RES, CHIP 100k 5% 1/10W
1-216-099-00 s RES, CHIP 120k 5% 1/10W
1-216-101-00 s RES, CHIP 150k 5% 1/10W

1-216-103-00 s RES, CHIP 180k 5% 1/10W
1-216-105-00 s RES, CHIP 220k 5% 1/10W
1-216-107-00 s RES, CHIP 270k 5% 1/10W
1-216-109-00 s RES, CHIP 330k 5% 1/10W
1-216-111-00 s RES, CHIP 390k 5% 1/10W

1-216-113-00 s RES, CHIP 470k 5% 1/10W
1-216-115-00 s RES, CHIP 560k 5% 1/10W
1-216-117-00 s RES, CHIP 680k 5% 1/10W
1-216-119-00 s RES, CHIP 820k 5% 1/10W
1-216-121-00 s RES, CHIP 1.0M 5% 1/10W

1-216-123-11 s RES, CHIP 1.2M 5% 1/10W
1-216-125-00 s RES, CHIP 1.5M 5% 1/10W
1-216-127-11 s RES, CHIP 1.8M 5% 1/10W
1-216-129-00 s RES, CHIP 2.2M 5% 1/10W
1-216-131-11 s RES, CHIP 2.7M 5% 1/10W

1-216-133-00 s RES, CHIP 3.3M 5% 1/10W

AU-141 BOARD

Ref. No. or Q'ty	Part No.	SP Description
Ipc	A-7515-273-A	o MOUNTED CIRCUIT BOARD, AU-141
C1	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C2	1-124-119-00	s ELECT 330uF 20X 16V
C3	1-124-472-11	s ELECT 470uF 20X 10V
C4	1-126-160-11	s ELECT 1uF 20X 50V
C5	1-126-154-11	s ELECT 47uF 20X 6.3V
C6	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C7	1-126-320-11	s ELECT, NONPOLAR 10uF 20X 16V
C8	1-163-251-11	s CERAMIC 100PF 5X 50V
C9	1-124-584-00	s ELECT 100uF 20X 10V
C10	1-124-584-00	s ELECT 100uF 20X 10V
C11	1-124-584-00	s ELECT 100uF 20X 10V
C12	1-126-157-11	s ELECT 10uF 20X 16V
C13	1-124-930-11	s ELECT 33uF 20X 100V
C14	1-124-257-00	s ELECT 2.2uF 20X 50V
C16	1-130-499-00	s NYLON 0.22uF 5X 50V
C17	1-130-499-00	s NYLON 0.22uF 5X 50V
C18	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C19	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C20	1-124-120-11	s ELECT 220uF 20X 25V
C21	1-126-101-11	s ELECT 100uF 20X 16V
C22	1-124-584-00	s ELECT 100uF 20X 10V
C23	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C24	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C25	1-124-257-00	s ELECT 2.2uF 20X 50V
CN1	1-506-468-11	o CONNECTOR, 3P, MALE
CN2	1-506-475-11	o CONNECTOR, 10P, MALE
CN3	1-506-469-11	o CONNECTOR, 4P, MALE
CN4	1-506-472-11	o CONNECTOR, 7P, MALE
CN5	1-506-467-11	o CONNECTOR, 2P, MALE
CP1	1-464-758-11	s CONVERTER, DC-DC (CD-54)
D1	8-719-105-64	s DIODE RD4.3W-B2
D2	8-719-800-76	s DIODE 1SS226
D3	8-719-800-76	s DIODE 1SS226
D4	8-719-800-76	s DIODE 1SS226
IC1	8-759-981-58	s IC RC2043MD
IC2	8-759-981-58	s IC RC2043MD
IC3	8-759-300-71	s IC MC14053BF
IC4	8-759-300-71	s IC MC14053BF
JK1	1-507-883-00	s JACK, SMALL TYPE 4P
L1	1-408-425-00	s INDUCTOR 220uH
Q1	8-729-100-66	s TRANSISTOR 2SC1623
Q2	8-729-216-22	s TRANSISTOR 2SA1162
Q9	8-729-216-22	s TRANSISTOR 2SA1162
Q10	8-729-100-66	s TRANSISTOR 2SC1623
Q11	8-729-100-66	s TRANSISTOR 2SC1623
R24	1-216-671-11	s METAL, CHIP 6.8K 0.5X 1/10W
R25	1-216-671-11	s METAL, CHIP 6.8K 0.5X 1/10W
RV1	1-230-523-11	s RES, ADJ, METAL 10K
RV2	1-237-506-21	s RES, ADJ, METAL 100K
S1	1-553-739-21	s SWITCH, TACTILE
T1	1-427-487-00	s TRANSFORMER, OUTPUT
T2	1-427-270-XX	s TRANSFORMER, OUTPUT
T3	1-427-487-00	s TRANSFORMER, OUTPUT

IF-313 BOARD

Ref. No. or Q'ty	Part No.	SP Description
Ipc	A-7515-272-A	o MOUNTED CIRCUIT BOARD, IF-313
C1	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C2	1-126-392-11	s ELECT, CHIP 100uF 20X 6.3V
C3	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C4	1-163-105-00	s CERAMIC, CHIP 33PF 5X 50V
C5	1-163-097-00	s CERAMIC, CHIP 15PF 5X 50V
C6	1-163-083-00	s CERAMIC, CHIP 1PF 50V
C7	1-126-394-11	s ELECT, CHIP 100uF 20X 16V
C8	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C9	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C10	1-126-392-11	s ELECT, CHIP 100uF 20X 6.3V
C11	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C12	1-163-105-00	s CERAMIC, CHIP 33PF 5X 50V
C13	1-163-097-00	s CERAMIC, CHIP 15PF 5X 50V
C14	1-163-083-00	s CERAMIC, CHIP 1PF 50V
C15	1-126-391-11	s ELECT, CHIP 47uF 20X 6.3V
C16	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C17	1-126-401-11	s ELECT, CHIP 1uF 20X 50V
C18	1-126-394-11	s ELECT, CHIP 10uF 20X 16V
C19	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C20	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C21	1-126-401-11	s ELECT, CHIP 1uF 20X 50V
C22	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C23	1-126-176-11	s ELECT 220uF 20X 10V
C25	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C26	1-163-227-11	s CERAMIC 10PF 5X 50V
C27	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C28	1-126-393-11	s ELECT 33uF 20X 10V
C29	1-164-232-11	s CERAMIC, CHIP 0.01uF 10X 50V
C30	1-126-391-11	s ELECT, CHIP 47uF 20X 6.3V
C31	1-163-227-11	s CERAMIC 10PF 5X 50V
C32	1-163-085-00	s CERAMIC, CHIP 2PF 50V
C33	1-126-396-11	s ELECT, CHIP 47uF 20X 16V
C34	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C35	1-163-227-11	s CERAMIC 10PF 5X 50V
C36	1-163-085-00	s CERAMIC, CHIP 2PF 50V
C37	1-126-395-11	s ELECT, CHIP 22uF 20X 16V
C38	1-126-396-11	s ELECT, CHIP 22uF 20X 6.3V
C47	1-126-392-11	s ELECT, CHIP 100uF 20X 6.3V
C48	1-163-091-00	s CERAMIC, CHIP 8PF 50V
C49	1-163-227-11	s CERAMIC 10PF 5X 50V
C50	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C51	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C52	1-126-395-11	s ELECT, CHIP 22uF 20X 16V
C53	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C54	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C55	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C56	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C57	1-163-109-00	s CERAMIC, CHIP 47PF 5X 50V
C58	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C59	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C60	1-163-227-11	s CERAMIC 10PF 5X 50V
C61	1-163-085-00	s CERAMIC, CHIP 2PF 50V
C62	1-126-395-11	s ELECT, CHIP 22uF 20X 16V
C63	1-126-390-11	s ELECT, CHIP 22uF 20X 6.3V
C67	1-163-105-00	s CERAMIC, CHIP 33PF 5X 50V
C68	1-163-105-00	s CERAMIC, CHIP 33PF 5X 50V
C69	1-126-402-11	s ELECT, CHIP 2.2uF 20X 50V

Please see pages D-7 for the part numbers of capacitors and resistors that are not listed in the parts list.

(IF-313 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
C70	1-163-141-00	CERAMIC, CHIP 0.001uF 5% 50V
C71	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C72	1-126-390-11	ELECT, CHIP 22uF 20% 6.3V
C73	1-126-401-11	ELECT, CHIP 1uF 20% 50V
C75	1-126-391-11	ELECT, CHIP 47uF 20% 6.3V
CN1	1-566-581-11	CONNECTOR, MULTI 50P
CN2	1-506-702-11	CONNECTOR, ILG 3P,
CN3	1-506-702-11	CONNECTOR, ILG 3P,
CN4	1-506-474-11	CONNECTOR, 9P, MALE
CN5	1-506-467-11	CONNECTOR, 2P, MALE
CN6	1-506-471-11	CONNECTOR, 6P, MALE
CN7	1-506-470-11	CONNECTOR, 5P, MALE
CN8	1-506-469-11	CONNECTOR, 4P, MALE
CN9	1-506-472-11	CONNECTOR, 7P, MALE
D1	8-719-800-76	DIODE 1SS226
D2	8-719-800-76	DIODE 1SS226
D3	8-719-104-34	DIODE 1S2836
D4	8-719-104-34	DIODE 1S2836
D5	8-719-106-08	DIODE RDS. 2M-82
D6	8-719-104-34	DIODE 1S2836
D7	8-719-105-91	DIODE RDS. 8M-82
D8	8-719-106-44	DIODE RDS. 1M-82
IC1	8-759-100-96	IC UPC4558C2
IC2	8-759-300-71	IC MC14053BF
IC3	8-759-100-96	IC UPC4558C2
IC4	8-759-009-06	IC MC14052BF
IC5	8-759-300-71	IC MC14053BF
IC6	8-759-300-71	IC MC14053BF
IC7	8-759-323-63	IC HD6305YOE26F
IC8	8-759-209-97	IC TC4S81F
IC9	8-759-981-65	IC LM2903M
IC13	8-759-981-65	IC LM2903M
L2	1-408-783-00	CHIP 33uH
Q1	8-729-403-32	TRANSISTOR XN6534
Q2	8-729-403-32	TRANSISTOR XN6534
Q3	8-729-109-44	TRANSISTOR 2SK94
Q4	8-729-402-19	TRANSISTOR XN6501
Q5	8-729-403-32	TRANSISTOR XN6534
Q6	8-729-403-32	TRANSISTOR XN6534
Q7	8-729-109-44	TRANSISTOR 2SK94
Q8	8-729-402-19	TRANSISTOR XN6501
Q9	8-729-402-84	TRANSISTOR XN6401
Q11	8-729-403-32	TRANSISTOR XN6534
Q12	8-729-403-32	TRANSISTOR XN6534
Q13	8-729-402-78	TRANSISTOR XN6401
Q14	8-729-100-66	TRANSISTOR 2SC1623
Q15	8-729-402-78	TRANSISTOR XN6401
Q16	8-729-175-72	TRANSISTOR 2SC2757-T33
Q17	8-729-402-19	TRANSISTOR XN6501
Q18	8-729-402-84	TRANSISTOR XN6401
Q19	8-729-402-78	TRANSISTOR XN6401
Q20	8-729-402-78	TRANSISTOR XN6401
Q21	8-729-402-78	TRANSISTOR XN6401
Q22	8-729-402-84	TRANSISTOR XN6401
Q23	8-729-403-32	TRANSISTOR XN6534
Q24	8-729-402-19	TRANSISTOR XN6501
Q25	8-729-402-78	TRANSISTOR XN6401
Q26	8-729-402-84	TRANSISTOR XN6401

Please see pages D-7 for the part numbers of capacitors and resistors that are not listed in the parts list.

(IF-313 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
Q27	8-729-403-32	TRANSISTOR XN6534
Q28	8-729-402-19	TRANSISTOR XN6501
Q29	8-729-402-78	TRANSISTOR XN6401
Q30	8-729-402-84	TRANSISTOR XN6401
Q31	8-729-403-32	TRANSISTOR XN6534
Q32	8-729-402-18	TRANSISTOR XN6501
Q33	8-729-402-78	TRANSISTOR XN6401
Q35	8-729-402-78	TRANSISTOR XN6401
Q36	8-729-402-19	TRANSISTOR XN6501
Q37	8-729-122-63	TRANSISTOR 2SA1226
Q38	8-729-402-19	TRANSISTOR XN6501
Q39	8-729-402-78	TRANSISTOR XN6401
Q58	8-729-402-84	TRANSISTOR XN6401
Q59	8-729-100-66	TRANSISTOR 2SC1623
Q60	8-729-402-84	TRANSISTOR XN6401
Q61	8-729-201-05	TRANSISTOR 2SC2678-B
Q62	8-729-402-78	TRANSISTOR XN6401
Q63	8-729-109-44	TRANSISTOR 2SK94
Q64	8-729-109-44	TRANSISTOR 2SK94
Q65	8-729-109-44	TRANSISTOR 2SK94
Q66	8-729-100-66	TRANSISTOR 2SC1623
R1	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R25	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R54	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R51	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R68	1-216-671-11	METAL, CHIP 6.8K 0.5% 1/10W
R69	1-216-671-11	METAL, CHIP 6.8K 0.5% 1/10W
R81	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R92	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R93	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R97	1-216-661-11	METAL, CHIP 2.7K 0.5% 1/10W
R98	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R105	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R107	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R108	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R112	1-216-661-11	METAL, CHIP 2.7K 0.5% 1/10W
R113	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R120	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R122	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R123	1-216-679-11	METAL, CHIP 15K 0.5% 1/10W
R152	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R160	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R161	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R168	1-216-623-11	METAL, CHIP 68 0.5% 1/10W
R174	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R199	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R203	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R211	1-216-651-11	METAL, CHIP 1K 0.5% 1/10W
R213	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R216	1-216-661-11	METAL, CHIP 2.7K 0.5% 1/10W
R217	1-216-667-11	METAL, CHIP 4.7K 0.5% 1/10W
R224	1-216-624-11	METAL, CHIP 75 0.5% 1/10W
R277	1-216-686-11	METAL, CHIP 30K 0.5% 1/10W
R282	1-216-649-11	METAL, CHIP 820 0.5% 1/10W
R285	1-216-649-11	METAL, CHIP 820 0.5% 1/10W
R286	1-216-649-11	METAL, CHIP 820 0.5% 1/10W
RV1	1-230-520-11	RES, ADJ, METAL 1K
RV2	1-230-520-11	RES, ADJ, METAL 1K

(IF-313 BOARD)

Ref. No. or Q'ty	Part No.	SP Description
RV3	1-230-520-11 s	RES, ADJ, METAL 1K
S1	1-570-854-11 s	SWITCH, SLIDE
X1	1-567-192-11 s	RESONATOR, CERAMIC 4.00MHz

SW-416 BOARD


Ref. No. or Q'ty	Part No.	SP Description
1pc	A-7520-537-A o	MOUNTED CIRCUIT BOARD, SW-416
1pc	1-562-736-11 o	HOUSING, 3P
1pc	1-564-831-11 o	CONTACT, FEMALE
1pc	1-569-193-11 s	CONTACT
1pc	1-569-196-11 o	HOUSING, 3P
1pc	1-569-200-11 o	HOUSING, CONNECTOR 7P
1pc	1-569-202-11 o	HOUSING, CONNECTOR 9P
1pc	1-569-203-31 o	HOUSING, CONNECTOR 10P
3pcs	3-167-445-02 s	KNOB, SWITCH
CN2	1-506-467-11 o	CONNECTOR, 2P, MALE
S1	1-571-259-11 s	SWITCH, SLIDE
S2	1-571-259-11 s	SWITCH, SLIDE
S3	1-571-798-11 s	SWITCH, SLIDE

FRAME

Ref. No. or Q'ty	Part No.	SP Description
	1-948-158-11 o	HARNESS (CCZ)
C101	1-161-051-00 s	CERAMIC 0.01uF 10% 50V
C102	1-161-051-00 s	CERAMIC 0.01uF 10% 50V
C103	1-161-051-00 s	CERAMIC 0.01uF 10% 50V
C104	1-161-051-00 s	CERAMIC 0.01uF 10% 50V
CN101	1-563-096-11 s	CONNECTOR, 3P FEMALE (WITH SW) "MIC IN"
CN102	1-562-244-00 o	CONNECTOR, 26P MALE "VTR/CCU/CMA"
CN103	1-564-603-11 s	CONNECTOR (WITH DC SW) 4P, MALE "DC IN"
CN104	1-561-781-11 s	CONNECTOR, BNC, FEMALE "GENLOCK IN"
J101	1-507-756-31 s	JACK "EARPHONE"
S101	1-552-665-00 s	SWITCH, MICRO "BATTERY"

1.5INCH ELECTRONIC VIEWFINDER

DXF-501

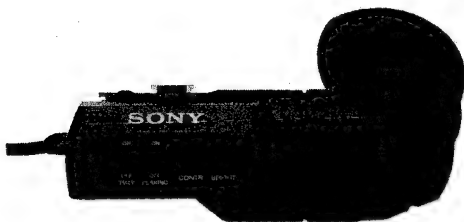

SPECIFICATIONS

Picture tube	1.5-inch monochrome
Indicators	REC/TALLY indicator BATT indicator SHUTTER indicator GAIN UP indicator
Resolution	400 lines
Power requirements	12 V DC
Power consumption	2.3 W
Weight	Approx. 500 g (1 lb 2 oz)
Dimensions	Approx. 182 × 68 × 205 mm (w/h/d)
Supplied accessory	Operating Instructions (1)

Design and specifications are subject to change without notice.

SONY®

SERVICE MANUAL

TABLE OF CONTENTS

A. BLOCK DIAGRAM

OverallA-1

B. SEMICONDUCTOR

SemiconductorB-1

C. SCHEMATIC DIAGRAM AND BOARD ILLUSTRATION

MAIN
SW
LED C-3

D. SPARE PARTS

D-1. Parts InformationD-1

D-2. Exploded View.....D-3

D-3. Electrical Parts List.....D-5

No.	Part No.	SP Description		
1	Δ 1-546-078-11	s CRT/DY ASSY	55	9-994-826-01 o STOPPER, FWB
2	1-589-128-11	o MAIN BOARD (for DXF-501)	56	9-994-827-01 o COLLAR
3	1-589-128-21	o MAIN BOARD (for DXF-501CE)	57	9-997-916-01 o MIRROR
4	1-589-129-11	o SW BOARD (for DXF-501)	58	9-997-917-01 o SPACER
5	1-589-129-21	o SW BOARD (for DXF-501CE)	59	9-997-918-01 o RING, LOCK
6	2-277-453-00	s KNOB, CONTROL	60	9-997-919-01 o HOLDER A, LENS
7	2-277-456-00	s COLLAR, STOPPER	61	9-997-920-01 o HOLDER B, LENS
8	2-277-457-00	s KNOB, STOPPER	62	9-997-921-01 o RING, ADJUSTMENT
9	2-277-466-01	s SPRING, COMPRESSION	63	9-997-922-01 o LID
10	2-277-468-01	o PLATE, ORNAMENTAL, CAMERA, SHOE	64	9-997-923-01 s EYECUP
11	2-381-461-02	s PIN, BLIND	65	9-997-924-01 o RING, RUBBER
12	2-381-462-01	s PIN	66	9-997-925-01 o BALL, STEEL
13	2-381-468-01	s PIN, STOPPER	67	3-680-417-01 s LUPE B, VF
14	2-381-472-02	o STOPPER	68	9-998-810-01 o CASE, TOP
16	2-832-007-00	s BUSHING (K), INSULATING	69	1-230-075-00 s RES, VAR, METAL 2K "CONTR" "BRIGHT"
17	3-657-700-00	s BRACKET, ACCESSORY	70	1-570-845-11 s SWITCH, SLIDE
18	3-672-213-01	o SHEET, ADHESIVE	71	9-994-802-01 s DIODE SLH-56VT "TALLY ON/OFF" "PEAKING ON/OFF"
19	3-680-604-01	o PLATE, BLIND		
20	3-680-605-00	o CAP, SLIDE		
21	3-688-709-01	s NUT, PLATE, SHOE		
24	3-703-037-00	s INSULATOR, TO-220		
25	7-621-255-25	s SCREW +P2X4		
26	7-621-255-52	s SCREW +P2X8		
27	7-621-773-95	s SCREW +B2.5X6		
28	7-621-775-00	s SCREW +B2.5X3		
29	7-624-102-04	s STOP RING, TYPE E		
31	7-627-552-58	s SCREW, PRECISION +P1.7X5		
32	7-627-553-28	s SCREW, PRECISION +P2X2.5		
33	7-627-553-68	s SCREW, PRECISION +P2X6		
34	7-682-248-09	s SCREW +K3X8		
35	7-682-550-09	s SCREW +B3X12		
36	7-685-131-19	s SCREW +BTF2.6X4		
37	7-688-008-04	s WASHER		
38	8-729-385-82	s TRANSISTOR 2SB858		
39	9-994-797-01	s CABLE, VF		
40	9-994-811-01	o SPRING, PLATE		
41	9-994-812-01	o INSULATOR		
42	9-994-813-01	o LABEL, SWITCH		
43	9-994-814-01	o CASE, BOTTOM		
44	9-994-815-01	o HOLDER T, OUTSIDE		
45	9-994-816-01	o PLATE, NUT		
46	9-994-817-01	o MOLT		
47	9-994-818-01	o HOLDER B, OUTSIDE		
48	9-994-819-01	o PIN, LOCK		
49	9-994-820-01	o RING, SLIDE		
50	9-994-821-01	o NUT, PLATE, CASE		
51	9-994-822-01	o GUIDE, VF SLIDE		
52	9-994-823-01	o LABEL, SLIDE		
53	9-994-824-01	o STOPPER		
54	9-994-825-01	o RUBBER, STOPPER		

Ref. No. Part No. SP Description

RESISTOR, CHIP

1/10W

0 - 3.3M (E12) +-5% 1/10W

1-216-295-00	s	RES, CHIP	0	5%	1/10W
1-216-298-00	s	RES, CHIP	2.2	5%	1/10W
1-216-302-00	s	RES, CHIP	2.7	5%	1/10W
1-216-304-00	s	RES, CHIP	3.3	5%	1/10W
1-216-306-00	s	RES, CHIP	3.9	5%	1/10W
1-216-308-00	s	RES, CHIP	4.7	5%	1/10W
1-216-309-00	s	RES, CHIP	5.6	5%	1/10W
1-216-311-00	s	RES, CHIP	6.8	5%	1/10W
1-216-313-00	s	RES, CHIP	8.2	5%	1/10W
1-216-001-00	s	RES, CHIP	10	5%	1/10W
1-216-003-00	s	RES, CHIP	12	5%	1/10W
1-216-005-00	s	RES, CHIP	15	5%	1/10W
1-216-007-00	s	RES, CHIP	18	5%	1/10W
1-216-009-00	s	RES, CHIP	22	5%	1/10W
1-216-011-00	s	RES, CHIP	27	5%	1/10W
1-216-013-00	s	RES, CHIP	33	5%	1/10W
1-216-015-00	s	RES, CHIP	39	5%	1/10W
1-216-017-00	s	RES, CHIP	47	5%	1/10W
1-216-019-00	s	RES, CHIP	56	5%	1/10W
1-216-021-00	s	RES, CHIP	68	5%	1/10W
1-216-023-00	s	RES, CHIP	82	5%	1/10W
1-216-025-00	s	RES, CHIP	100	5%	1/10W
1-216-027-00	s	RES, CHIP	120	5%	1/10W
1-216-029-00	s	RES, CHIP	150	5%	1/10W
1-216-031-00	s	RES, CHIP	180	5%	1/10W
1-216-033-00	s	RES, CHIP	220	5%	1/10W
1-216-035-00	s	RES, CHIP	270	5%	1/10W
1-216-037-00	s	RES, CHIP	330	5%	1/10W
1-216-039-00	s	RES, CHIP	390	5%	1/10W
1-216-041-00	s	RES, CHIP	470	5%	1/10W
1-216-043-00	s	RES, CHIP	560	5%	1/10W
1-216-045-00	s	RES, CHIP	680	5%	1/10W
1-216-047-00	s	RES, CHIP	820	5%	1/10W
1-216-049-00	s	RES, CHIP	1k	5%	1/10W
1-216-051-00	s	RES, CHIP	1.2k	5%	1/10W
1-216-053-00	s	RES, CHIP	1.5k	5%	1/10W
1-216-055-00	s	RES, CHIP	1.8k	5%	1/10W
1-216-057-00	s	RES, CHIP	2.2k	5%	1/10W
1-216-059-00	s	RES, CHIP	2.7k	5%	1/10W
1-216-061-00	s	RES, CHIP	3.3k	5%	1/10W
1-216-063-00	s	RES, CHIP	3.9k	5%	1/10W
1-216-065-00	s	RES, CHIP	4.7k	5%	1/10W
1-216-067-00	s	RES, CHIP	5.6k	5%	1/10W
1-216-069-00	s	RES, CHIP	6.8k	5%	1/10W
1-216-071-00	s	RES, CHIP	8.2k	5%	1/10W
1-216-073-00	s	RES, CHIP	10k	5%	1/10W
1-216-075-00	s	RES, CHIP	12k	5%	1/10W
1-216-077-00	s	RES, CHIP	15k	5%	1/10W
1-216-079-00	s	RES, CHIP	18k	5%	1/10W
1-216-081-00	s	RES, CHIP	22k	5%	1/10W

Ref. No. Part No. SP Description

1-216-083-00	s	RES, CHIP	27k	5%	1/10W
1-216-085-00	s	RES, CHIP	33k	5%	1/10W
1-216-087-00	s	RES, CHIP	39k	5%	1/10W
1-216-089-00	s	RES, CHIP	47k	5%	1/10W
1-216-091-00	s	RES, CHIP	56k	5%	1/10W
1-216-093-00	s	RES, CHIP	68k	5%	1/10W
1-216-095-00	s	RES, CHIP	82k	5%	1/10W
1-216-097-00	s	RES, CHIP	100k	5%	1/10W
1-216-099-00	s	RES, CHIP	120k	5%	1/10W
1-216-101-00	s	RES, CHIP	150k	5%	1/10W
1-216-103-00	s	RES, CHIP	180k	5%	1/10W
1-216-105-00	s	RES, CHIP	220k	5%	1/10W
1-216-107-00	s	RES, CHIP	270k	5%	1/10W
1-216-109-00	s	RES, CHIP	330k	5%	1/10W
1-216-111-00	s	RES, CHIP	390k	5%	1/10W
1-216-113-00	s	RES, CHIP	470k	5%	1/10W
1-216-115-00	s	RES, CHIP	560k	5%	1/10W
1-216-117-00	s	RES, CHIP	680k	5%	1/10W
1-216-119-00	s	RES, CHIP	820k	5%	1/10W
1-216-121-00	s	RES, CHIP	1.0M	5%	1/10W
1-216-123-00	s	RES, CHIP	1.2M	5%	1/10W
1-216-125-00	s	RES, CHIP	1.5M	5%	1/10W
1-216-127-00	s	RES, CHIP	1.8M	5%	1/10W
1-216-129-00	s	RES, CHIP	2.2M	5%	1/10W
1-216-131-00	s	RES, CHIP	2.7M	5%	1/10W
1-216-133-00	s	RES, CHIP	3.3M	5%	1/10W

Ref. No. Part No. SP Description

MAIN BOARD

1-589-128-11 o MOUNTED CIRCUIT BOARD
"MAIN"
9-994-794-01 s CRT

C20 9-994-781-01 s TANTALUM 47 16V
C21 1-163-038-11 s CHIP CERAMIC 0.1 25V
C22 1-163-038-11 s CHIP CERAMIC 0.1 25V
C23 1-126-157-11 s ELECT 10 20% 16V
C24 1-124-464-11 s ELECT 0.22 20% 50V

C26 9-994-780-01 s P-P CONDENSER 0.0047
C28 1-124-438-11 s ELECT 1 20% 50V
C29 1-124-584-11 s ELECT 100 20% 10V
C30 1-131-347-00 s TANTALUM 1 10% 35V
C31 1-126-157-11 s ELECT 10 20% 16V

C32 1-163-133-11 s CHIP CERAMIC 470PF 5% 50V
C33 1-126-157-11 s ELECT 10 20% 16V
C34 1-126-162-11 s ELECT 3.3 20% 50V
C35 1-163-088-11 s CHIP CERAMIC 0.1 25V
C36 1-124-455-00 s ELECT 100 20% 16V

C37 9-994-777-01 s ELECT 220 6.3V
C38 1-130-481-11 s CAP,PE TEREPHTHALATE
0.0068 5% 50V

C40 1-163-088-11 s CHIP CERAMIC 0.1 25V
C43 1-163-088-11 s CHIP CERAMIC 0.1 25V
C44 9-994-782-01 s TANTALUM 47 16V

C46 1-126-162-11 s ELECT 3.3 20% 50V
C48 9-994-783-01 s 0.0056 100V
C49 9-994-778-01 s ELECT 22 63V
C50 9-994-784-01 s 0.0015 1K
C51 1-163-088-11 s CHIP CERAMIC 0.1 25V

C52 9-994-779-01 s ELECT 56 16V
C53 1-163-088-11 s CHIP CERAMIC 0.1 25V
C54 1-163-088-11 s CHIP CERAMIC 0.1 25V
C55 1-163-088-11 s CHIP CERAMIC 0.1 25V

CN4 9-994-791-01 o RECEPTACLE, 7P
CN7 9-994-792-01 o RECEPTACLE, 3P
CN8 9-994-793-01 o RECEPTACLE, 2P

D2 8-719-914-42 s DA204K
D4 8-719-911-19 s ISS119
D5 9-994-773-01 s ERA15-06
D6 9-994-774-01 s ISS136
D7 8-719-948-45 s ERA22-08

Ref. No. Part No. SP Description

HLC 1-459-823-11 s COIL,HORIZONTAL LINEARITY

IC2 8-759-300-28 s HA11423MP: HITACHI

IC3 8-759-100-94 s μ PC358G2:

Q10 8-729-881-23 s 2SC2812-L7

Q11 8-729-881-23 s 2SC2812-L7

Q12 8-729-100-76 s 2SA812

Q20 8-729-881-23 s 2SC2812-L7

Q21 9-994-771-01 s 2501220

Q22 8-729-119-00 s 2SK512

Q23 8-729-162-43 s 2SB624-BV3

R43 Δ 1-216-109-11 s CHIP 330K 5% 1/10W

R44 Δ 1-216-083-11 s CHIP 27K 5% 1/10W

R50 Δ 1-216-057-11 s CHIP 2.2K 5% 1/10W

R61 Δ 1-216-057-11 s CHIP 2.2K 5% 1/10W

R65 Δ 9-994-785-01 s 10M

R67 Δ 9-994-786-01 s 91K

R69 Δ 1-216-081-11 s CHIP 22K 5% 1/10W

R70 Δ 1-216-079-11 s CHIP 18K 5% 1/10W

R72 Δ 1-216-081-11 s CHIP 22K 5% 1/10W

R73 Δ 1-216-081-11 s CHIP 22K 5% 1/10W

RV10 9-994-787-01 s 5K

RV11 9-994-788-01 s 5K

RV12 9-994-789-01 s 200

RV13 9-994-790-01 s 500

RV20 Δ 1-228-459-11 s METAL 10K

RV21 Δ 1-228-458-11 s METAL 5K

T1 Δ 1-439-419-11 s FBT

Ref. No. Part No. SP Description

SW BOARD

1-589-129-11 o MOUNTED CIRCUIT BOARD "SW"
(J,UC)
1-589-129-21 o MOUNTED CIRCUIT BOARD "SW"
(EK)

C1 1-124-438-11 s ELECT 1 20% 50V
C3 1-124-584-11 s ELECT 100 20% 10V
C4 1-124-584-11 s ELECT 100 20% 10V
C5 1-126-154-11 s ELECT 47 20% 6.3V
C6 1-124-438-11 s ELECT 1 20% 50V

C7 1-124-462-11 s ELECT 10 20% 16V
C8 1-163-113-11 s CHIP CERAMIC 68PF 5% 50V
C9 1-163-105-11 s CHIP CERAMIC 33PF 5% 50V
C10 1-163-015-11 s CHIP CERAMIC 0.0033 10%
50V
C11 1-163-038-11 s CHIP CERAMIC 0.1 25V

CN1 9-994-803-01 o 8P
CN2 9-994-804-01 o 3P
CN3 9-994-805-01 o 5P
CN4 9-994-806-01 o 7S
CNS 9-994-807-01 o 2P

CP 9-994-808-01 s PROTECTORS ICP-N10(EK)

D1 8-719-914-43 s DAN202K

IC1 A 8-759-630-27 s M5236ML: MITSUBISHI

L1 9-994-800-01 s 100uH
L2 9-994-801-01 s 47uH

LED1 9-994-802-01 s SLH-56VT

Q2 8-729-881-23 s 2SC2812-L7
Q3 8-729-881-23 s 2SC2812-L7
Q4 8-729-881-23 s 2SC2812-L7
Q5 1-806-828-11 s 2SC2814
Q6 9-994-796-01 s 2SC3722K
Q7 9-994-796-01 s 2SC3722K
Q8 8-729-881-23 s 2SC2812-L7

Ref. No. Part No. SP Description

R2 A 9-994-799-01 s CHIP 24K 5% 1/10W
R3 A 1-216-064-11 s CHIP 4.3K 5% 1/10W

RV1 A 1-228-473-11 s METAL 5K

RV2 1-230-075-11 s CARBON 2K "CONTR"
RV3 1-228-475-11 s METAL 20K
RV4 1-226-368-11 s CARBON 10K "BRIGHT"

S1 1-570-845-11 s SLIDE "PEAKING ON/OFF"
S2 1-570-845-11 s SLIDE "TALLY ON/OFF"

LED BOARD

1-589-127-11 o MOUNTED CIRCUIT BOARD
"LED"

9-994-810-01 o LED PWB

CN9 9-994-809-01 o RECEPTACLE, 5P

LED2 8-719-800-25 s TLR109A
LED3 8-719-800-25 s TLR109A
LED4 8-719-800-25 s TLR109A
LED5 8-719-800-19 s TLR102A

FRAME

Q1 8-729-315-63 s 2S9856

PACKING MATERIAL AND ACCESSORIES

3-166-610-01 o CARTON, INDIVIDUAL(UC)
3-166-612-01 o CARTON, INDIVIDUAL(EK)
3-699-152-01 o CUSHION, UPPER
3-699-153-03 o CUSHION, LOWER
3-701-627-01 o BAG, POLY

ZOOM LENS

VCL-916BY




SPECIFICATIONS

Focal length	9.5 to 152 mm
Zoom	Manual and motorized, selectable
	Zooming ratio: 16x
Maximum aperture ratio	1:1.8
Iris control	Manual and auto, selectable
	1.8 to 16 and C (closed)
Range of object field (at the distance of 0.95 m)	
	W (wide angle): 823 x 617 mm
	(32 1/2 x 24 3/8 inches)
	T (telephoto): 51 x 38 mm
	(2 1/8 x 1 1/2 inches)
Minimum object distance	0.95 m
Filter thread	77 mm dia., 0.75 pitch
Mount	Bayonet mount, 2/3 inch
Weight	About 1.4 kg (3 lb 1 oz) without lens hood
Supplied accessory	

Operating instructions (1)

Dimensions

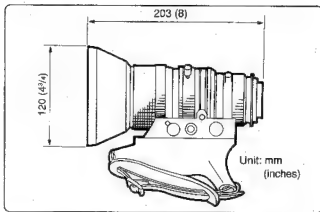


Design and specifications are subject to change without notice.

SONY®

SERVICE MANUAL

No.	Part No.	SP Description
1	3-707-245-01	o CAP, FODD
2	3-707-246-01	o CAP, DUST
3	3-707-247-01	o LEVER, ZOOM
4	3-708-171-01	o HOOD, LENS

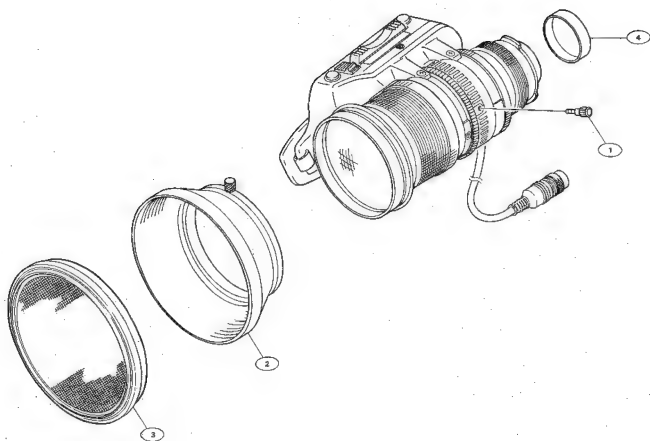

SPECIFICATIONS

Dimensions	Approx. 282 x 27 x 80 mm (w/h/d) (11 ³ / ₈ x 1 ¹ / ₈ x 3 ¹ / ₄ inches) without V-wedge.
Weight	Approx. 0.9 kg (2 lb)


Design and specifications subject to change without notice.

EXPLODED VIEW

No.	Parts No.	SP Description
1	2-381-631-01	o SPRING
2	2-381-632-01	o ARM, LOCKER
3	2-381-633-01	o SOLENOID
4	2-381-635-01	o LEVER, LOCK
5	2-381-636-01	o KNOB
6	2-381-637-01	o SPRING
7	2-381-638-01	o SPRING
8	2-381-640-01	o DOG
9	2-381-641-01	o COLLAR
10	2-381-642-02	o MOUNT
11	2-381-648-01	o INSULATOR, KNOB
12	2-381-652-01	o SPRING, TENSION
13	3-678-704-00	o SPACER
14	3-720-906-01	o LID (S), REAR
15	3-720-907-01	o PIN (S), REAR
16	3-720-908-01	o TABLE (S), PIN, REAR
17	3-720-909-01	o KNOB, CRANK
18	3-720-910-01	o SHEET, SLIDE
19	3-720-911-01	o BASE, TRIPOD FITTING SCREW
20	3-720-912-01	o FRAME (S)
21	OPTIONAL ACCESSORY: TRIPOD ATTACHMENT "VCT-14"	


VCT-14



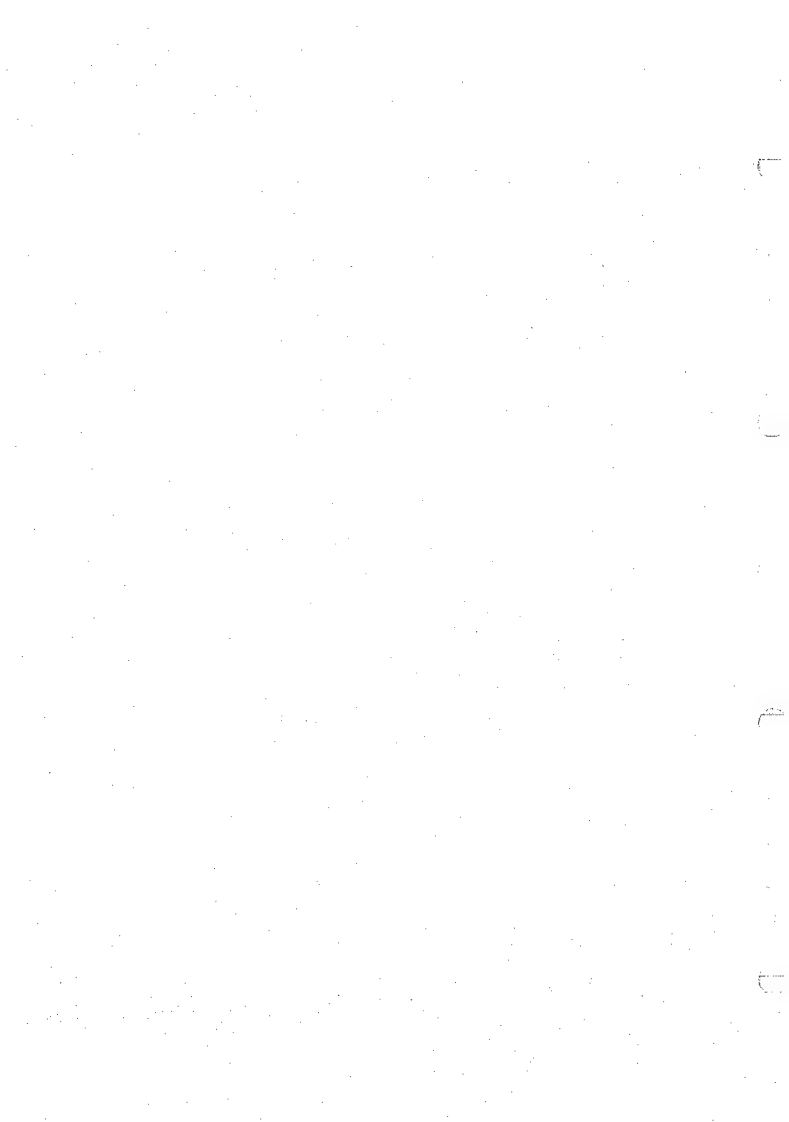

CAMERA CABLE


CCZQ-A2

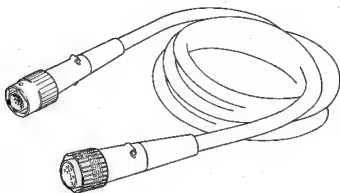


SONY[®]
SERVICE MANUAL


EXPLODED VIEW

No.	Parts No.	SP Description
1	1-508-929-00	s CONNECTOR, 14P MALE
2	1-564-184-00	s CONNECTOR, 26P FEMALE

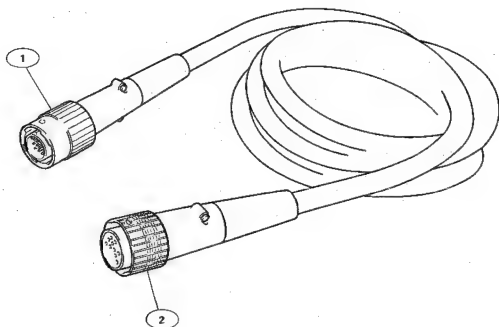

SECTION A BLOCK DIAGRAM

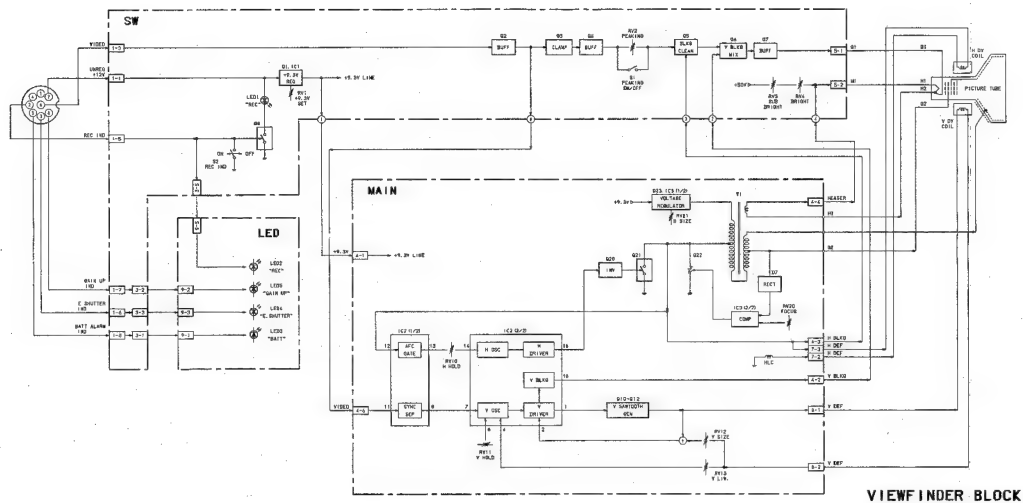

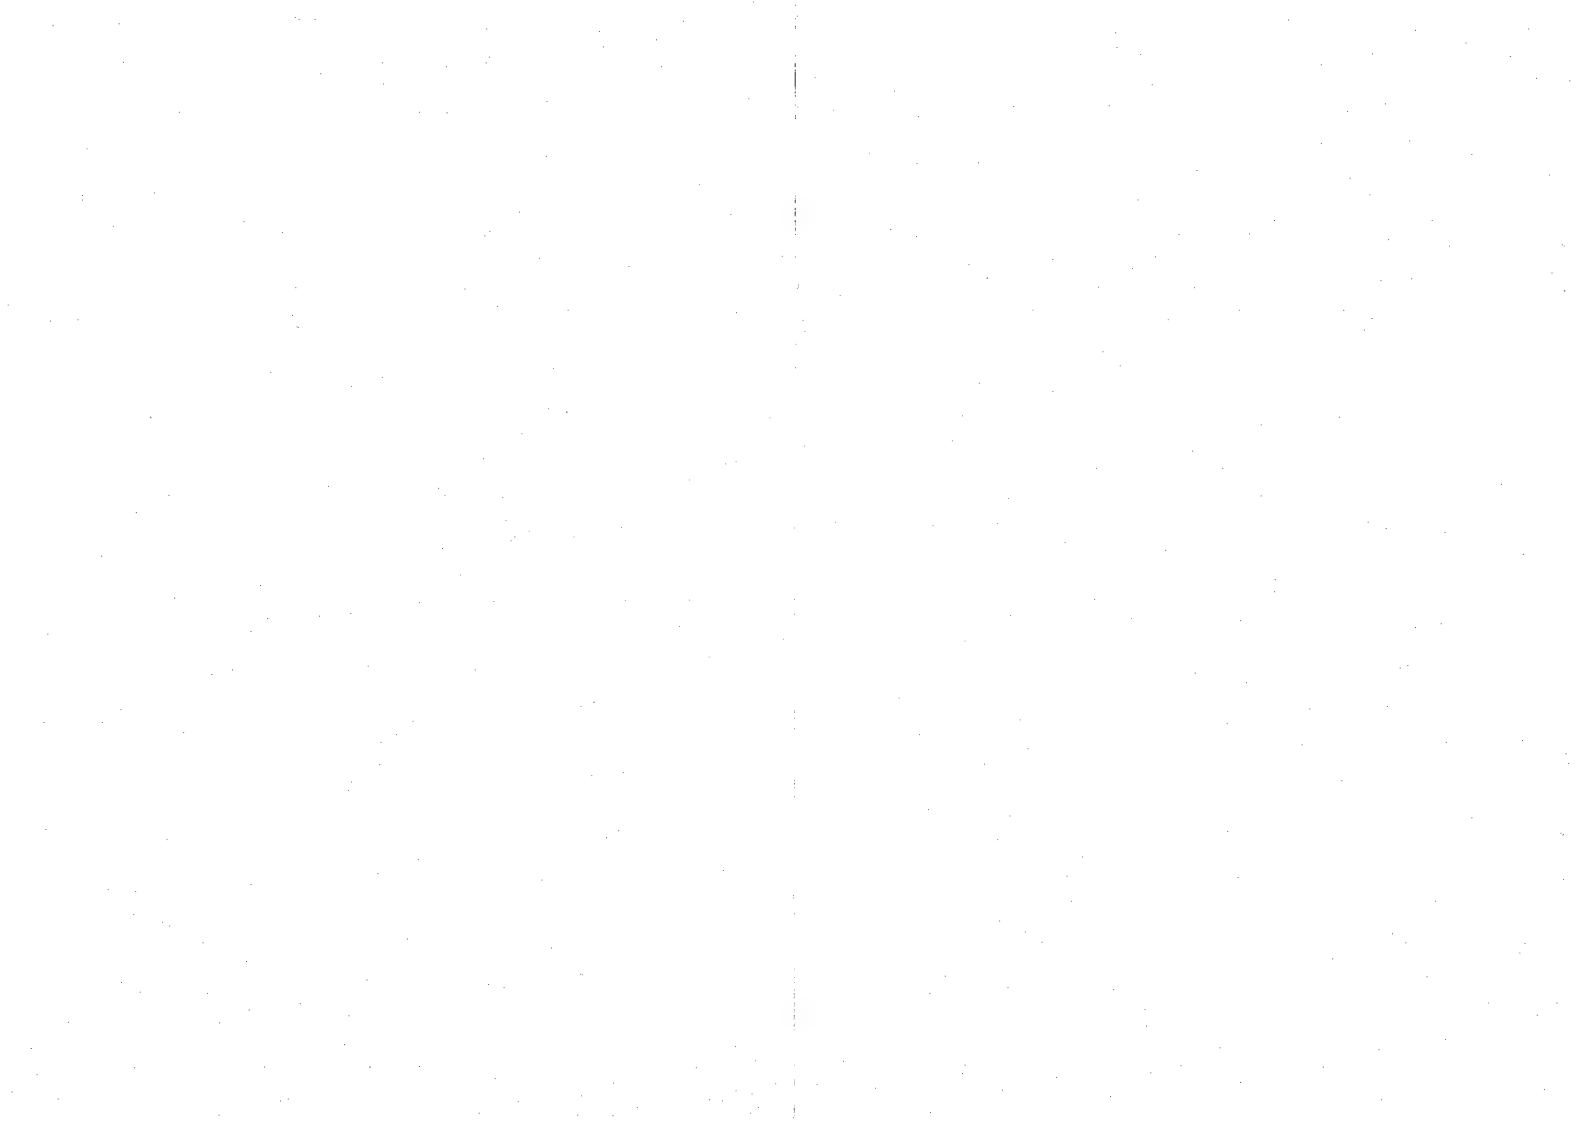

SECTION B SEMICONDUCTOR PIN ASSIGNMENTS

The circuit diagram of IC is obtained from the IC data book published by the manufacturer.

< DIODE >

TOP VIEW (SCALE 4/1)



1S2837
DAN202K



1S5133
1S5136
EPA15-06
ERA22-06

TOP VIEW (SCALE 4/1)



DA204K



SLH56VT



TL0102A
TLR108A

< TRANSISTOR >

TOP VIEW (SCALE 4/1)



2SA812
2S8824

TOP VIEW (SCALE 4/1)



2SC2812
2SC2814
2SC3722K



2SD1220



2SK812

< IC >


HA11423MP (HITACHI) FLAT PACKAGE
TV H/V SYNC SIGNAL PROCESSOR
- TOP VIEW -




MS236ML (MITSUBISHI)
ADJUSTABLE VOLTAGE REGULATOR



μPC358G2 (NEC) FLAT PACKAGE
DUAL OPERATIONAL AMPLIFIERS
- TOP VIEW -

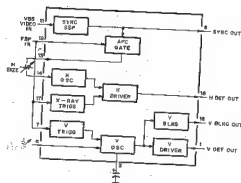

SECTION C
SCHEMATIC DIAGRAMS AND BOARD ILLUSTRATIONS

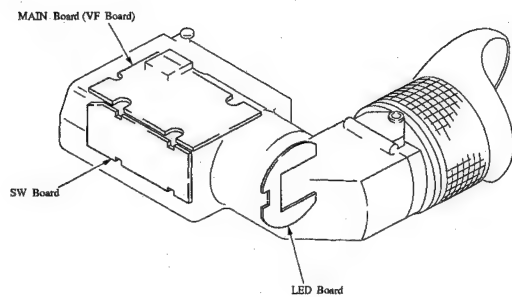



SECTION D SPARE PARTS


PARTS INFORMATION

1. Safety Related Component Warning

Components identified by shading marked with Δ on the schematic diagrams, exploded views and electrical are critical to safe operation. Replace these components with Sony parts whose parts numbers appear as shown or in service manual supplements published by Sony.

2. Replacement Parts supplied from Sony Parts Center will sometimes have different shape and outside view from that actually in use. This is due to **"accommodating the improved parts and/or engineering of standardization of genuine parts."** This manual's exploded view and electrical spare parts lists are indicators of "the standardized genuine parts at present." Regarding engineering parts and diagrams changes in our department, refer to SONY service bulletins and service manual supplements.
3. The parts marked with "S" in the SP column of the exploded views and electrical spare parts list are required for routine service work. Orders for parts marked with "O" will be processed, but allow for additional time.
4. Items with no parts number and/or no description are not stocked because they are seldom required for routine service.
5. All capacitors are in micro farads unless otherwise specified.
All inductors are in micro henries unless otherwise specified.
All resistors are in ohms.

EXPLODED VIEW

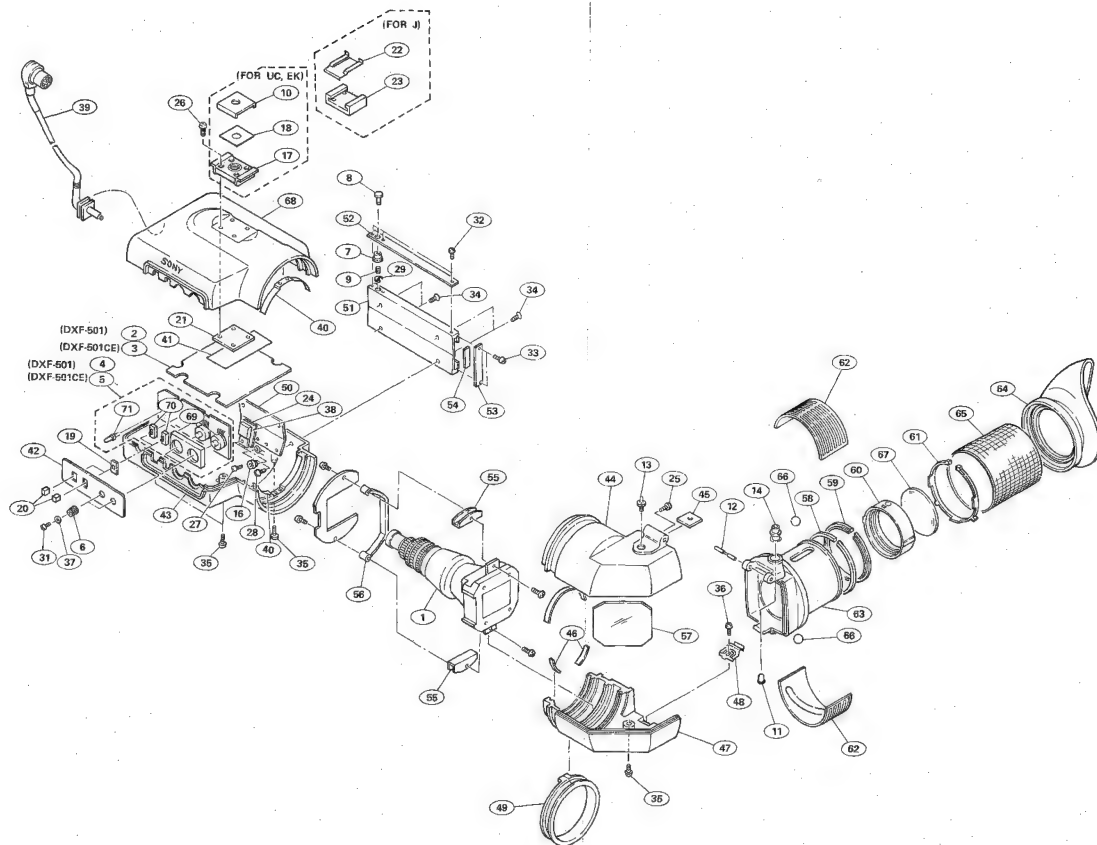

CHASSIS (1) BLOCK

No.	Part No.	SP Description	No.	Part No.	SP Description
101	A-7420-201-A	o CHASSIS ASSY, BASE	161	3-716-391-01	o WEDGE, MOUNTING
102	A-7612-352-A	s SHOE (A) ASSY, V	162	3-720-919-01	o RUBBER, LOCK RING
103	X-3165-705-1	o GRILLE ASSY, MICROPHONE	163	3-725-907-01	s BUSHING, BLIND
104	X-3165-716-1	o PANEL ASSY, SIDE SW	164	3-729-064-01	o GUARD (A), CAMERA SHOE
105	X-3744-307-1	s SUSPENSION ASSY	165	3-729-065-01	s SHOE (A), CAMERA
106	1-542-126-31	s MICROPHONE UNIT	166	7-621-772-08	s SCREW +B 2X3
107	1-554-488-00	s SWITCH, TOGGLE	167	7-621-773-86	s SCREW +B 2.6X4
108	1-561-320-00	s SOCKET, DIN 8P	168	7-621-773-95	s SCREW +B 2.6X6
109	1-561-781-21	s CONNECTOR, BNC "VIDEO OUT"	169	7-621-775-08	s SCREW +B 2.6X3
110	1-562-221-21	s CONNECTOR, 12P "LENS"	170	7-621-775-20	s SCREW +B 2.6X5
111	1-562-782-21	s CONNECTOR, 10P "REMOTE VF"	171	7-627-452-58	s SCREW +K 2X6 TYPE1
112	1-572-655-11	s SWITCH, TOGGLE "POWER"	172	7-627-454-28	s SCREW, PRECISION +K 2.6X4.5
113	1-948-168-11	o HARNESS (CN)	173	7-627-556-37	s SCREW, PRECISION +P2.6X4 TYPE 1
114	2-277-468-01	o PLATE, ORNAMENTAL, CAMERA SHOE	174	7-627-556-38	s SCREW +P 2.6X4.0
115	3-168-324-01	o LID (B), HANDLE	175	7-627-556-58	s PRECISION SCREW +P 2.6X5 TYPE1
116	3-168-328-01	o BRACKET, MICROPHONE COVER	176	7-682-180-09	s SCREW +P 4X6
117	3-168-329-01	o BRACKET, MICROPHONE	177	7-682-281-09	s SCREW +K 4X8
118	3-168-330-01	o BRACKET (FRONT UPPER), PC BOARD	178	7-682-548-04	s SCREW +B 3X5
119	3-168-331-01	o BRACKET (REAR UPPER), PC BOARD	179	7-682-547-04	s SCREW +B 3X6
120	3-168-332-01	o BRACKET (REAR LOWER), PC BOARD	180	7-682-547-09	s SCREW +B 3X6
121	3-168-333-01	o BRACKET (FRONT LOWER), PC BOARD	181	7-682-561-04	s SCREW +B 4X8
122	3-168-334-01	o SPRING, AT	182	7-682-664-03	s SCREW +P3 4X14
123	3-168-335-01	o SHOE (2), VF SLIDE	183	7-682-563-09	s SCREW +B 4X12
124	3-168-337-01	s FOOT	184	7-682-947-01	s SCREW +PSW 3X6
125	3-168-338-01	s SHOE, STOPPER	185	7-683-419-04	s BOLT, HEXAGON SOCKET 4X8
126	3-168-339-01	o COVER, BOTTOM	186	7-683-427-04	s BOLT, HEXAGON SOCKET 4X25
127	3-168-340-01	o LABEL (POWER)	187	7-685-234-15	s SCREW +KTP 2.6X8 TYPE2 N-S
128	3-168-341-01	o LABEL (VIDEO OUT)	188	7-688-004-02	s W 4, SMALL
129	3-168-342-01	o LABEL (LENS)			
130	3-168-355-01	o PLATE, CN			
131	3-168-360-01	o PANEL, FRONT SW			
132	3-168-361-02	o TABLE (2), FIXED, VF SLIDE			
133	3-168-362-01	o TABLE (2), FIXED, VF SHOE			
134	3-168-363-01	o LID (A), HANDLE			
135	3-168-364-01	o RAIL, PC BOARD			
136	3-168-369-01	o HANDLE			
137	3-168-370-01	o CABINET			
138	3-168-372-01	s PAD, SHOULDER			
139	3-168-037-01	o FILTER			
140	3-168-268-01	o LID (C), HANDLE			
141	3-657-700-00	s BRACKET, ACCESSORY			
142	3-669-117-21	o SPACER, MOTOR			
143	3-672-213-00	o SHEET, ADHESIVE			
144	3-672-221-02	s PACKING, CONTROL			
145	3-672-253-11	o RUBBER, CONDUCTIVE			
146	3-673-046-00	s LEVER, LOCK			
147	3-676-244-00	s COVER, SWITCH			
148	3-687-116-01	o WASHER (4), STOPPER			
149	3-689-039-11	s BOLT (M2X6), HOLE, HEXAGON			
150	3-701-506-01	s SET SCREW, DOUBLE POINT 3X4			
151	3-701-508-00	s SET SCREW, DOUBLE POINT 3X5			
152	3-710-002-01	o BRACKET			
153	3-710-018-01	o COLLAR, SLIDE			
154	3-711-703-01	o STOPPER			
155	3-711-790-01	o SPACER (A)			
156	3-711-791-01	o ARM			
157	3-711-792-01	o SCREW			
158	3-711-793-01	o CUSHION (STOPPER)			
159	3-711-794-01	o PIN, STOPPER			
160	3-711-795-11	o RING (B), LOCK			

CHASSIS (2) BLOCK

No.	Part No.	SP Description
201	A-7420-205-A	o PLATE (L) ASSY, SIDE
202	A-7420-206-A	o PLATE (R) ASSY, SIDE
203	A-7515-282-A	o MOUNTED CIRCUIT BOARD, AT-59
204	A-7515-283-A	o MOUNTED CIRCUIT BOARD (N), MB-307 (for DXC-537)
	A-7515-284-A	o MOUNTED CIRCUIT BOARD (P), MB-307 (for DXC-537P)
205	A-7515-285-A	o MOUNTED CIRCUIT BOARD (U), EN-95 (for DXC-537)
	A-7515-287-A	o MOUNTED CIRCUIT BOARD (P), EN-95 (for DXC-537P)
206	A-7515-288-A	o MOUNTED CIRCUIT BOARD (N), SG-171 (for DXC-537)
	A-7515-289-A	o MOUNTED CIRCUIT BOARD (P), SG-171 (for DXC-537P)
207	A-7515-290-A	o MOUNTED CIRCUIT BOARD (U), PR-143 (for DXC-537)
	A-7515-291-A	o MOUNTED CIRCUIT BOARD (JEK), PR-143 (for DXC-537P)
208	A-7515-292-A	o MOUNTED CIRCUIT BOARD (N), IE-28 (for DXC-537)
	A-7515-293-A	o MOUNTED CIRCUIT BOARD (P), IE-28 (for DXC-537P)
209	X-3165-719-1	o LID ASSY, SIDE SW
210	1-590-489-11	s WIRE, FLAT TYPE (25 CORE)
211	3-167-445-01	s KNOB, SWITCH
212	3-168-350-01	o PLATE, SIDE PLATE
213	3-168-353-01	o BRACKET (UPPER), AT
214	3-168-354-01	o BRACKET (LOWER), AT
215	3-168-357-01	s PAD, PLATE, SIDE
216	3-672-221-02	s PACKING, CONTROL
217	3-672-253-11	o RUBBER, CONDUCTIVE
218	3-678-607-02	o LABEL, FILTER
219	3-701-822-00	o HOLDER, WIRE
220	7-621-775-06	s SCREW +B 2.6X3
221	7-623-923-11	s WASHER 2.6, NYLONE
222	7-624-200-01	s NUT, PUSH 1.5
223	7-627-450-58	s SCREW, PRECISION -K 1.7X3
224	7-682-546-04	s SCREW +B 3X5
225	7-682-548-09	s SCREW +B 3X8
226	7-682-550-09	s SCREW +B 3X12
227	7-682-553-09	s SCREW +B 3X20
228	7-685-533-14	s SCREW +BTP 2.6X8 TYPE2 N-S

ELECTRICAL PARTS

CAPACITOR, CHIP CERAMIC

Part No. SP Description

1-183-083-00	s	CAP, CHIP CERAMIC	1pF	+0.25pF	50V
1-183-085-00	s	CAP, CHIP CERAMIC	2pF	+0.25pF	50V
1-183-087-00	s	CAP, CHIP CERAMIC	4pF	+0.25pF	50V
1-183-089-00	s	CAP, CHIP CERAMIC	6pF	+0.5pF	50V
1-183-091-00	s	CAP, CHIP CERAMIC	8pF	+0.5pF	50V
1-183-093-00	s	CAP, CHIP CERAMIC	10pF		5% 50V
1-183-097-00	s	CAP, CHIP CERAMIC	15pF		5% 50V
1-183-101-00	s	CAP, CHIP CERAMIC	22pF		5% 50V
1-183-105-00	s	CAP, CHIP CERAMIC	33pF		5% 50V
1-183-109-00	s	CAP, CHIP CERAMIC	47pF		5% 50V
1-183-113-00	s	CAP, CHIP CERAMIC	68pF		5% 50V
1-183-117-00	s	CAP, CHIP CERAMIC	100pF		5% 50V
1-183-121-00	s	CAP, CHIP CERAMIC	150pF		5% 50V
1-183-125-00	s	CAP, CHIP CERAMIC	220pF		5% 50V
1-183-129-00	s	CAP, CHIP CERAMIC	330pF		5% 50V
1-183-133-00	s	CAP, CHIP CERAMIC	470pF		5% 50V
1-183-137-00	s	CAP, CHIP CERAMIC	680pF		5% 50V
1-183-141-00	s	CAP, CHIP CERAMIC	1000pF		5% 50V
1-183-145-00	s	CAP, CHIP CERAMIC	1500pF		10% 50V
1-184-161-11	s	CAP, CHIP CERAMIC	2200pF		10% 100V
1-184-182-11	s	CAP, CHIP CERAMIC	3300pF		10% 100V
1-183-017-00	s	CAP, CHIP CERAMIC	4700pF		10% 50V
1-183-019-00	s	CAP, CHIP CERAMIC	6800pF		10% 50V
1-184-232-11	s	CAP, CHIP CERAMIC	0.01		20% 100V
1-183-023-00	s	CAP, CHIP CERAMIC	0.015		10% 50V
1-183-034-00	s	CAP, CHIP CERAMIC	0.033		50V
1-183-035-00	s	CAP, CHIP CERAMIC	0.047		50V
1-183-036-00	s	CAP, CHIP CERAMIC	0.068		50V
1-183-038-00	s	CAP, CHIP CERAMIC	0.1		50V

RESISTOR, CHIP

Part No. SP Description

1-216-295-00	s	RES, CHIP	0		5% 1/10W
1-216-298-00	s	RES, CHIP	2.2		5% 1/10W
1-216-302-00	s	RES, CHIP	2.7		5% 1/10W
1-216-304-11	s	RES, CHIP	3.3		5% 1/10W
1-216-306-11	s	RES, CHIP	3.9		5% 1/10W
1-216-308-00	s	RES, CHIP	4.7		5% 1/10W
1-216-309-00	s	RES, CHIP	5.6		5% 1/10W
1-216-311-00	s	RES, CHIP	6.8		5% 1/10W
1-216-313-00	s	RES, CHIP	8.2		5% 1/10W
1-216-001-00	s	RES, CHIP	10		5% 1/10W
1-216-003-11	s	RES, CHIP	12		5% 1/10W
1-216-005-00	s	RES, CHIP	15		5% 1/10W
1-216-007-00	s	RES, CHIP	18		5% 1/10W
1-216-009-00	s	RES, CHIP	22		5% 1/10W
1-216-011-00	s	RES, CHIP	27		5% 1/10W
1-216-013-00	s	RES, CHIP	33		5% 1/10W
1-216-015-00	s	RES, CHIP	39		5% 1/10W
1-216-017-00	s	RES, CHIP	47		5% 1/10W
1-216-019-00	s	RES, CHIP	56		5% 1/10W
1-216-021-00	s	RES, CHIP	68		5% 1/10W
1-216-023-00	s	RES, CHIP	82		5% 1/10W
1-216-025-00	s	RES, CHIP	100		5% 1/10W
1-216-027-00	s	RES, CHIP	120		5% 1/10W
1-216-029-00	s	RES, CHIP	150		5% 1/10W
1-216-031-00	s	RES, CHIP	180		5% 1/10W
1-216-033-00	s	RES, CHIP	220		5% 1/10W
1-216-035-00	s	RES, CHIP	270		5% 1/10W
1-216-037-00	s	RES, CHIP	330		5% 1/10W
1-216-039-00	s	RES, CHIP	390		5% 1/10W
1-216-041-00	s	RES, CHIP	470		5% 1/10W
1-216-043-00	s	RES, CHIP	560		5% 1/10W
1-216-045-00	s	RES, CHIP	680		5% 1/10W
1-216-047-00	s	RES, CHIP	820		5% 1/10W
1-216-049-00	s	RES, CHIP	1k		5% 1/10W
1-216-051-00	s	RES, CHIP	1.2k		5% 1/10W
1-216-053-00	s	RES, CHIP	1.5k		5% 1/10W
1-216-055-00	s	RES, CHIP	1.8k		5% 1/10W
1-216-057-00	s	RES, CHIP	2.2k		5% 1/10W
1-216-059-00	s	RES, CHIP	2.7k		5% 1/10W
1-216-061-00	s	RES, CHIP	3.3k		5% 1/10W
1-216-063-00	s	RES, CHIP	3.9k		5% 1/10W
1-216-065-00	s	RES, CHIP	4.7k		5% 1/10W
1-216-067-00	s	RES, CHIP	5.6k		5% 1/10W
1-216-069-00	s	RES, CHIP	6.8k		5% 1/10W
1-216-071-00	s	RES, CHIP	8.2k		5% 1/10W
1-216-073-00	s	RES, CHIP	10k		5% 1/10W
1-216-075-00	s	RES, CHIP	12k		5% 1/10W
1-216-077-00	s	RES, CHIP	15k		5% 1/10W
1-216-079-00	s	RES, CHIP	18k		5% 1/10W
1-216-081-00	s	RES, CHIP	22k		5% 1/10W
1-216-083-00	s	RES, CHIP	27k		5% 1/10W
1-216-085-00	s	RES, CHIP	33k		5% 1/10W
1-216-748-11	s	RES, CHIP	39k		5% 1/10W
1-216-089-00	s	RES, CHIP	47k		5% 1/10W
1-216-091-00	s	RES, CHIP	56k		5% 1/10W

 RESISTOR, CHIP

Part No. SP Description

1-216-093-00 s RES, CHIP 68k 5% 1/10W
 1-216-095-00 s RES, CHIP 82k 5% 1/10W
 1-216-097-00 s RES, CHIP 100k 5% 1/10W
 1-216-099-00 s RES, CHIP 120k 5% 1/10W
 1-216-101-00 s RES, CHIP 150k 5% 1/10W

1-216-103-00 s RES, CHIP 180k 5% 1/10W
 1-216-105-00 s RES, CHIP 220k 5% 1/10W
 1-216-107-00 s RES, CHIP 270k 5% 1/10W
 1-216-108-00 s RES, CHIP 330k 5% 1/10W
 1-216-111-00 s RES, CHIP 390k 5% 1/10W

1-216-113-00 s RES, CHIP 470k 5% 1/10W
 1-216-115-00 s RES, CHIP 560k 5% 1/10W
 1-216-117-00 s RES, CHIP 680k 5% 1/10W
 1-216-119-00 s RES, CHIP 820k 5% 1/10W
 1-216-121-00 s RES, CHIP 1.0M 5% 1/10W

1-216-123-11 s RES, CHIP 1.2M 5% 1/10W
 1-216-125-00 s RES, CHIP 1.5M 5% 1/10W
 1-216-127-11 s RES, CHIP 1.8M 5% 1/10W
 1-216-129-00 s RES, CHIP 2.2M 5% 1/10W
 1-216-131-11 s RES, CHIP 2.7M 5% 1/10W

1-216-133-00 s RES, CHIP 3.3M 5% 1/10W